


de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning


Druckdifferenzfühler
Pressure sensor
Sonde de pression différentielle
Differenstryckgivare
Drukverschilopnemer
Sonda di pressione differenziale
Paine-eroanturit
Sondas de diferencia de presión
Trykdifferensføler

QBM63/...


QBM64/...

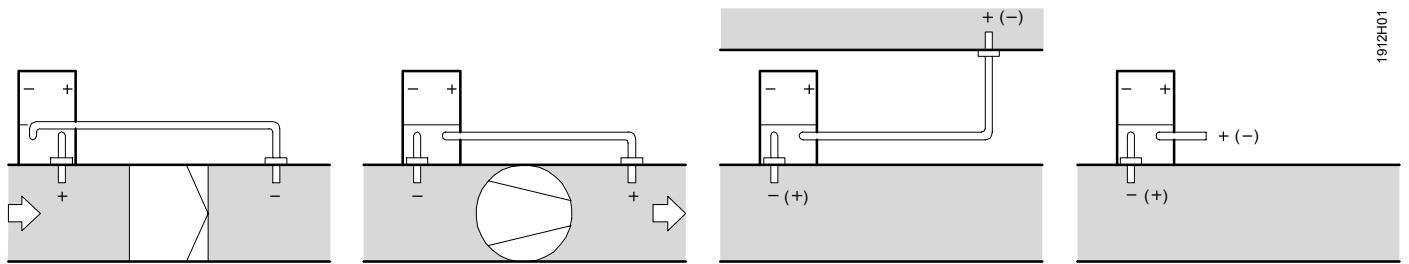


1912H01

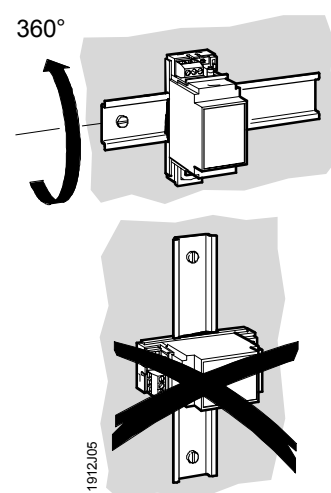

1912J05

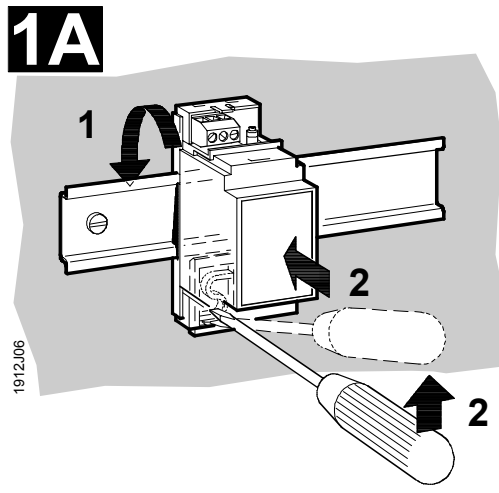


1912J06

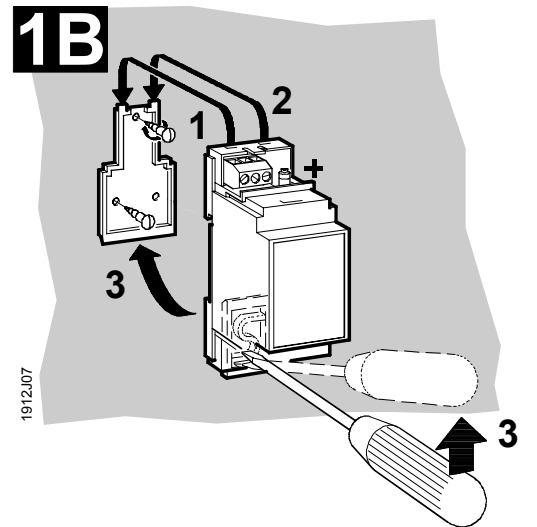


1912J07

4 669 1975 0

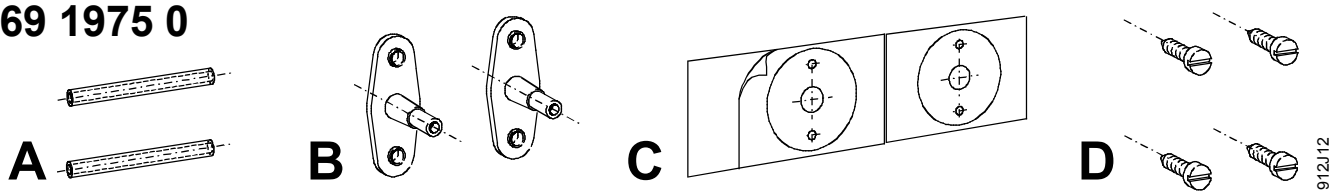

1912J12

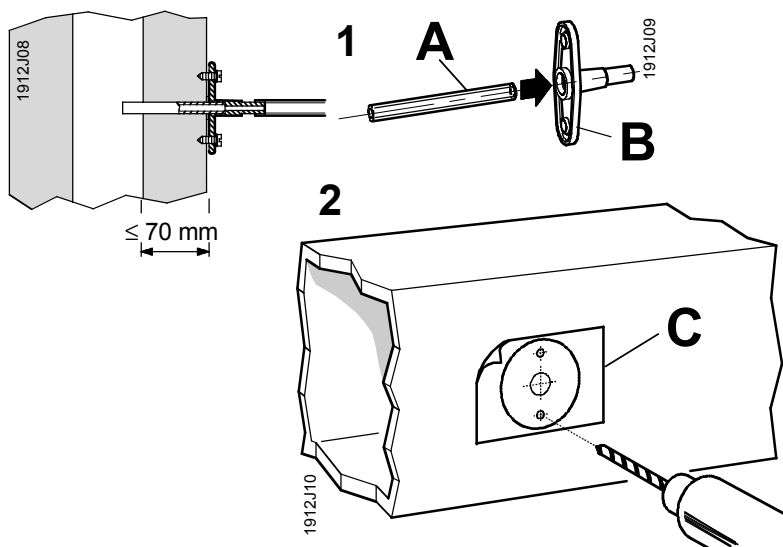


1912J10

1912J09

3

1912J11

QBM6... + ARG62

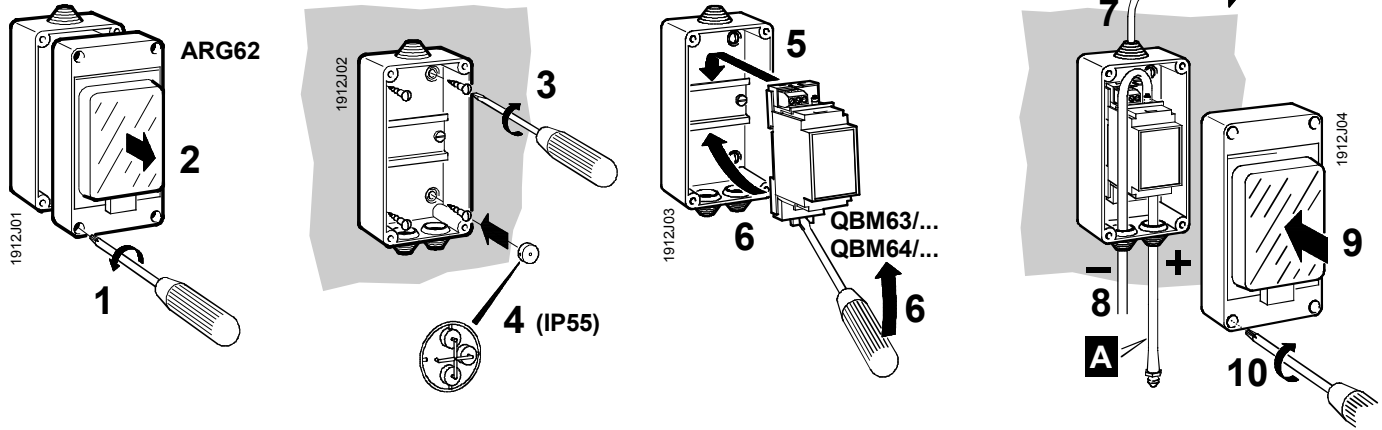

Maßbilder
Dimensions


Encombremets
Måttuppgifter

Maatschetsen
Ingombri


Mittapiirrokset
Dimensiones

Ytre mål
Målskitser

QBM63/..., QBM64/...

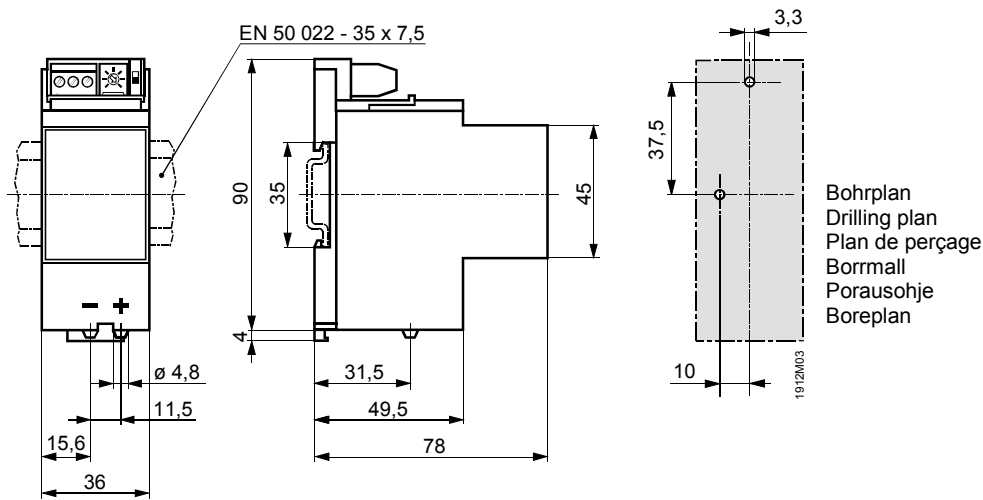

ARG62

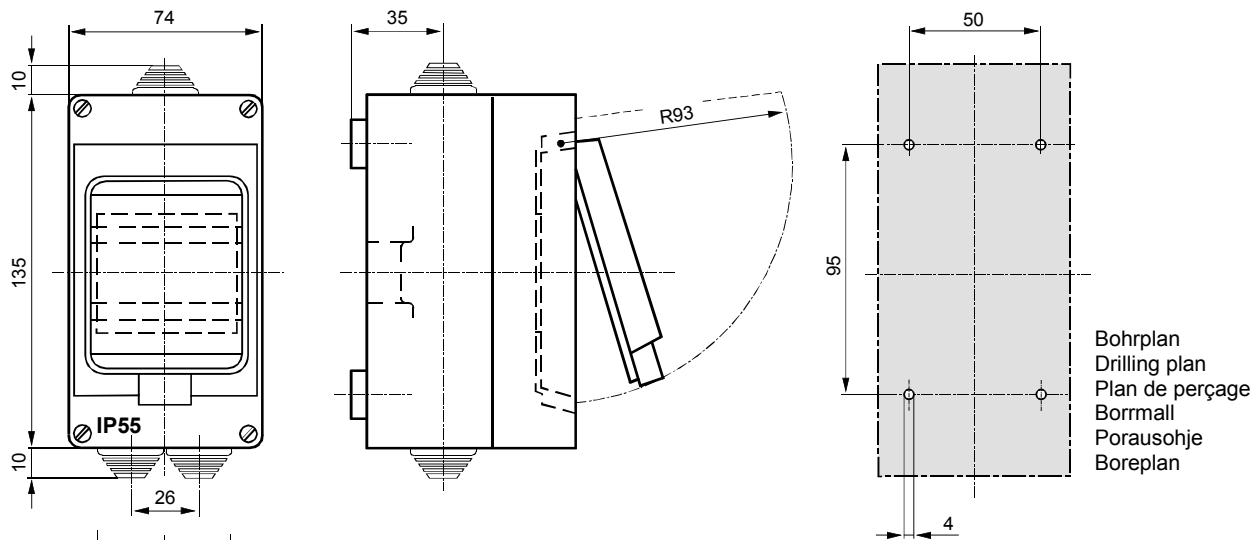

Maße in mm
Dimensions in mm
Dimensions en mm
Mått i mm
Afmetingen in mm
Dimensioni in mm
Mitat mm
Dimensiones en mm
Dimensioner i mm
Mål i mm