

de Montageanleitung
en Mounting instruction
fr Instruction de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzione di montaggio
fi Asennus ohjeet
es Instrucción de montaje
da Monteringsvejledning

Raumtemperaturfühler
Room temperature sensor
Sonde de température ambiante
Rumtemperaturgivare
Ruimtemperaturopnemer
Sonda di temperatura ambiente
Lämpötilan anturi huoneasennusta varten
Sonda de temperatura de ambiente
Rumtemperaturføleren


QAA100

QAA160


QAA170











QAA100

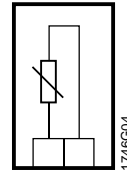

QAA160

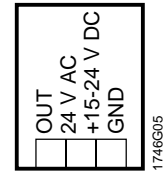


QAA170

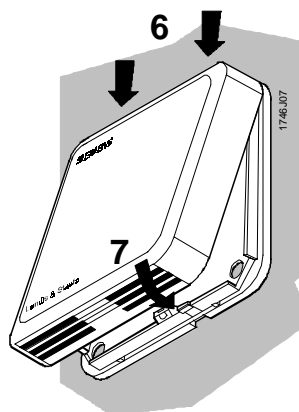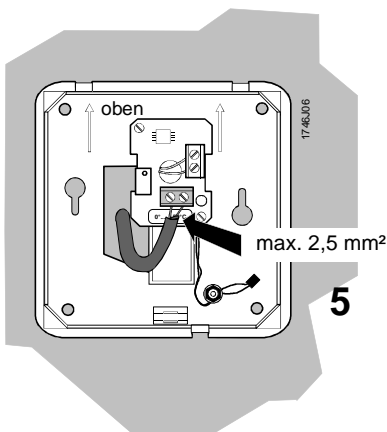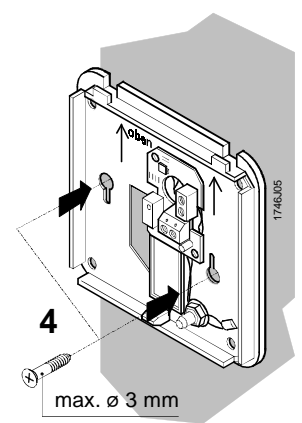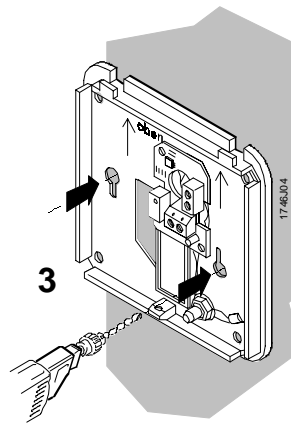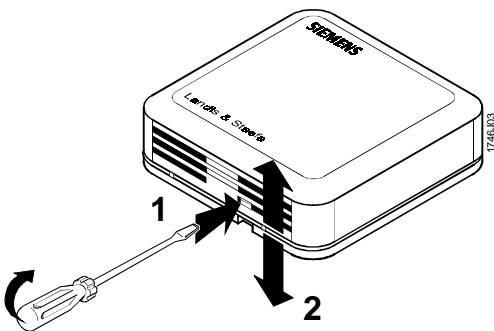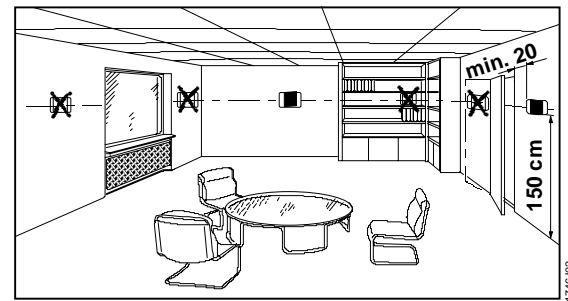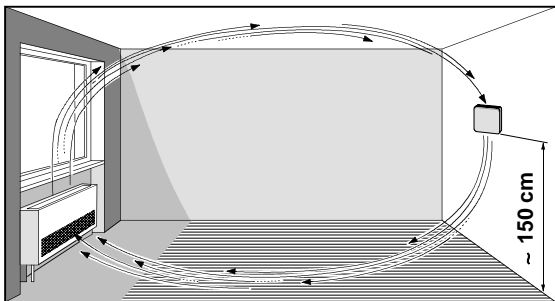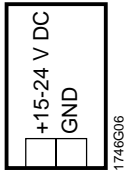

de Maßbilder
en Dimensions
fr Encombremnts

sv Måttuppgifter
nl Maatschets
it Ingombri

fi Mittapiirros
es Dimensiones
da Målskitse

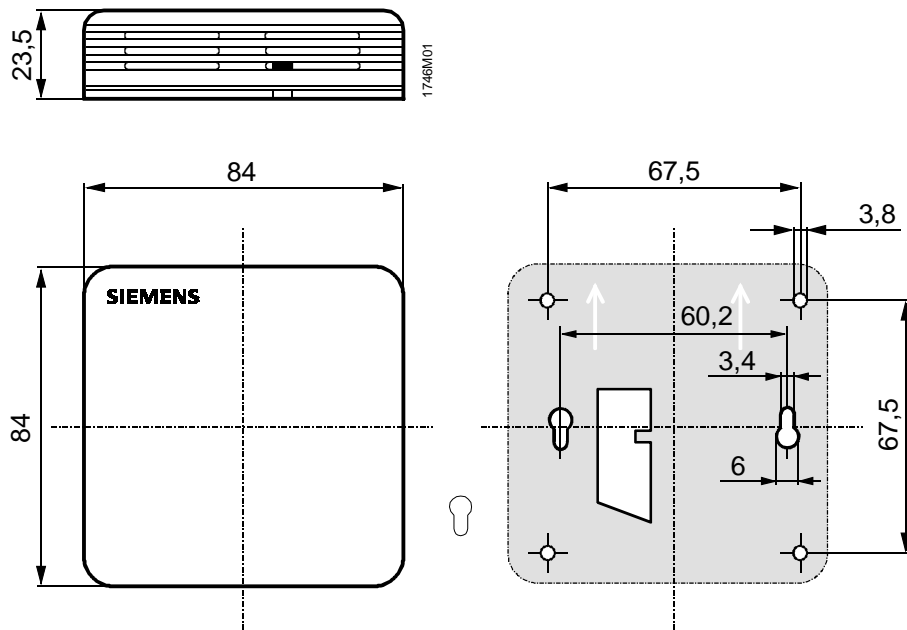

Maße in mm
Dimensions in mm
Dimensions en mm
Mått i mm
Maten in mm
Dimensioni in mm
Mitat mm
Dimensiones en mm
Mål i mm