

de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning

Thermo-Sicherung
Temperature fuse
Disjoncteur thermique
Smältsäkring
Thermische beveiliging
Fusibile
Lämpösulake
Fusible de temperatura
Termosikring


ASK79.2

A

Lieferumfang
Deliverables
Contenu

Leverans
Leveringsomvang
Contenuto

Toimituslaajuus
Contenido
Leverancens omfang

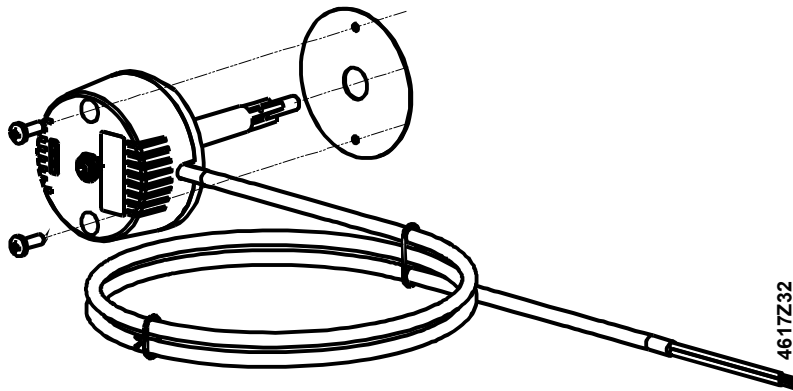

Bohrlehre
Drilling template
Gabarit de perçage
Borrmall
Boorplan
Dima di foratura
Porausmalli
Placa de fijación
Borelære


 **AC 24 V / DC 24...48 V only**

B

Montage
Mounting
Montage

Montering
Montage
Montaggio

Asennus
Montaje
Montering

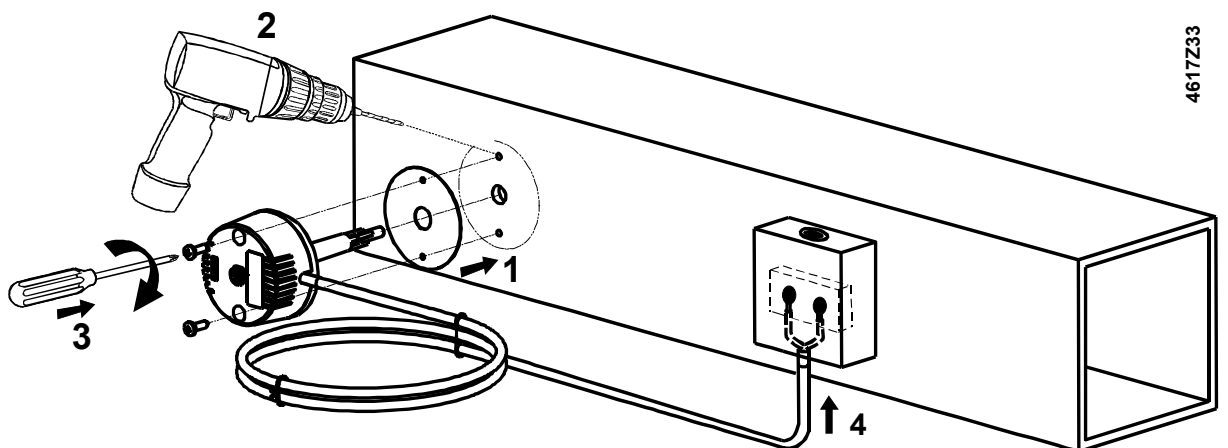


C

Massbild
Dimensions
Encombremnts

Måttuppgift
Maatschets
Ingombri

Mittapiirros
Dimensiones
Målskitse

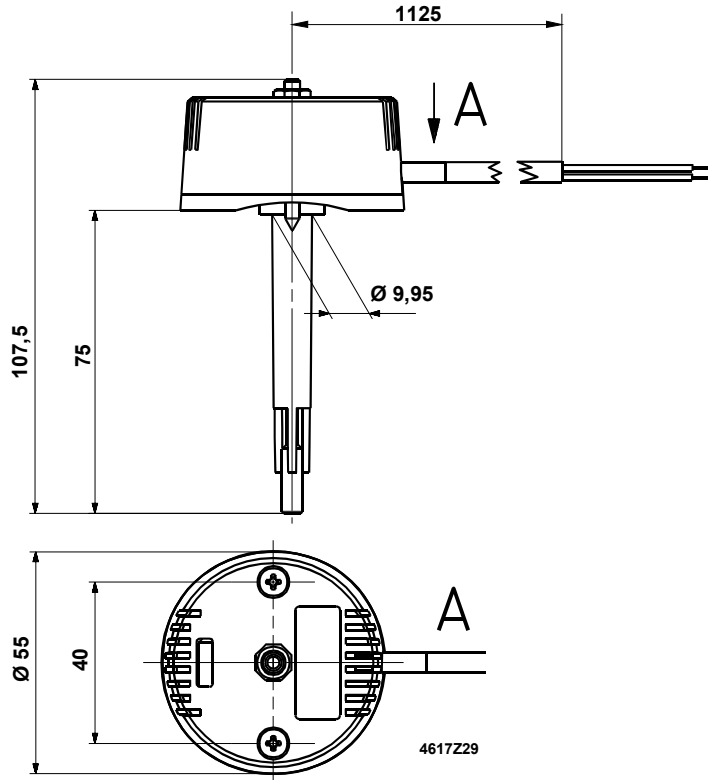


Masse in mm
Dimensions in mm
Dimensions en mm
Mått i mm
Afmetingen in mm
Dimensioni in mm
Mitat mm
Dimensiones en mm
Mål i mm

D

Geräteschaltplan
Wiring diagram
Schéma de raccordement

Kopplingscheman
Aansluitschema
Schema di collegamento

Kytkäntäkaaviot
Conexionado eléctrico
Apparatdiagram

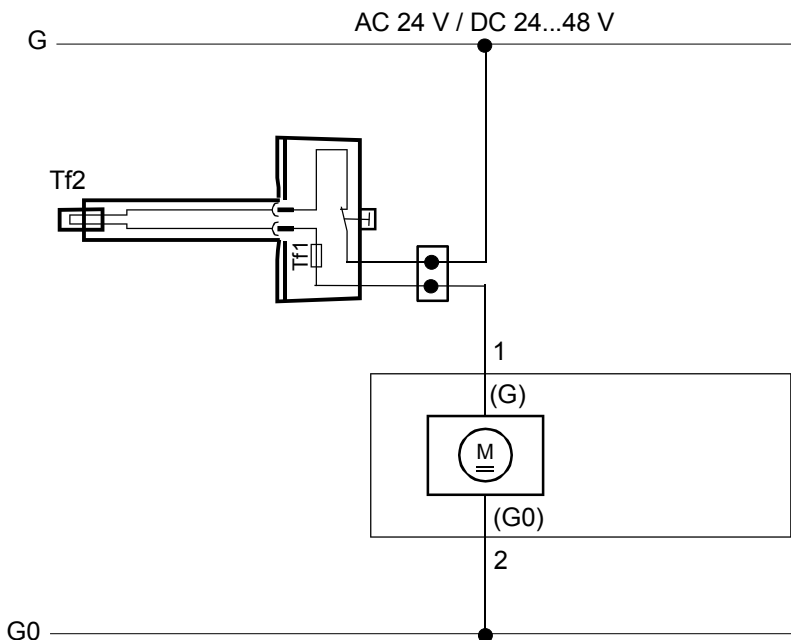

AC 24 V
DC 24...48 V
(SELV/PELV)
Zweipunkt-Steuerung
Two-position control
Commande tout ou rien
Tvåläges styrning
Tweepuntsbesturing
Comando a 2 posizioni
Kaksipistehjaus
Control a 2 puntos