



**de** Montageanleitung  
**en** Mounting instructions  
**fr** Instructions de montage  
**sv** Monteringsinstruktion  
**nl** Montage-handleiding  
**it** Istruzioni di montaggio  
**fi** Asennusohje  
**es** Instrucciones de montaje  
**da** Monteringsvejledning  
**pl** Instrukcja montażu  
**cz** Montážní návod  
**hu** Szerelési útmutató  
**el** Οδηγίες εγκατάστασης  
**zh** 安裝指導

**Stellantriebe**  
**Actuators**  
**Servomoteur**  
**Ställdon**  
**Servomotoren**  
**Servocomandi**  
**Toimimoottorit**  
**Actuadores**  
**Motorer**  
**Siłowniki**  
**Pohony**  
**Motorok**  
**Κινητήρες**  
**执行器**

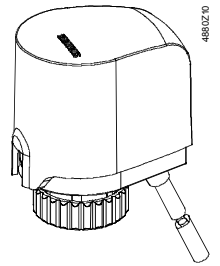


**STS61...**


**1**

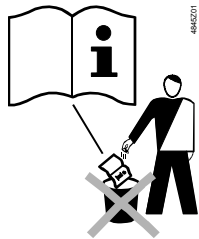

**2**

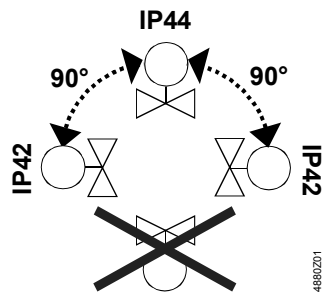


**3**

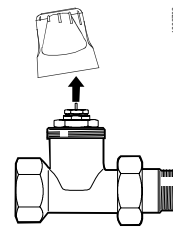

- Siemens: VD1...CLC, VPD..., VPE..., VDN..., VEN..., VUN..., V...P469, 599...
- Honeywell
- MNG
- Cazzaniga,
- Heimeier
- TA (TBV-C),
- Oventrop
- Beulco new
- Junkers


**3**

**AV..**

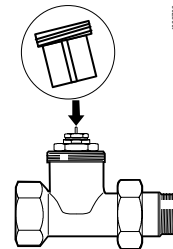



- AV51 Beulco M30x1.0
- AV52 Comap
- AV53 Danfoss RA-N (RA2000)
- AV54 Danfoss RAVL
- AV55 Danfoss RAV
- AV56 Giacomini
- AV57 Herz
- AV58 Oventrop M30x1.0
- AV59 Vaillant
- AV60 TA (TBV-C)
- AV61 Markaryd

**4**



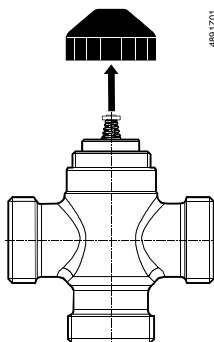


- VVP47...
- VXP47...
- VMP47...




**5**

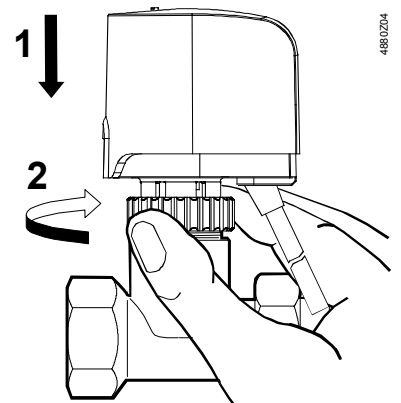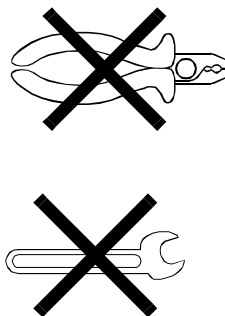




# 6

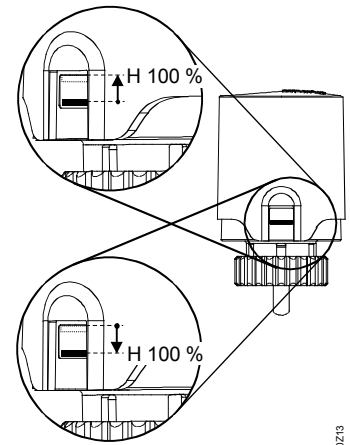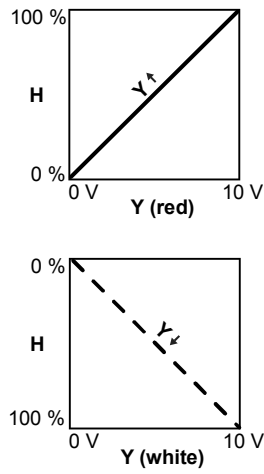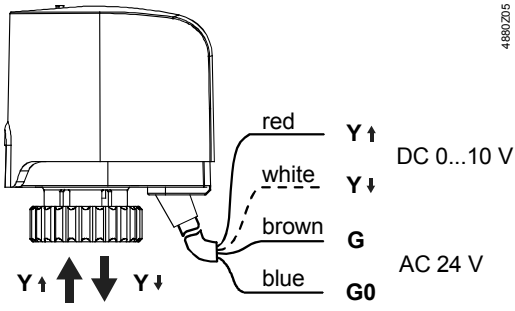

# 7 a

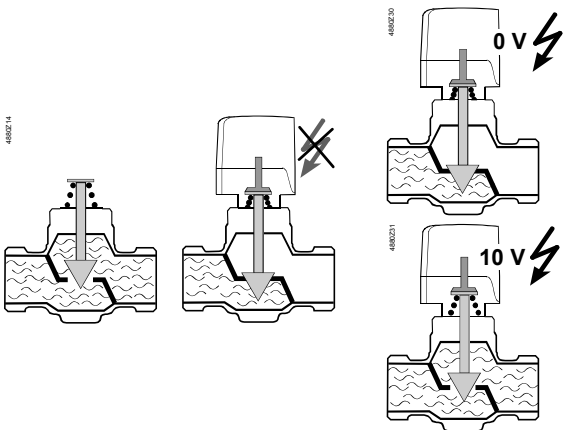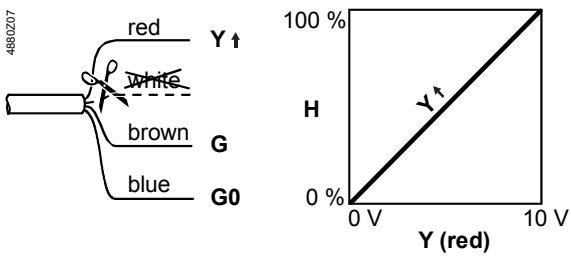 

# 7 b

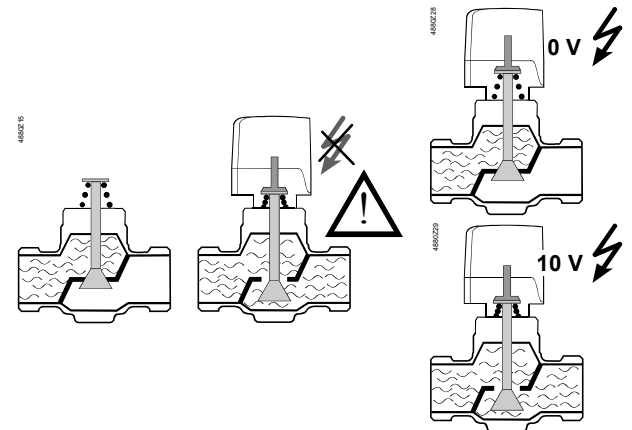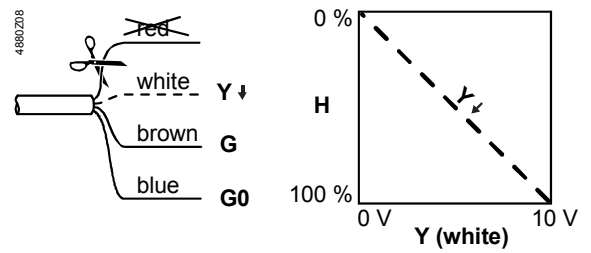 

# 8

