

FD20

Detection system

Contents

Section 1-4: Manual FD20-1/3

Section 5-7: Manual FD20-2/3

Section 8-10: Manual FD20-3/3

1 Overview

FD20 Detector system	Equipment overview	008164
FD20 Detector system	List of compatibility	008331

2 Point detectors

FDOOT241-9, FDO241, FDT241 Automatic fire detectors	Data sheet	007005
FDOOT221-9, FDO221, FDT221 Automatic fire detectors	Data sheet	007850
FDOOT241-8 Multi-sensor smoke detector	Data sheet	008141
FDO..., FDOOT..., FDT..., FDB... Colored detectors, bases and base attachments	Data sheet	009409
FDOOTC241 Multi sensor fire detector	Data sheet	A6V10217810
FDOOT221, FDOOT241-A3, FDOOT241-A4, FDOOT241-8, FDOOT241-9, FDOOT241-A9, FDO241, FDO221, FDT241, FDT221 Automatic fire detector	Technical manual	007004
FDOOTC241 Neural fire detector	Technical manual	A6V10209291

3 Special detectors

FDA221, FDA241 Aspirating smoke detector	Data sheet	A6V10331032
FDF221-9, FDF241-9 Infrared flame detector	Data sheet	007012
FDL241-9 Linear smoke detector	Data sheet	007017
FDBZ292 Air sampling smoke detection kit	Data sheet	009728
FDOOT271 Radio fire detector, FDCW241 Radio gateway	Data sheet	A6V10271323
VLF-250, VLF-500 LaserFOCUS	Data sheet	A6V10221433
FDF221-9, FDF241-9 Flame detector	Technical manual	007011
FDL241-9 Linear smoke detector	Technical manual	007016
FDCW221 Radio Gateway, DOW1171 Radio Smoke Detector, SMF121 Manual Call Point, SMF6120 Radio Base	Technical manual	009865
FDA221, FDA241 Aspirating smoke detector	Technical manual	A6V10334410
FDOOT271 Radio fire detector	Technical manual	A6V10227635
FXS2055 Asyst Tool	Technical manual	A6V10340094
FXS2061 SWING Tool	Technical manual	A6V10227643
DOW1171 Radio fire detector, DBW1171 Base	Installation	A6V10336739
FDFB291 Base for flame detector	Installation	007984
FDF221-9, FDF241-9 Flame detector	Installation	008121
FDBZ292 Air sampling smoke detection kit	Installation	009726
FDA221, FDA241 Aspirating smoke detector	Installation	A6V10345654
FDOOT271 Radio fire detector, FDB271 detector base	Installation	A6V10227637
FDL241-9 Linear smoke detector	Installation / Commissioning	A6V10332811
ASD Pipe system	Planning, Mounting	A6V10334435
FXS2051 ASD Configuration Tool	Installation, Operation Manual, Configuration	A6V10332759
FDF221-9; FDF241-9 Flame detector	Commissioning	A6V10299652
FDL241-9 Linear smoke detector	Commissioning	008254
FDLU291 Adjustment tester		
FXS2055 ASD Asyst Tool	Commissioning	A6V10344957
SWING Radio fire detection system	Planning	A6V10227631
TUSB3410 based devices Driver	Deinstallation/Installation	A6V10348930

4 Manual call points

FDM221, FDM223, FDM224 Manual call point	Data sheet	007001
FDM223H, FDM224H Manual call point 'Heavy Duty'	Data sheet	008345
FDM225, FDM226 Manual call point	Data sheet	009023
FDM221, FDM223, FDM224, FDM223H, FDM224H Manual call point	Technical manual	007002
FDM225, FDM226 Manual call point	Technical manual	009757
FDCW221 Radio gateway, DOW1171 Radio Smoke Detector, SMF121 Manual Call Point, SMF6120 Radio Base	Technical manual	009865
FDM233, FDM234 Manual call point	Technical manual	A6V10374017
FDM243H Manual call point	Technical manual	A6V10374021
FDM231-RP Manual call point	Technical manual	A6V10404679
FDM273 Radio manual call point	Technical manual	A6V10347733
FDMH291 Housing FDME221, MTE320C, DMA1101, DMA1131, DMA1151 Call point unit	Installation	007904
FDMH292-R Back box for manual call point	Installation	008615
FDME223, FDME224 Switching unit for manual call point		
FDMH293 Back box manual call point	Installation	007905
FDME223, FDME224 Switching unit for manual call point		
FDM225-xx, FDM226-xx Manual call point	Installation	009371
FDM233, FDM234 Manual call point, FDMH294-R Housing for manual call point	Installation	A6V10374019
FDM243H Manual call point	Installation	A6V10374023
FDM231-RP Manual call point	Installation	A6V10404670
FDM273 Radio manual call point	Installation	A6V10347888

5 Line devices

FDCI222 Input module	Data sheet	007024
FDCIO222, FDCIO224 Input/output modules		
FDCIO223 Transponder	Data sheet	009168
FDCL221 Line separator	Data sheet	007065
FDCW221, DOW1171, SMF6120, SMF121 Radio fire detection system	Data sheet	010087
FDV241 Video fire controller	Data sheet	A6V10207909
FDCL221-M Multi line separator module	Data sheet	A6V10230308
FDCI221 Input module	Data sheet	A6V10202196
FDCIO221 Input/output module		
FDOOT271 Radio fire detector, FDCW241 Radio gateway	Data sheet	A6V10271323
FDCI222 Input module	Technical manual	007023
FDCIO222, FDCIO224 Input/output module		
FDCIO223 Input/output module (transponder)	Technical manual	009122
FDCL221 Line separator	Technical manual	007063
FDCW221 Radio Gateway, DOW1171 Radio Smoke Detector, SMF121 Manual Call Point, SMF6120 Radio Base	Technical manual	009865
FDCL221-M Multi line separator module	Technical manual	A6V10224006
FDCI221 Input module	Technical manual	A6V10211122
FDCIO221 Input/output module		
FDCW241 Radio gateway	Technical manual	A6V10227639
FDCI222 Input module	Installation	008175
FDCH221 Housing		
FDCIO222, FDCIO224 Input/output module	Installation	008176
FDCH221 Housing		
FDCIO223 Input/output module (transponder)	Installation	009124
FDCH221 Housing		
FDCL221 Line separator	Installation	008025
FDCL221-M Multi line separator module	Installation	A6V10224008
FDCH221 Housing		
FDCI221 Input module	Installation	A6V10212086
FDCIO221 Input/output module		
FDCH221 Housing		
FDCW221 Radio gateway	Installation	A6V10336734
FDCW241 Radio gateway	Installation	A6V10227641
FDV241 Video fire controller	Commissioning	A6V10092464

6 Alarm devices

FDSB221 Sounder interbase, FDSB229 Sounder beacon interbase	Data sheet	A6V10277376
FDSB291, FDSB292 Sounder base FDS221-R, FDS221-W Alarm sounder	Data sheet	007026
FDS229-R, FDS229-A Alarm with supplementary optical indication	Data sheet	A6V10067771
FDAI91, FDAI92, FDAI93 Alarm indicators	Data sheet	A6V10276520
FDCAI221 Addressable alarm indicator	Data sheet	A6V10244934
FDS221 Alarm sounder	Technical manual	008109
FDSB291 Sounder base	Technical manual	007025
FDSB292 Sounder base	Technical manual	009769
FDS229-R, FDS229-A Alarm with supplementary optical indication	Technical manual	010095
FDCAI221 Addressable alarm indicator	Technical manual	A6V10258110
FDSB221 Sounder interbase, FDSB229 Sounder beacon interbase	Technical manual	A6V10320090
FDSB221 Sounder interbase, FDSB229 Sounder beacon interbase	Installation	A6V10320092
FDSB291, FDSB292 Sounder base	Installation	008114
FDS221 Alarm sounder	Installation	008168
FDS229 Alarm sounder beacon with supplementary optical indication	Installation	010096
FDAI91, FDAI92, FDAI93 Alarm indicators	Installation	A6V10257736
FDCAI221 Addressable alarm indicator	Installation	A6V10258105

7 Detector bases and accessories

FDB221, FDB222, FDB221-AA, FDB201, FDB202, FDB201-AA Detector bases and accessories	Data sheet	007775
FDB299 Base adapter; FDUD290 Removing tool for base adapter	Installation	A6V10301448
FDB241 Base adapter, FDUD290 Removing tool for base adapter	Installation	A6V10301452
FDB201, FDB201-AA, FDB202, FDB221, FDB221-AA, FDB222 Detector base FDB291 Base attachment FDBZ291 Designation plate FDX291 Dummy detector	Installation	A6V10208546
FDB293 Base attachment humid DBZ1193A Detector designation plate DBZ1194 Protective cage FDBZ294 EMC-Protective cage	Installation	A6V10208550
FDBZ293 Detector locking device	Installation	A6V10208552
FDB281 Base adapter	Installation	008116
FDBH291 Detector heating	Installation	008115
FDZ291 Detector dust cap	Installation	008117
FDB295 Base attachment wet DBZ1193A Detector designation plate DBZ1194 Protective cage FDBZ294 EMC-protective cage	Installation	A6V10331076
FDBZ295 Sealing element	Installation	A6V10208532

8 Ex-protected devices

SB2, SB3 Shunt Zener Diode Barriers	Data sheet	001222
DT1101A-Ex, DT1102A-Ex, DO1101A-Ex Automatic fire detectors for explosion-hazard area of zones 1 and 2	Data sheet	001469
DF1101-Ex Infrared flame detector for explosion-hazard areas of zone 1 and 2	Data sheet	001744
DM1103(Ex), DM1104(Ex) Manual call points collective/SynoLINE600 for explosion-hazard areas of zones 1 and 2	Data sheet	A6V10236643
FDAI92-Ex, FDAI93-Ex Alarm indicators	Data sheet	A6V10276518
DO1101A-Ex, DT1101A-Ex, DT1102A-Ex Automatic fire detectors for explosion-hazard area of zones 1 and 2	Technical manual	1485
DF1191, DF1192, DF1192 (UL/ULC), DF1101-Ex, DF1101-Ex (UL/ULC), DF1151-Ex Infrared flame detectors	Technical manual	1673
SB2, SB3 Shunt Zener Diode Barriers	Installation	1227
FDAI92EX, FDAI93EX Alarm indicators AI330 Adapter frame DCA1191 Surface-mounted housing DJZ1193 Indicator housing, incl. washer	Installation	A6V10260486
DF11xx(-Ex) Infrared flame detectors (for explosion-hazard areas of zone 1 and 2)	Commissioning	1677

9 Service devices

FDUD291, FDUD292, FDUD293, FDUL221, RE6, RE6T, RE10, FDUM291, FDUM292 Test equipment and accessories	Data sheet	007228
RE7T Solo461 Heat detector tester kit	Data sheet	A6V10252901
RE8ST Testifire 1001-045 ST test kit, RE8STCO Testifire 2001-045 STCO test kit	Data sheet	A6V10397718
FDUZ221 MCL USB adapter	Data sheet	A6V10084589
FDUZ227 MCL USB adapter (radio)	Data sheet	A6V10355605
LE3 Stabex HF Test lamps	Data sheet	000252
FDUD292 Detector exchanger and tester	Operation	007227
FDUD293 Intelligent detector tester	Operation	009718
FDUL221 Line tester	Operation	008250
FDUL221 Line tester – operating instructions for electricians	Operation for electricians	A6V10395483
LE3 Test lamp	Operation	000257
RE7T Solo461 heat detector tester kit	Operation	A6V10254740
DZW1171 Radio test set	Operation	004446
RE7T-C Solo725 charger for RE7T-B	Operation	A6V10260320
RadioSpy	Operation	A6V10229812
FDB241 Base adapter, FDUD290 Removing tool for base adapter	Installation	A6V10301452
FDB299 Base adapter, FDUD290 Removing tool for base adapter	Installation	A6V10301448
FDUZ227 MCL-USB adapter (radio)	Installation	A6V10347735
FDUZ221 MCL USB-adapter	Installation	009854
RadioSpy	Installation	A6V10217915
RE8ST Testifire 1001-045 ST test kit, RE8STCO Testifire 2001-045 STCO test kit	Installation	A6V10387053

10 Applications

FD20 Detector system	Acceptance test fire (Guideline)	009977
FD20 Detector system	Application guideline	010030
FD20 Modernizing fire detection installations with multiple protocol detectors	Technical manual	A6V10323158