






## en Operating instructions

### RDH10

The RDH10 is a room thermostat that allows you to set the desired room temperature (setpoint) at the time you want. The unit features an ergonomic setting knob for ease of temperature control.

#### Display

|  |   |
|--|---|
|  | Actual room temperature in °C                               |
|  | The unit is controlling to the selected comfort temperature |
|  | Indicates when there is demand for heat                     |
|  | Replace batteries   |

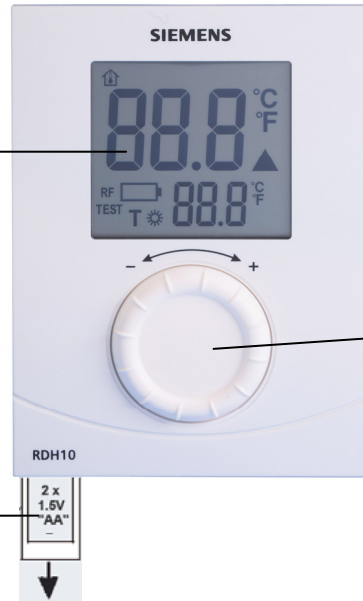


#### Setting knob

Warmer/colder knob for selecting the temperature setpoint


#### Battery compartment

2 alkaline batteries type AA, 1.5 V

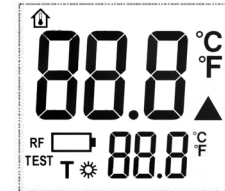


#### Initial power-up

Once batteries are fitted, all symbols will appear on the display as shown for about 2 seconds.




#### Selecting the required temperature

- Turn the setting knob counter-clockwise to decrease the setpoint, or clockwise to increase the setpoint in increments of 0.5 °C
- The required temperature is displayed next to the comfort temperature symbol 

#### Changing the batteries

1. Get 2 new alkaline batteries type AA, 1.5 V.
2. Within 1 minute: Remove the battery holder, then the batteries, insert the new batteries and replace the battery holder.
3. Make certain the old batteries are disposed of properly, in compliance with environmental requirements.



#### Commissioning

- Remove the black transit tabs from the 2 alkaline batteries. Check to see if the battery holder is in its correct position
- If no batteries are inserted, fit 2 alkaline batteries type AA in the battery compartment

#### Energy saving tips without sacrificing comfort

- Never allow room temperatures to exceed 21 °C
- Air out rooms for short periods of time only, but properly, with the windows wide open