

Stückliste / Packing list

AGG3.131 / AGG3.132

			DE	EN
AGG3.131	AGG3.132	Anschluss- bezeichnung ----- Terminal designation	Beschreibung	Description
			RAST5	RAST5
1	10	X3-02	Luftdruckwächter (LP)	Air pressure switch (LP)
1	10	X3-03	Brennerflansch	Burner flange
1	10	X3-04	Spannungsversorgung- Sicherheitskette (L, N, PE - SL)	Power supply- Safety Loop (L, N, PE - SL)
1	10	X3-05	Alarm (AL), Gebläsemotor (M)	Alarm (AL), Fan motor (M)
1	10	X4-02	Zündung (Z)	Ignition (Z)
1	10	X5-01	Gas- / Öldruckwächter-min (Pmin)	Gas / Oil pressure switch-min (Pmin)
1	10	X5-02	Gas- / Öldruckwächter-max (Pmax)	Gas / Oil pressure switch-max (Pmax)
1	10	X5-03	Leistungsregler extern (LR)	Load controller external (LR)
1	10	X6-03	Sicherheitsventil (SV)	Safety valve (SV)
1	10	X7-01	Brennstoffventil (V2)	Fuel valve (V2)
1	10	X7-02	Brennstoffventil (V3)	Fuel valve (V3)
1	10	X8-02	Brennstoffventil (V1)	Fuel valve (V1)
1	10	X8-04	Reset, Betriebsanzeige (B4)	Reset, Operation indicator lamp (B4)
1	10	X9-04	Gasdruckwächter (GP), Ventildichtekontrolle (P LT)	Gas pressure switch (GP), Valve proofing system (P LT)
1	10	X10-05	Flammenfühler ION, QRB..., QRC...	Flame detector ION, QRB..., QRC...
1	10	X10-06	Flammenfühler QRA2... / QRA4... (USA)	Flame detector QRA2... / QRA4... (US)
1	10	X75	Brennstoffzähler	Fuel meter

			RAST3,5	RAST3.5
1	10	X74	5-poliger Stecker 1 x / Frequenzumrichter (VDS)	5-pin connector 1 x / Variable speed drive (VDS)
1	10	X64	5-poliger Stecker 1 x / Reserve	5-pin connector 1 x / Reserve

			RAST2,5	RAST2.5
1	10	X92	Modbus (COM)	Modbus (COM)