

**de** Montageanleitung  
**en** Mounting instructions  
**fr** Instructions de montage  
**sv** Monteringsinstruktion  
**nl** Montage-aanwijzing  
**it** Istruzioni di montaggio  
**fi** Asennusohje  
**es** Instrucciones de montaje

**no** Montasjeanvisning  
**da** Monteringsvejledning  
**pl** Instrukcja montażu  
**cs** Návod k montáži  
**sk** Návod na montáž  
**hu** Telepítési leírás  
**el** Οδηγίες Εγκατάστασης  
**sr** Uputstva za montažu


**hr** Uputstva za montažu  
**sl** Navodila za montažo  
**ro** Instrucțiuni de montare  
**ru** Инструкция по монтажу  
**bg** Инструкция за монтаж  
**tr** Montaj talimatları  
**pt** Instruções de montagem



## QFP910




2732018

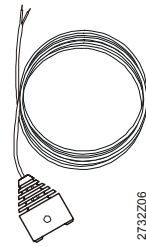


2732206




 
M2702



2701213

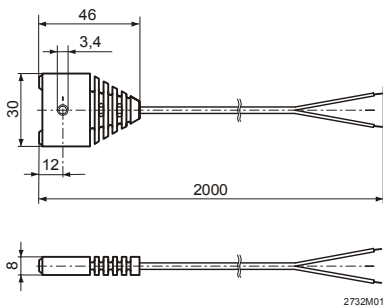


2732M01

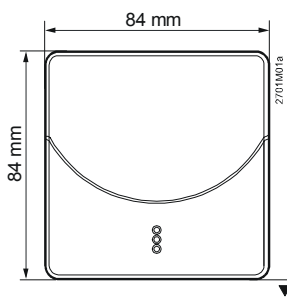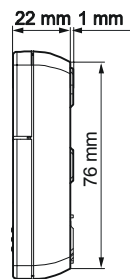


2701M01a



► min 60 mm

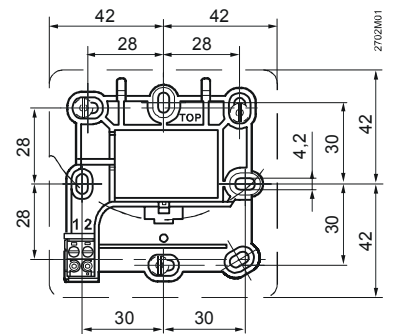

2702M01


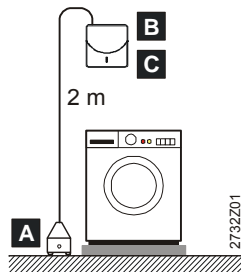


2732Z01

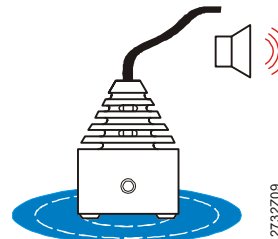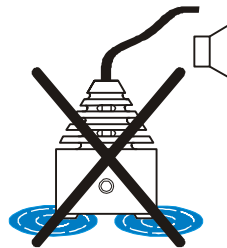


2732Z09


**A**

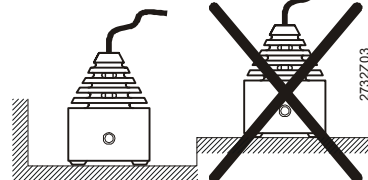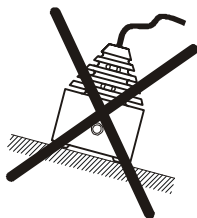



2732Z03

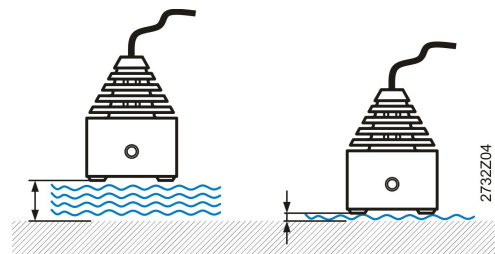

2732Z04

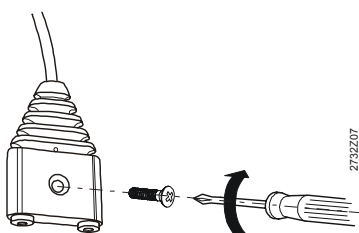

2732Z07

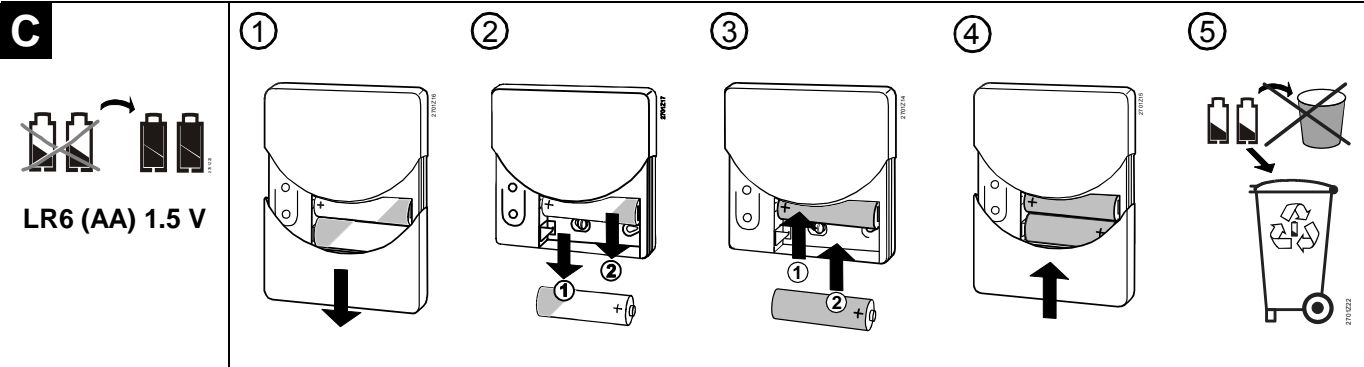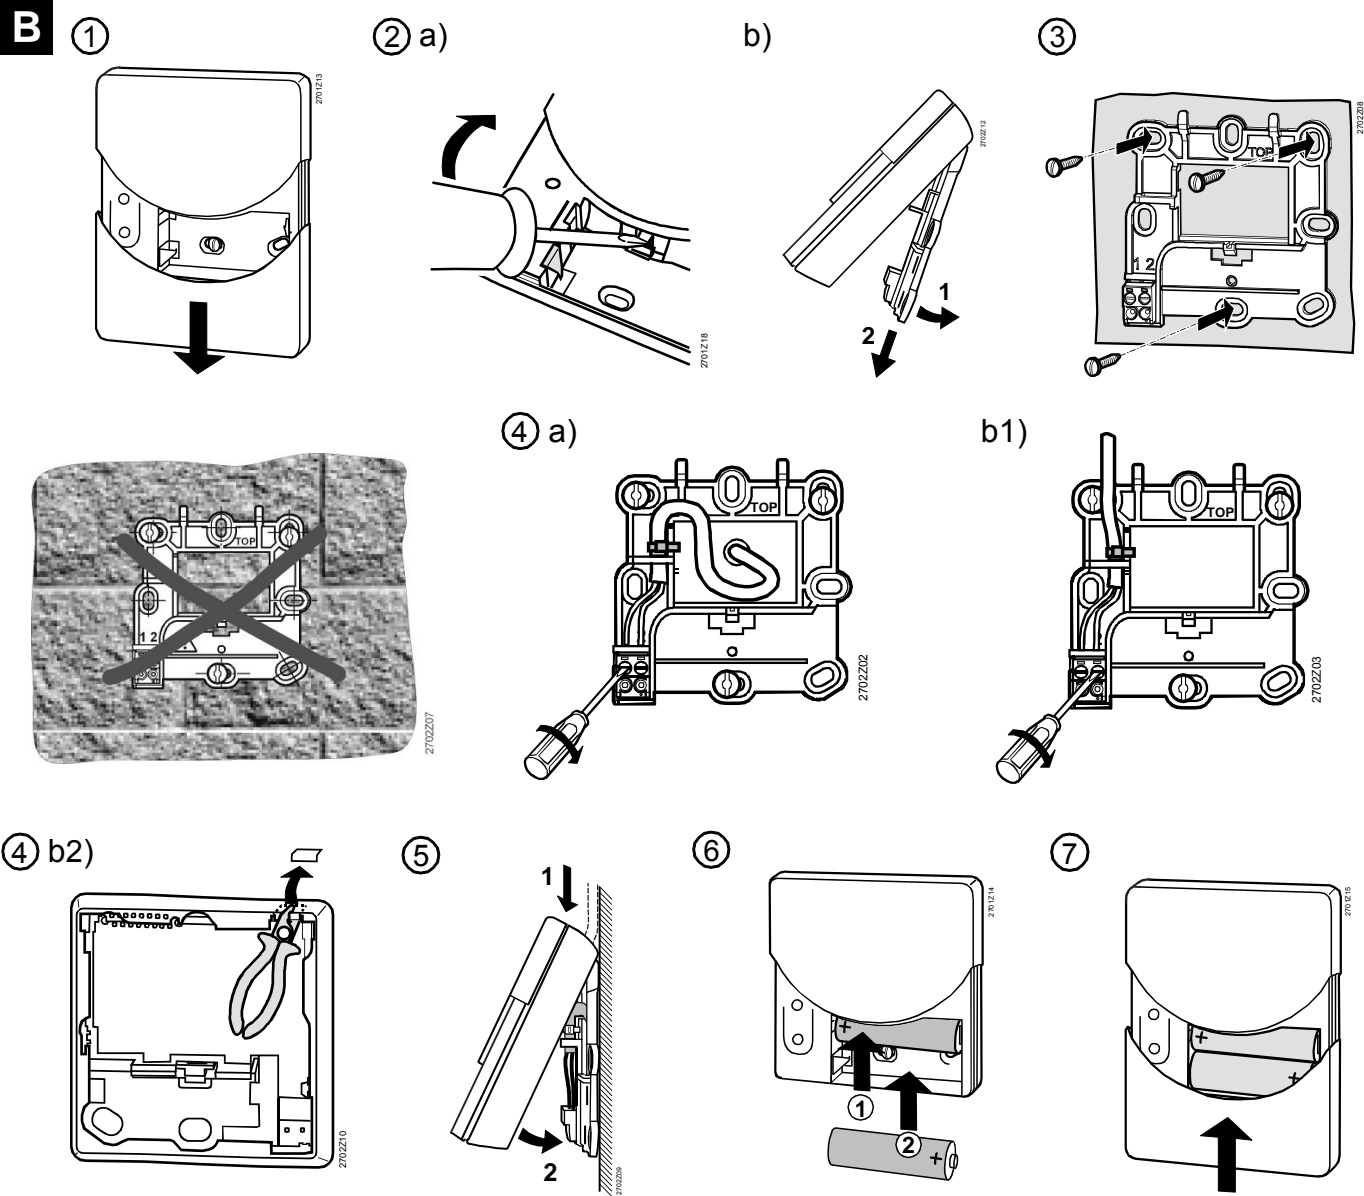

Published by:  
 Siemens Switzerland Ltd.  
 Building Technologies Division  
 International Headquarters  
 Theilerstrasse 1a  
 6300 Zug  
 Switzerland  
 Tel. +41 58-724 24 24  
 www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd 2018,  
 Delivery and technical specifications subject to change  
<https://www.downloads.siemens.com>



868 MHz  
 5 dBm

