


RWD32 Universal Controller
Application 64
Compensation shift

Room temperature control
 Refrigeration solenoid valves

- Control 2 stage digital
- Room temperature control
- Two stage ON / OFF refrigeration cooling
- Outside air compensation of the room temperature .
- Optional day / night set point adjustment .

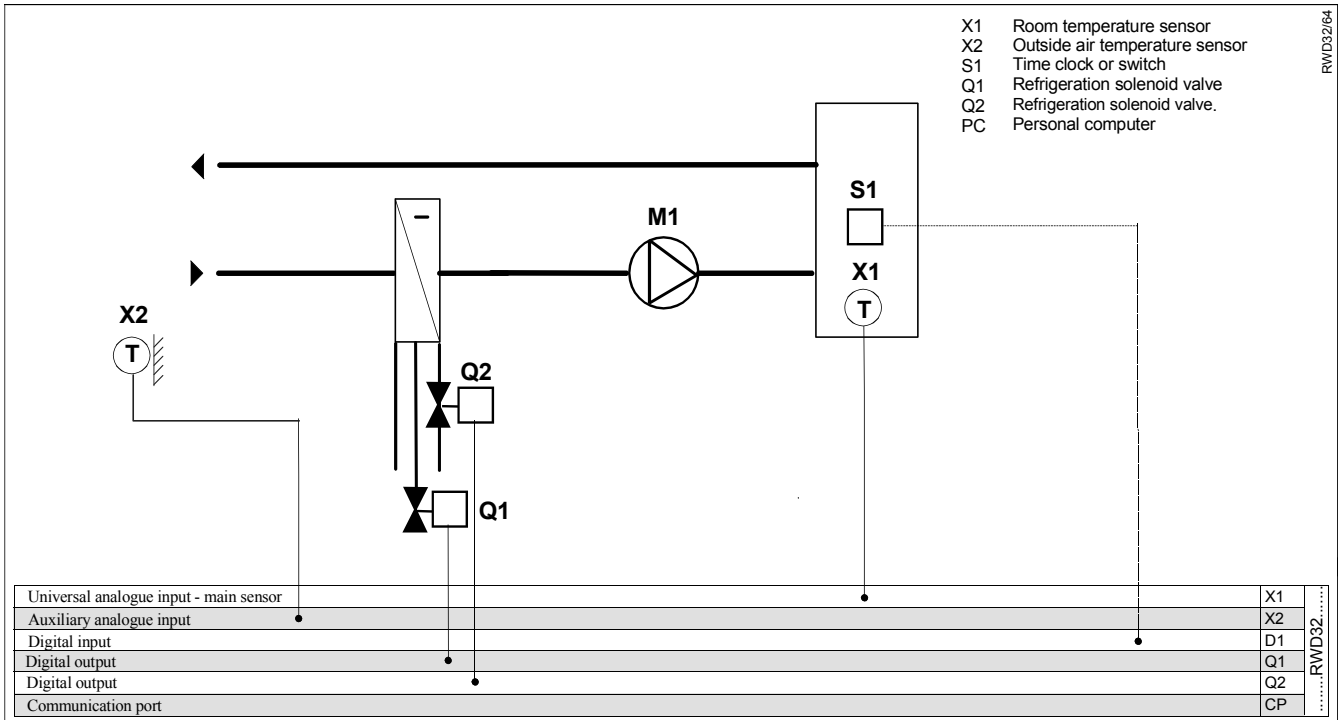

Supplemental features

Control

- Room temperature sensor can be selected as Ni1000, Pt1000, or active sensor.
- Two stage on / off cooling
- Adjustable differential of digital output Q1.
- Adjustable set point of Q1.
- Adjustable differential of digital output Q2.
- Adjustable set point of Q2.
- 230Vac controller supply voltage
- Outside air temperature sensor can be selected as Ni1000, Pt1000, or active sensor.
- Outside air compensation of the room temperature set point.

Operating modes

- Day / night set points can be selected via time clock or switch.
- Independent mode for the two cooling outputs.

Description of operation


The temperature sensor senses the room conditions and on a rise in temperature the RWD32 via Q1 digital output opens and closes the stage 1 refrigeration solenoid valve as determined by the cooling set point and differential setting.

On a further rise in temperature the RWD32 via Q2 digital output opens and closes the stage 2 refrigeration solenoid valve as determined by the cooling set point and differential settings.


The auxiliary temperature sensor (X2) senses the outside air temperature, and adjusts the room temperature set point as per the temperature shift program set up in the controller.

Function diagram

Cooling sequences

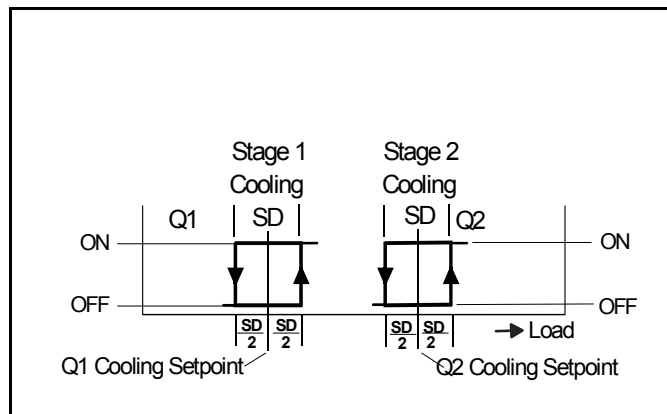

Connection diagram

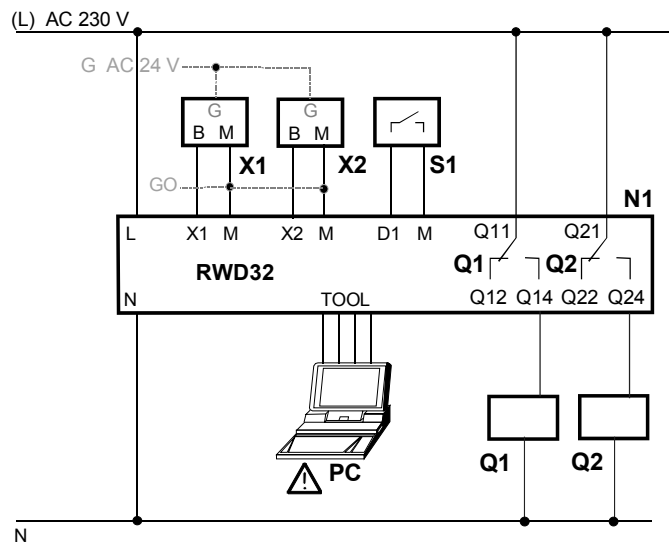

RWD32

- N1 RWD32 controller
- X1 Main temperature sensor
- X2 Outside air temperature sensor.
- S1 Time clock or switch
- Q1 230Vac refrigeration solenoid valve
- Q2 230Vac refrigeration solenoid valve
- PC Personal computer

Main Display

The main display shows ,

- Whether Q1 is On or Off (= off, = on)
- Whether Q2 is On or Off (= off, = on)
- Whether day or night set point is selected. (☒ = day, ☒ = night)
- X1 value (room temperature) in ° C.

Other displays are available by pressing the + button, and the various displays are listed below in sequence from the main display.

On entering any of the four set point displays, the setpoint on display can be adjusted by pushing the ● enter/save button, increase value by pressing the ▲+ button or decrease the value by pressing the ▼- button, and when the required value is reached, press the ●enter/save button to save the new value.

The alternative displays return to the main display after 20 seconds duration.

Press buttons	Action	Current display	Selected display	Selected display comments
▲	Push + button	Q1 Q2 ☒ X1	Q1 SP – c ☒ 25.0c	Q1 - cooling day set point.
▲	Push + button	Q1 SP – c ☒ 25.0c	Q2 SP – c ☒ 25.0c	Q2 - cooling day set point.
▲	Push + button	Q2 SP – c ☒ 25.0c	Q1 SP – c ☒ 16.0c	Q1 - cooling night set point.
▲	Push + button	Q1 SP – c ☒ 16.0c	Q2 SP – c ☒ 32.0c	Q2 - cooling night set point.
▲	Push + button	Q2 SP – c ☒ 32.0c	X1 21.0c	X1 - main temperature sensor reading
▲	Push + button	X1 21.0c	X2 21.0c	X2 - outside air temperature sensor reading
▲	Push + button	X2 21.0c	Q1 ON	Q1 – cooling digital output, display on or off.
▲	Push + button	Q1 ON	Q2 OFF	Q2 – cooling digital output, display on or off.
▲	Push + button	Q2 OFF	COMP 64 <input type="checkbox"/> <input type="checkbox"/>	Control sequence diagram and application number display.
▲	Push + button	COMP 64 <input type="checkbox"/> <input type="checkbox"/>	Q1 Q2 ☒ X1	Back to main display

Values shown are either default values or nominated for information only