

---

## Readme / Installation instructions OSCOPE P V6.60 Hotfix 8

### Modifications

The following modifications have been implemented with **OSCOPE P V6.60 Hotfix 8**:

- PST Flicker values of the SIMEAS R are correctly submitted by OSCOP P to SICARO PQ. In the SICARO PQ report the statement "no data records for" does not appear any more.
- Combination up to 8 Channel-related triggers criteria into a logical pattern by using a logical AND is possible again. The SIMEAS R fault records with parameterized logical pattern are now correctly transmitted to OSCOP P computer.

### Notice!

- **OSCOPE P V6.60 Hotfix 8** may only be copied to an existing **OSCOPE P V6.60 Installation with or without** Hotfix 1, 2, 3, 4, 5, 6 or 7.
- Hotfix 8 includes all changes implemented in Hotfix 1 to Hotfix 7.
- **OSCOPE P V6.60 Hotfix 8** may only be used if the Windows XP operating system with SP2 or SP3 has been installed.

### Contents of the Consignment

The **OSCOPE\_P\_V6\_60\_Hotfix\_8.zip** file includes the following individual files and subdirectories:

- dlng1lib.dll
- dlng2lib.dll
- elng1lib.dll
- elng2lib.dll
- flng1lib.dll
- flng2lib.dll
- ilng1lib.dll
- ilng2lib.dll
- os\_dat.dll
- os\_dll.dll
- os\_sys.dll
- osc16ole.dll
- osdatqb.dll
- osimpexp.dll
- p600rslt.dll
- qrresult.dll
- sercomm.dll
- slng1lib.dll
- slng2lib.dll
- srv4para.dll
- vdewcomm.dll
- ReadMe\_OSCOP\_P\_V6.60\_HF08\_de.pdf
- ReadMe\_OSCOP\_P\_V6.60\_HF08\_en.pdf
- \binui\ (...)
- \manuals\ (...)

- 
- FP600txt.txt
  - IP600txt.txt
  - SP600txt.txt
  - ospar.exe
  - siceval.exe

## **Installation**

Terminate all running **OSCOPE V6.60** applications.

- Copy the **OSCOPE\_P\_V6\_60\_Hotfix\_8.zip** file into the **OSCOPE V6.60** directory[..\Siemens\OSCOPE] and unzip it in this directory. Select all files in the internal **OSCOPE\_P\_V6\_60\_Hotfix\_8\OSCOPE\_660\_HF7** folder and copy them into the [...\Siemens\OSCOPE] root directory. Confirm the message that you really want to replace the existing files.

## **Note**

- With the default installation, **OSCOPE V6.60** is located in drive [C:], [..\Siemens\OSCOPE] directory.
- If you do not know the storage path of **OSCOPE V6.60**, open the [win.ini] file in the [Windows] directory, e. g. [C:\WINNT\win.ini], and search the [OSCOPE P] entry in this file. Below this entry, the path of **OSCOPE V6.60** is indicated in this value **Path=lhr\_OSCOPE\_P\_V6.60\_Path**.

## **Commissioning**

Start your **OSCOPE V6.60** applications as usual.