

SIEMENS

Ingenuity for life



Application Device and Power System Configuration

SIPROTEC 5 Application

Application Device and Power System Configuration

SIPROTEC 5 Application

Application Device and Power System Configuration

APN-015, Edition 1

Content

1	Application Device and Power System Configuration.....	3
1.1	Introduction.....	3
1.2	Overview	3
1.3	Application Data	4
1.4	Device Settings	6
1.5	Power System Settings	10
1.6	Conclusion.....	13

1 Application Device and Power System Configuration

1.1 Introduction

This application example covers the details with regard to applying the General device and power system data settings. Numerous screen shots from DIGSI are used to help the reader apply the information to his own project. The general configuration of SIPROTEC 5 is described in the overview separately.

The applicable SIPROTEC5 device Manual should be consulted for detailed information. This application description provides a graphic road map for a typical application with current and voltage measurement.

Related subjects such as e.g. general application and distance protection etc. are covered in separate application descriptions.

1.2 Overview

After adding the device to the project the general applications (selection of Function Groups, Measuring Points and Function) must be done – see General Application. This document describes the next steps, General device and Power system settings, which must be applied before the individual functions are configured:

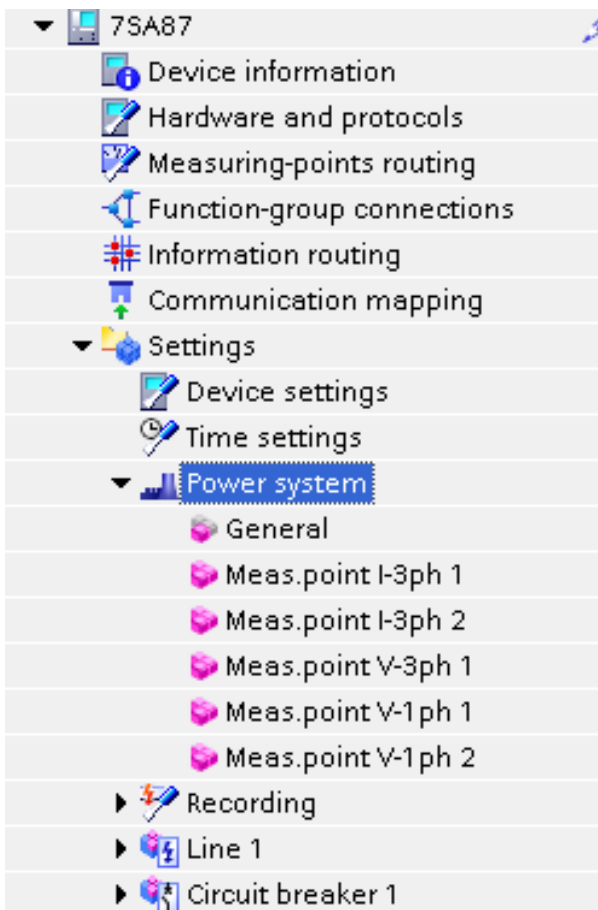


Figure 1: Device settings

SIPROTEC 5 Application

Application Device and Power System Configuration

1.3 Application Data

The following example data is used to illustrate the application of the Power system settings:

	Parameter	Value
System data	Nominal system voltage phase-phase	400 kV
	Power system frequency	50 Hz
	Maximum positive sequence source impedance	10 + j100
	Maximum zero sequence source impedance	25 + j200
	Minimum positive sequence source impedance	1 + j10
	Minimum zero sequence source impedance	2.5 + j20
	Maximum ratio remote infeed / local infeed (I_{Rem}/I_{Loc})	3
Instrument transformers	Voltage transformer ratio (LINE) (VT2)	380 kV / 100 V
	Voltage transformer ratio (BUS) (VT1)	400 kV / 110 V
	CT1 and CT2: Current transformer ratio	1000 A / 1 A
	CT1 and CT2: Current transformer data	5P20 20VA $P_i=3VA$
	CT1 and CT2 secondary connection cable	2.5 mm ² 50m
	CT ratio / VT ratio for impedance conversion	0.2632
	Line 1 - length	80 km
	Maximum load current	250% of full load
Line data	Minimum operating voltage	85% nominal voltage
	Sign convention for power flow	Export = negative
	Full load apparent power (S)	600 MVA
	Line 1 – positive seq. impedance per km Z_1	0.025 + j0.21 Ω/km
	Line 1 – zero seq. impedance per km Z_0	0.13 + j0.81 Ω/km
	Line 2 – total positive seq. impedance	3.5 + j39.5 Ω
	Line 2 – total zero seq. impedance	6.8 + j148 Ω
	Line 3 – total positive seq. impedance	1.5 + j17.5 Ω
	Line 3 – total zero seq. impedance	7.5 + j86.5 Ω
	Maximum fault resistance, Ph-E	250 Ω
	Average tower footing resistance	15 Ω
	Earth Wire	60 mm ² steel
Tower data	Distance: Conductor to tower (ground)	5 m
	Distance: Conductor to conductor (phase-phase)	12 m
Circuit breaker 1 and 2	Trip operating time	60 ms
	Close operating time	70 ms

Table 1: Power system and line parameters

1.4 Device Settings

The device settings are the first item under settings and cover general device settings:

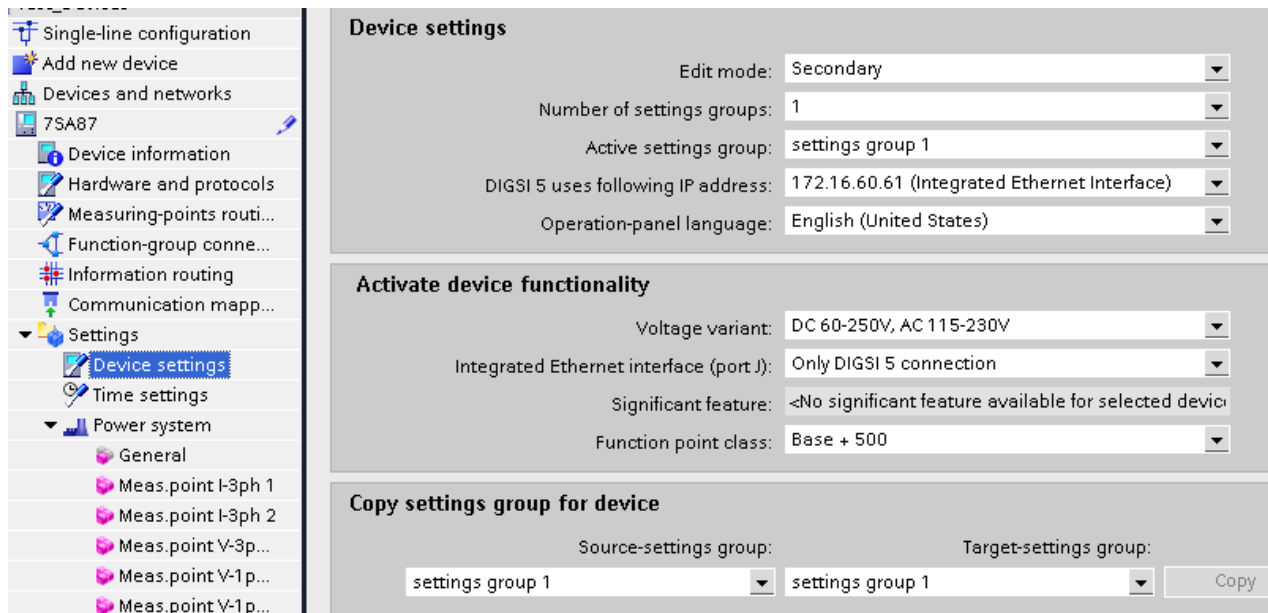


Figure 2: Device Settings

Edit mode:

In the Edit mode the selection “Primary”, “Secondary” or “Percent” is made. In order to maintain default settings that are in relation to the rated secondary current/voltage, it is recommended to select “Secondary” before CT and VT parameters are changed. This prevents overwriting all current/voltage threshold settings when the CT/VT ratios are set. When the CT/VT data has been entered the Edit mode can be set according to the individual preference (it may also be changed at any time during application of the settings).

Number of setting groups / Active setting group and Copy settings group for device:

If more than one setting group is required, this can be set here (up to 8 setting groups are possible). A separate application description is available for the application of multiple setting groups.

DIGSI 5 IP Address:

DIGSI can access the device via Ethernet or USB interfaces. As the device may have more than one Ethernet interface this setting can be used to select the IP address of the Ethernet interface in the device that DIGSI must use when connecting to the device. In most cases the Integrated Ethernet Interface (Plug-in module position J) is used. The IP address of this port is set under Hardware and protocols – see General Application note.

Operating-panel language:

Select the language that must be used for display in the device.

Voltage variant:

This indicates the power supply variant (type) used in the device. It cannot be changed.

Integrated Ethernet interface (port J):

This interface is typically only used for DIGSI communication, but may be set to allow other communication protocols in parallel.

Significant feature:

A significant feature such as 2-end protection in the 7SD87 is defined in the ordering code. In some cases this significant features may be changed here.

Function point class

The number of function points available in the device is defined in the ordering code.

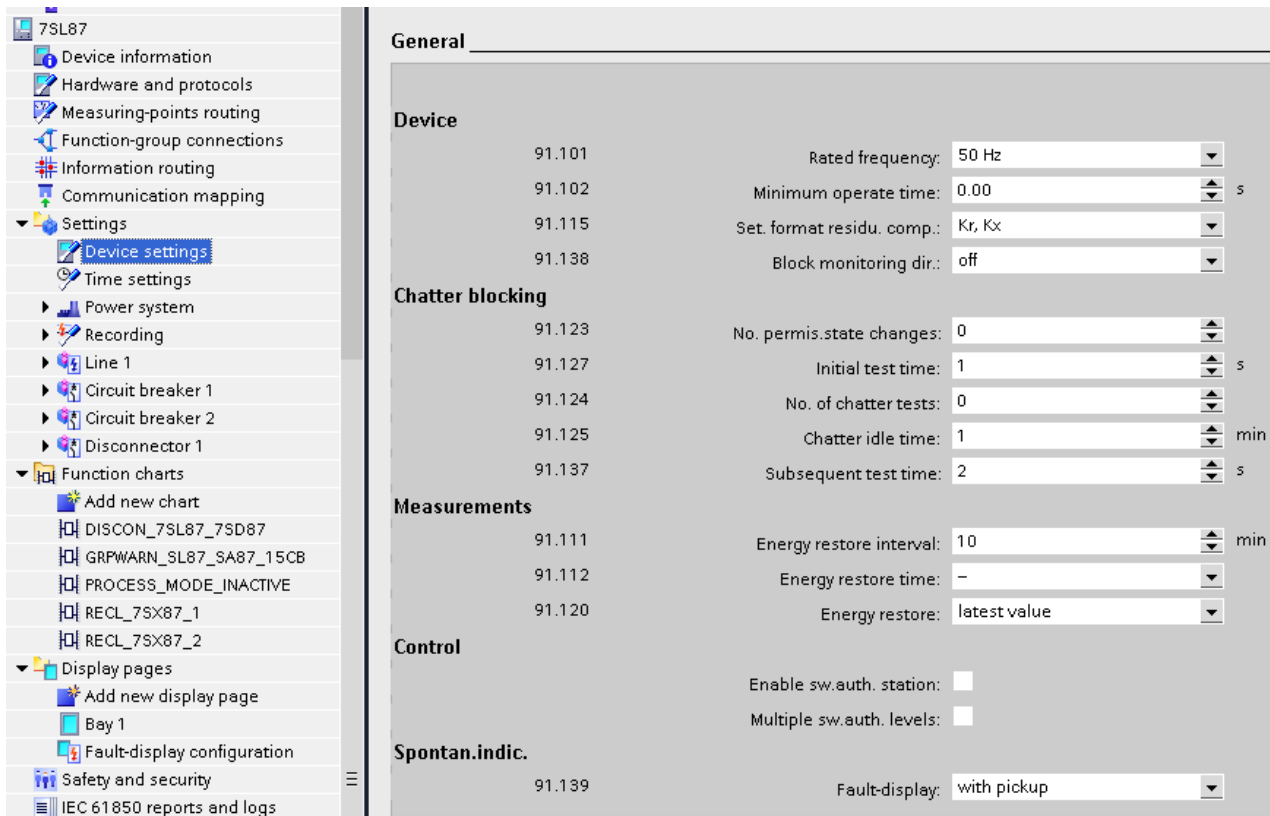


Figure 3: Device Settings-General

1.4.1 General - Device

Rated frequency:

Select the desired rated frequency, either 50 or 60 Hz.

Minimum operate time:

As the trip of the circuit breaker is done via the FG circuit breaker, the minimum trip duration is set in the circuit breaker with parameter "output time". The minimum operate time set here is relevant to the operate of functions (e.g. distance protection). As these operate signals do not require a minimum duration to ensure secure response by the circuit breaker the default and recommended setting is 0.00 s. A different minimum operate time may be required when the operate of a function is routed directly to an output , e.g. in generator protection applications.

Setting format for residual compensation

Impedance based protection functions require a residual compensation factor setting for the ground loop measurement. This setting can be applied in two different formats:

- 1. Kr, Kx: in this format the ratio of $RE/RL = Kr$ and $XE/XL = Kx$ are set
- 2. K0 in this format the complex ratio of ZE/ZL is set.

SIPROTEC 5 Application

Application Device and Power System Configuration

Note: when the K0 setting format is used, the Line angle setting is applied together with the K0 setting to convert to Kr and Kx for the internal computation.

Block monitoring direction

During testing and commissioning it is sometimes necessary to prevent signals resulting from the tests from flooding the control centre. With this setting it is possible to activate a block of signals going out on the interface towards the control centre. It is also possible to activate this blocking via binary input.

1.4.2 General - Chatter blocking

For certain signals it may be advisable to activate a chatter blocking to avoid flooding the control centre when there are too many state changes of a binary input. For this purpose the following setting parameters are available:

- No of permissible state changes
- Initial Test Time
- No. of chatter tests
- Chatter idle time
- Subsequent test time

For details on the setting and function of these parameters please refer to the device manual. The chatter blocking is only active for a binary input (or circuit breaker position status) when this is selected under the properties of the particular signal (see diagram below:

The screenshot shows the configuration interface for a circuit breaker. The top part is a tree view of the configuration structure:

▼ Circuit breaker 1	301		*	*	*	*	*													
▶ Trip logic	301.5341																			
▼ Circuit break.	301.4261		*	*	*	*	*													
▶ >Ready	301.4261.500	SPS																		H
▶ >Acquisition blocking	301.4261.501	SPS																		
▶ >Reset switch statist.	301.4261.502	SPS																		
▶ External health	301.4261.503	ENS																		
▶ Health	301.4261.53	ENS																		
▶ Position 3-pole	301.4261.58	DPC							OH											
▶ Position 1-pole phsA	301.4261.459	DPC							CH											
▶ Position 1-pole phsB	301.4261.460	DPC								CH										
▶ Position 1-pole phsC	301.4261.461	DPC									CH									

The bottom part of the screenshot shows the 'Position 3-pole' signal properties dialog box. The 'General' tab is selected, and the 'Details' section is expanded. The 'Chatter blocking' checkbox is checked.

Position 3-pole

General

Details

User information

Details

Name: Position 3-pole

Original name: Position 3-pole

IEC 61850 name: Pos

IEC 61850 path: SIP1/CB1/XCBR0/Pos

Chatter blocking

Chatter blocking:

Figure 4: Activation of Chatter Blocking under "Properties" in the Matrix

1.4.3 General - Measurements

The setting options visible here depend on the measurement functions applied in the device. If for example the average value measurement is selected, additional parameters that are specifically relevant appear in addition:

Measurements		
91.111	Energy restore interval:	10 min
91.112	Energy restore time:	-
91.120	Energy restore:	latest value
91.104	Average calc. interval:	60 min
91.105	Average update interval:	60 min
91.106	Average synchroniz. time:	hh:00

Figure 5: Additional setting option for average measurement function

For more detailed information on the setting of these parameters, please refer of the relevant section of the device manual.

1.4.4 General - Control

Selection for switching authority can be applied here. A separate application note for Control Functions is available.

1.4.5 Localization

The user may select the units used in the device. In general a choice between SI (metric) and ANSI (miles instead of km) units is provided.

Localization	
6211.139	Unit system: SI
<input type="button" value="Add new stage"/> <input type="button" value="Delete stage"/>	

Figure 6: Localization

SIPROTEC 5 Application

Application Device and Power System Configuration

1.5 Power System Settings

All the Measuring Point settings are provided here. The number of available measuring points depends on the selection under Measuring-points routing – see separate application note for information regarding this.

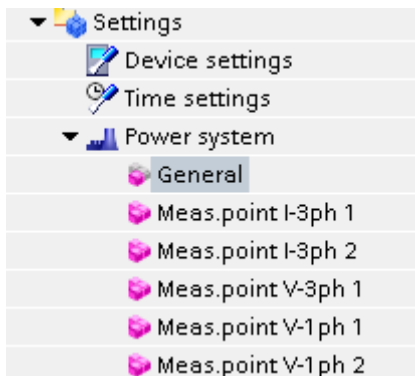


Figure 7: Initial Settings in the setting tree

:

1.5.1 General

Under General it is only possible to select the phase rotation

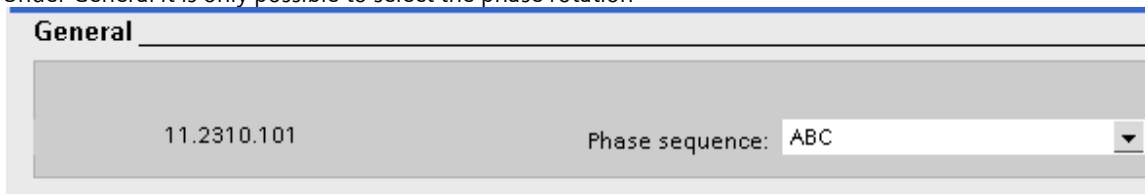


Figure 8: Setting Phase Rotation under General **Phase sequence**

The phase sequence, typically ABC, must be set here. For applications where a change of the phase sequence is possible depending on the plant condition (e.g. pumped storage with change between generation and motoring by means of a phase swap) this can be done by switching (swapping) phases. For this purpose the “Inverted phases” setting described below for each measuring point must be used. If a phase reversal is possible without a physical swap, the binary input “>Phs-rotation reversal” under Power system/General should be used.

1.5.2 Meas. point CT Settings

These must be set according to the given data. Please note that the device may have several current and voltage measuring points. Be sure to select the correct one for the application of the following settings.

The setting mask for the CT parameters (e.g. Meas. Point I-3ph 1) is as follows (refer to the comment above regarding “Edit mode” – it is recommended to be in “secondary” when changing CT ratio parameters):

CT 3-phase	
General	
11.931.8881.115	CT connection: 3-phase + IN
11.931.8881.127	Tracking: active
CT phases	
11.931.8881.101	Rated primary current: 1000.0 A
11.931.8881.102	Rated secondary current: 1 A
11.931.8881.117	Current range: 100 x IR
11.931.8881.118	Internal CT type: CT protection
11.931.8881.116	CT neutr.pt. in dir. of obj.: yes
11.931.8881.114	Inverted phases: none
11.931.8881.107	CT error changeover: 1.00
11.931.8881.108	CT error A: 5.0 %
11.931.8881.109	CT error B: 15.0 %

Figure 9: CT setting entry

Tracking

Some functions in the device may utilize a measuring technique that “tracks” the system frequency. This measurement is then based on a fixed number of samples per cycle. The setting here only determines if this particular signal may be applied to determine the power system frequency for purpose of tracking.

The power system frequency determined in this manner is then used to establish the re-sampling frequency so that a fixed number of samples per cycle are available for those functions that require this. Functions that have a fixed sampling rate (compensation of frequency deviation by means of adapted filter coefficients) are not affected by this setting.

Rated primary and secondary current

These are set according to the application data given in Table 2.

Current range

This setting is fixed at 100 x IR for distance protection because the distance protection may not “clip” the large currents as this could cause under-reach. For other applications a different setting may be possible.

Note: Only permitted setting options are available so that the user can not accidentally set a too small range.

CT neutral point in direction of protected object

The CT polarity is selected by correct application of the star point. This is done with the selection of the CT neutral point direction which may be towards the protected object (line) or not. The correct setting must be checked during commissioning or with “on-load” direction check.

SIPROTEC 5 Application

Application Device and Power System Configuration

Inverted phases

The setting "Inverted phases" is only relevant when there is a phase swapping switch, e.g. on a pumped storage feeder where the phase rotation is changed when going from generation to motoring (pumping). In all other applications the default setting = none must be maintained.

CT error changeover, CT error A and B

These parameters are relevant to the feeder and stub differential protection. A description and setting recommendation is provided in the device manual.

Magnitude Correction

The screenshot shows the configuration for CT 1. It features two rows of input fields. The first row has a text field containing '11.932.3841.103' and a 'Magnitude correction' dropdown menu set to '1.000'. The second row has a text field containing '11.932.3841.117' and a 'Phase' dropdown menu set to 'IA'. To the right of each dropdown menu is a small icon of a document with a pencil. Below the input fields are two buttons: 'Add new stage' and 'Delete stage'.

Figure 10: Magnitude correction

For each physical measuring input a magnitude correction factor can be applied. Please note that this setting should only be modified when there is a known linear deviation in the primary current transformer measurement. This setting is not intended to accommodate normal transformation ratios or typical CT measuring errors.

The settings for the 2nd CT, Meas.point I-3ph 2, are exactly the same as the CT's are identical.

1.5.3 Meas.point VT Settings

For the VT the mask for applying the settings is as follows:

The screenshot shows the configuration for VT 3-phase. It features five rows of input fields. The first row has a text field containing '11.941.8911.101' and a 'Rated primary voltage' dropdown menu set to '380.00' with a unit 'kV' to its right. The second row has a text field containing '11.941.8911.102' and a 'Rated secondary voltage' dropdown menu set to '100' with a unit 'V' to its right. The third row has a text field containing '11.941.8911.104' and a 'VT connection' dropdown menu set to '3 ph-to-gnd voltages'. The fourth row has a text field containing '11.941.8911.106' and an 'Inverted phases' dropdown menu set to 'none'. The fifth row has a text field containing '11.941.8911.111' and a 'Tracking' dropdown menu set to 'active'.

Figure 11: Line VT setting entry

Rated primary and secondary voltage

These parameters must be set according to the given data, and must reflect the actual VT rated values.

Inverted phases

The setting "Inverted phases" is only relevant when there is a phase swapping switch, e.g. on a pumped storage feeder where the phase rotation is changed when going from generation to motoring (pumping). In all other applications the default setting = none must be maintained.

Tracking

Some functions in the device may utilize a measuring technique that “tracks” the system frequency. This measurement is then based on a fixed number of samples per cycle. The setting here only determines if this particular signal may be applied to determine the power system frequency for purpose of tracking. The power system frequency determined in this manner is then used to establish the re-sampling frequency so that a fixed number of samples per cycle are available for those functions that require this. Functions that have a fixed sampling rate (compensation of frequency deviation by means of adapted filter coefficients) are not affected by this setting

Magnitude Correction

VT 1	
11.941.3811.103	Magnitude correction: 1.000
11.941.3811.108	Phase: VA

Buttons: Add new stage, Delete stage

Figure 12: Magnitude correction

For each physical measuring input a magnitude correction factor can be applied. Please note that this setting should only be modified when there is a known linear deviation in the primary voltage transformer measurement. This setting is not intended to accommodate normal transformation ratios or typical VT measuring errors.

The settings for the further VT measuring points, eg. Sync Check voltage from a bus connected VT are set in the same manner.

1.6 Conclusion

The application of the power system parameters, mainly consisting of the measuring point configuration, allows for clear definition of the plant interface.

Published by
Siemens AG 2016
Energy Management Division
Digital Grid
Automation Products
Humboldtstr. 59
90459 Nuremberg, Germany

www.siemens.com/siprotec

For more information,
please contact our
Customer Support Center.

Tel.: +49 180 524 70 00

Fax: +49 180 524 24 71

(Charges depending on provider)

Email: support.energy@siemens.com

© 2016 Siemens. Subject to changes and errors.
The information given in this document only contains
general descriptions and/or performance features which
may not always specifically reflect those described, or
which may undergo modification in the course of further
development of the products. The requested performance
features are binding only when they are expressly agreed
upon in the concluded contract.

For all products using security features of OpenSSL, the
following shall apply:
This product includes software developed by the OpenSSL
Project for use in the OpenSSL Toolkit.
(<http://www.openssl.org/>)
This product includes cryptographic software written by
Eric Young (eay@cryptsoft.com)
This product includes software written by Tim Hudson
(tjh@cryptsoft.com)
This product includes software developed by Bodo Moeller.