
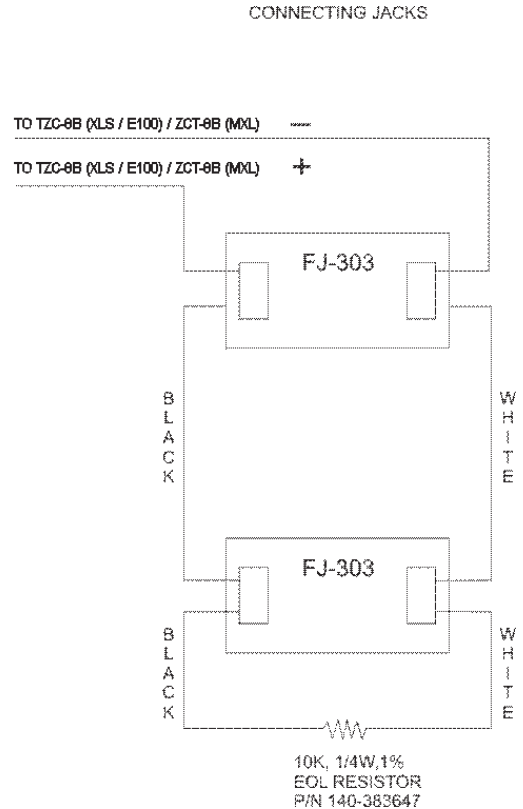


# SIEMENS

## Installation Instructions Model FJ-303 and FT Series

Telephone Jack and FireFighters' Phone Stations (500-690975 / S24235-B132-A1)

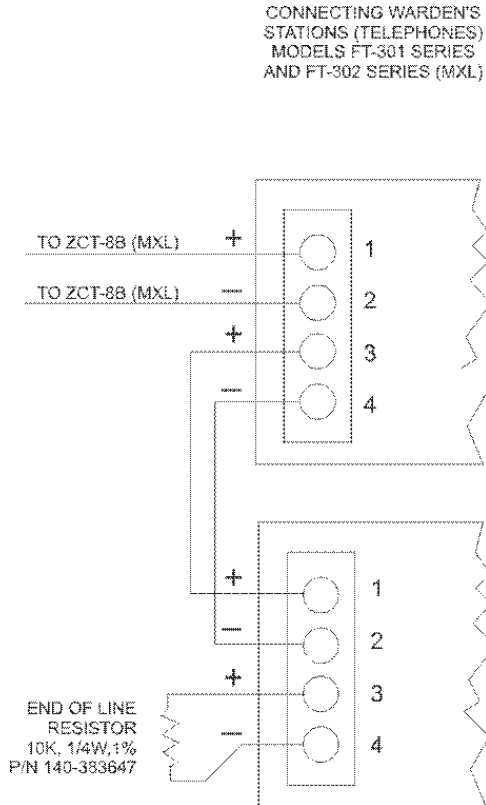

### NOTES

1. All wiring must be in accordance with Article 760 of NEC or local building codes.
2. For additional information, refer to the CPV90 Installation Instructions, P/N 315-085444, ZCT-8B Installation Instructions (MXL), P/N 315-092105, or TZC-8B Installation Instructions (XLS / E100), P/N 315-034110 / A24205-A334-B821.
3. Use the FJ-303 Warden's Station only with the handset models PT-303, PT-304, PFT and PFT-P.
4. Remove the 10K EOL resistor from ALL FJ-303 stations except the last station in the zone. In Canada remove all EOLs, then use EOL P/N 140-034726 and mount using Model EL-33.
5. Wiring:  
18 AWG ( $\varnothing$  0.75mm) minimum  
14 AWG (2.5mm<sup>2</sup>) maximum.

P/N 315-085444-8  
A24205-A334-B801

Siemens Building Technologies  
Fire Safety

Siemens Building Technologies, Inc.  
8 Fernwood Road  
Florham Park, New Jersey 07932

Siemens Building Technologies, Ltd.  
2 Kenview Boulevard  
Brampton, Ontario L6T 5E4 CN

Siemens AG  
I BT DE FS SYS  
D-81379 Munich

Siemens Building Technologies  
Fire Safety

P/N 315-085444-8  
A24205-A334-B801