


## Installation Instructions

### Model FVEÖŠUÁÓ!^æÁ|æ•



When installing or replacing the glass front panel always wear protective goggles and gloves. Injury Hazard!

1. Obtain a front panel and keys for the telephone
2. On the underside, unlock the telephone cover.
3. Slide the right-hand side of the glass panel, with the visible imprint on the outside, between the foam rubber and guide rail until the left-hand edge of the glass becomes visible (A).
4. Slide the left-hand side of the glass panel upwards between the foam rubber and the guide rail (B).
5. Slide the glass panel towards the left until it is central (C).
6. Close and relock the cover of the telephone.

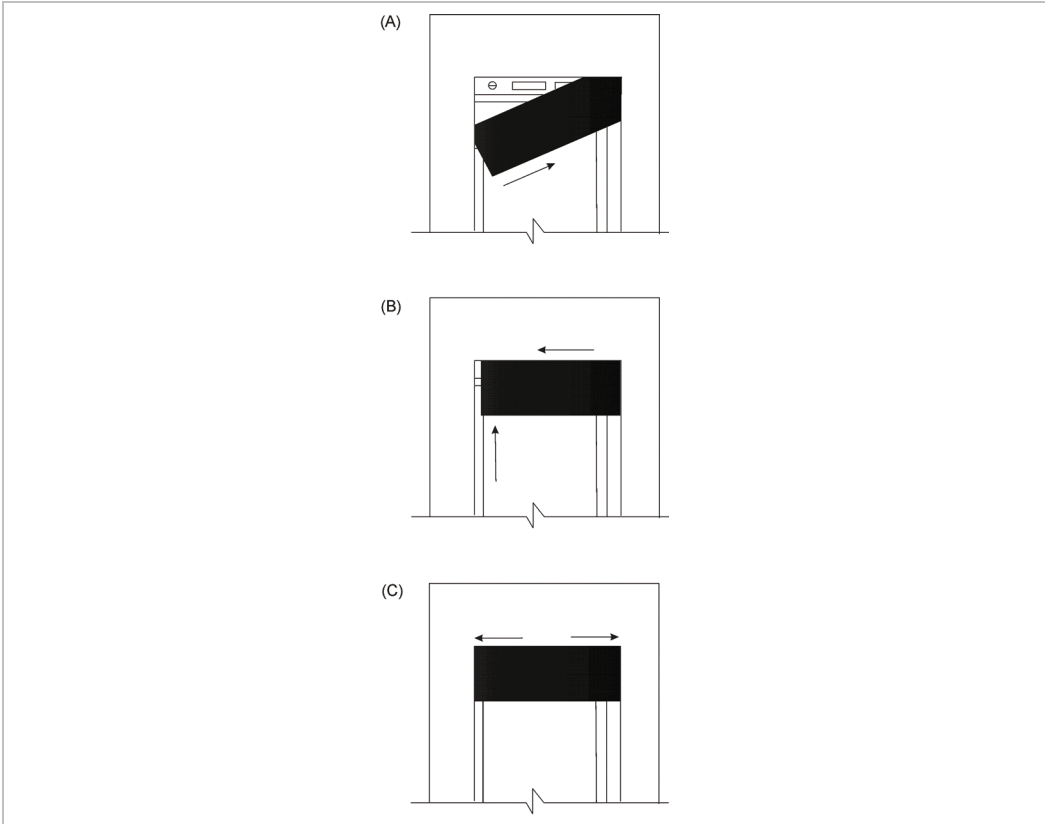

Siemens Building Technologies, Inc.  
8 Fernwood Road  
Florham Park, New Jersey 07932

Siemens Building Technologies, Ltd.  
2 Kenview Boulevard  
Brampton, Ontario L6T 5E4 CN

Siemens Gebäudesicherheit  
GmbH & Co. oHG  
D-80930 München