

SIEMENS

CATALOG NUMBER

ECMMKOP

Back Plate with Knockouts



PowerMod™ Modular Metering Accessories



⚠ DANGER

Hazardous Voltage.
Will cause death, serious injury
or substantial property damage.


Turn off power supplying this
equipment before working inside.

Kit Contents:

- (1) Back Plate w/Knockouts
- (6) Screws, #10-32 x 5/16

Note: This instruction outlines the recommended installation procedure. For installation by a qualified person, as defined by all local electrical codes and/or the National Electrical Code ®.

1. Turn off and lock off the power supplying the device before working inside.
2. Clean and prepare surface; remove any old or damaged material before installing replacement part. Do not allow petroleum based (hydrocarbon) sprays, chemicals, solvents or any paint to contact plastic components.
3. Install Back Plate into position against back wall of enclosure. Secure in place with (6) #10-32 Screws. Tighten screws to 15-20 lb.-ins.

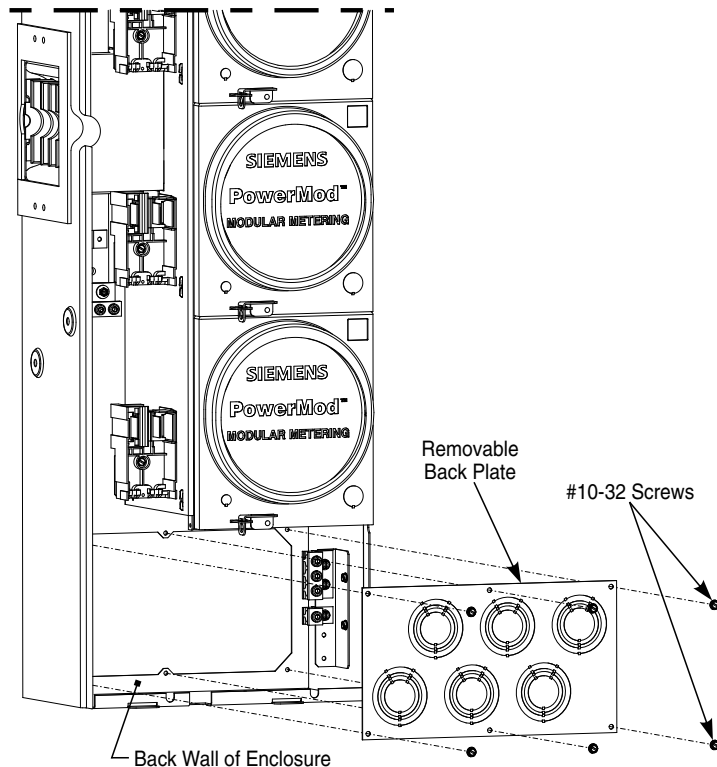

Siemens Industry, Inc. Norcross, Georgia U.S.A.

4819969 Rev.B

© The National Electrical Code is a registered trademark of the National Fire Protection Association.

© 2009 Copyright Siemens Industry, Inc.