

CATALOG NUMBER

# ECPLD2R

**electricCenter**  
ACCESSORIES

2" Wide - Padlocking Device

This kit fits SIEMENS and MURRAY breaker types:

BAF, BAFH, BE, BG, BLE, BLEH, BLF, BLG, BLHF, BQ, BQAF, BQAFH, BQH, BOXD, HBQ, HQP, MG, MH-T, MP-AT, MP-ET, MP-GT, MP-HAT, MP-HET, MP-HGT, MP-HT, MP-MT, MP-T, MW, QAF, QAFH, QE, QEH, QG, QP, QPF, QPH, QPHF, QT, QW.



Same As: ■ ECPLD2, PLD2

Package contains 3 devices.

## INSTALLATION INSTRUCTIONS




**⚠ DANGER**  
Hazardous Voltage.  
Will cause death,  
serious injury or substantial  
property damage.  
Turn off power supplying this  
equipment before working inside.

### ⚠ SAFETY INSTRUCTIONS

**Note:** This instruction outlines the recommended installation procedure.

1. Turn off and lock off the power supplying this enclosure before working inside.
2. To install, press the padlocking assembly onto the circuit breaker (Fig.1). (The barbs on the lock mount will cause this to be a snug fit).
3. The circuit breaker can be locked in the "OFF" or "ON" position. Once the padlocking assembly is installed, the lock plate must be rotated to allow access to the circuit breaker handle(s) (Fig.2).

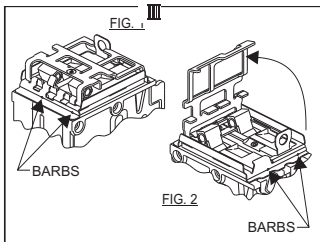

© 2007 Copyright Siemens Industry, Inc.

600636A Rev.X

Siemens Industry, Inc. Norcross, Georgia U.S.A. Assembled in Mexico

PART NO. **600636B**