

CATALOG NUMBER

**ECQLN3**

**electriCenter**  
ACCESSORIES

**Handle Blocking Device**

Same As:

- QL N3
- BX050N




## INSTALLATION INSTRUCTIONS



### **▲ DANGER**

**Hazardous Voltage.**  
Will cause death,  
serious injury or substantial  
property damage.

Turn off power supplying this  
equipment before working inside.

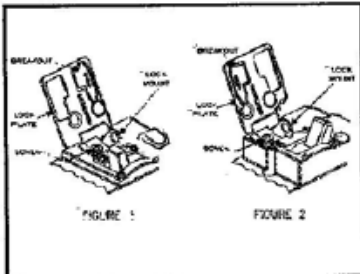

### **▲ SAFETY INSTRUCTIONS**

**Note:** This instruction outlines the recommended installation procedure.

1. Use Fig.1 for circuit breaker types: EQ8693, EQ8695, EQ8696, M2, MD-HTR, MD-MTR, MD-TR, HQNR, QNR, QNRH.
2. Use Fig.2 for circuit breaker types: MD-HT, MD-MT, MD-T, HQN, QN, QNH.
3. To install, insert lock mount through lock plate as shown in Fig.1 or Fig.2.
4. Set lock mount in place on circuit breaker, using only the screw provided. Torque screw to 7-9 lb.in.
5. Handle can be locked in "OFF" position, to lock in "ON" position, the breakout must be removed.

600661A Rev.1