

Installation Instructions

**⚠ DANGER**



**Hazardous Voltage  
Will cause death or severe injury.  
Turn power off supplying device before  
installing kit.**

**⚠ SAFETY INSTRUCTIONS**

**NOTE:** This instruction outlines the recommended installation procedure.

1. Turn power off supplying device before installing kit.

2. TO BLOCK HANDLE "ON"

- a. Turn breaker "ON". Assemble blocking device to breaker by positioning over handle as shown, with handle opening of blocking device toward cover's line end. Insert tab (A) into slot (A1). Push toward handle and downward in area shown until tab (B) drops into slot (B1) as shown in Fig. 2.

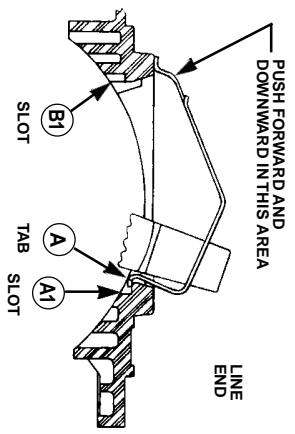


Fig. 1

3. TO BLOCK HANDLE "OFF"

- a. Turn breaker "OFF". Reverse handle blocking device so that handle opening of blocking device is toward end furthest away from the line end. Insert tab (A) into slot (B1). Push toward handle and downward in area shown until tab (B) seats in slot (A1).

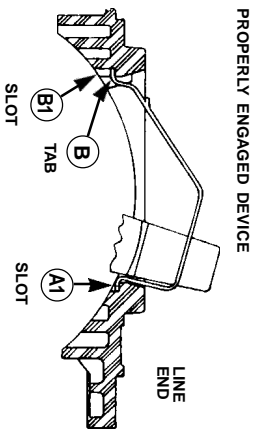


Fig. 2