

### Installation Instructions



**Note:**

This instruction outlines the recommended general installation procedure. For installation by a qualified person, as defined by all local electrical codes and/or the National Electrical Code®.

Siemens Power Mod is compatible with the previous Siemens and Murray<sup>1</sup> modular metering devices. The SBJ (Single Bolt Joint) is interchangeable with the QC (QuickConnect™) method of connecting modules.

**Step 1. Mount (2) Alignment Rails (Supplied) for Elbow.**

Determine proper mounting height so that the meter heights in the line-up are in accordance with utility requirements and local codes. Mount alignment rails for entire line-up per instructions provided with Power Mod modules. See Fig. 1.

**Step 2. Remove Access Covers.**

Remove both Access Covers from Elbow. Retain Access Covers and hardware for re-installation. See Fig. 2.

**Step 3. Hang Elbow.**

Hang Elbow on alignment rails and secure to wall with Mounting Tabs. See Fig. 2.

**Step 4. Install QuickConnect and next module.**

Connect module as described in main PowerMod instruction sheet provided with module.


**Step 5. Remove (2) QuickBolt™ Straps** from right side of Elbow.

See Fig. 2.


**Step 6. Install additional modules as required.**

**Step 7. Re-install Covers.**

Re-install both Access Covers. See Fig. 2.

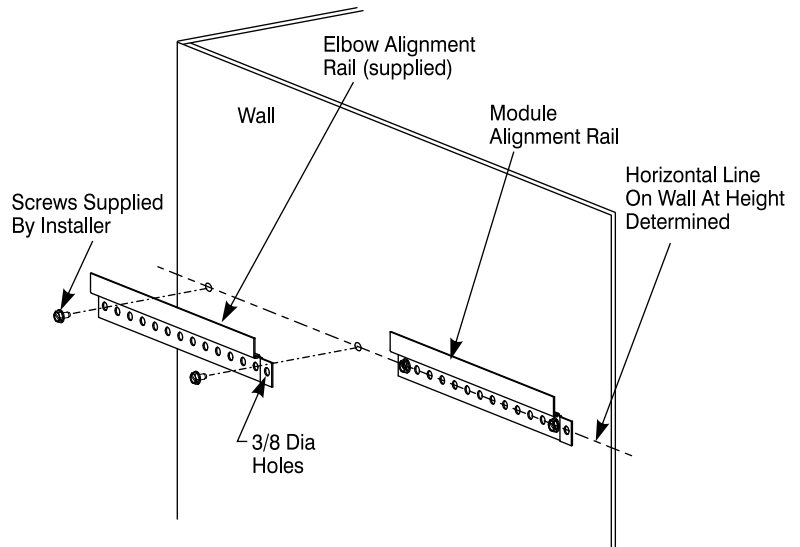

**Fig. 1: Alignment Rail Mounting**

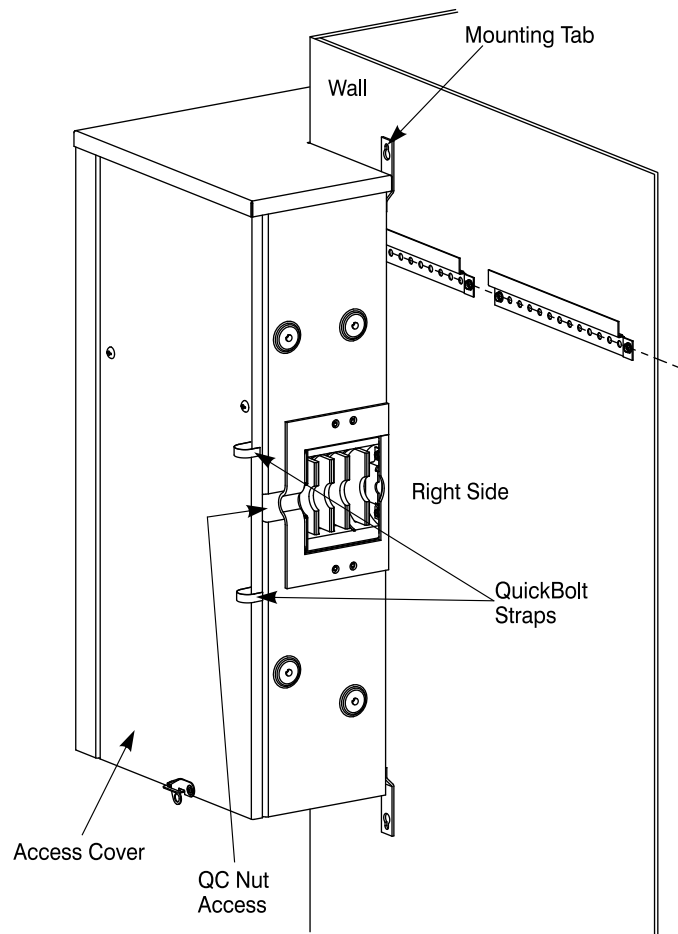

**Fig. 2: Elbow Installation Detail**