

SIEMENS

Siemens Energy & Automation, Inc.

Bellefontaine, Ohio 43311 U.S.A.

© Siemens Energy & Automation, Inc. 1987



Item: MSF6 BREAKER
MOUNTING SCREWS

For Use With: "FD" FRAME BREAKER

Page 1 of 1

Pc. No. 62980"XXX"

Installation Instructions



⚠ DANGER


**Hazardous Voltage.
Will cause severe injury or death.
Turn power off supplying device
before installing kit.**



SAFETY INSTRUCTIONS

NOTE: This instruction outlines the recommended installation procedure.

1. Turn power off supplying device before installing kit.
2. Assemble screws (A) & washers (B)(C) through breakers as shown. CFD breakers require 6 screws (2 kits)

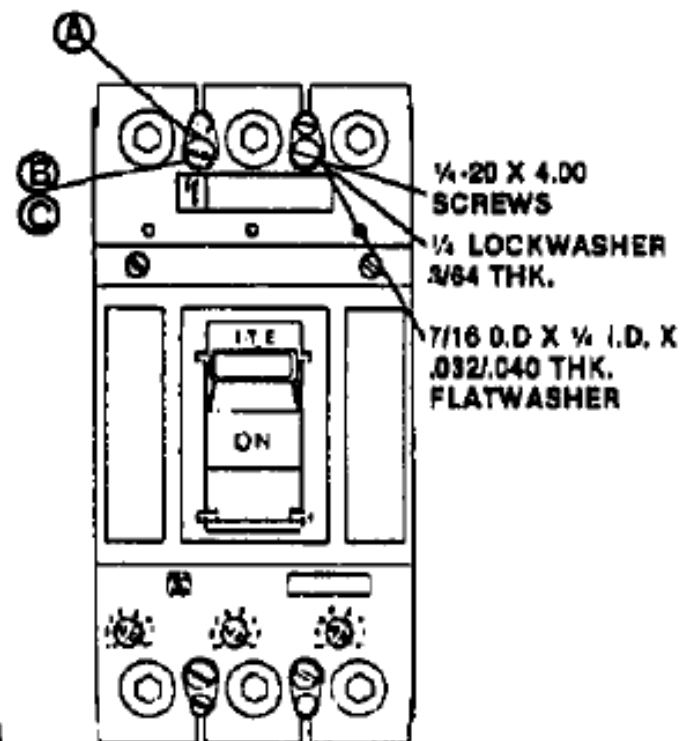

FD FRAME
CIRCUIT
BREAKER