

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
4P	SEE SHEET 1 FOR CHANGES.	CWL 9/23/93	ALH
5P	SEE SHEET 1 FOR CHANGES.	MR 3/7/94	ALH
6P	SEE SHEET 1 FOR CHANGES.	PRJ 6/19/96	

SEE SHEET 1 FOR REVISION INFORMATION.

SIEMENS

Molded Case Circuit Breaker Assembly
Face Mounting Bracket - 1 Pole
Each kit contains one (1) Face Mounting Bracket Kit for use with CQD Circuit Breakers only.

NOTES:
1. Use the template provided on the reverse side to locate the mounting holes.

INSTALLATION INSTRUCTIONS:
1. Retract locking clip prior to installation.
2. Place bracket onto face of CQD Circuit Breaker.
3. Slide bracket toward Line End of breaker and engage bracket into slot in the end of the escutcheon.
4. Push Locking Clip into slot in the end of the escutcheon.
5. Clip will snap over Locking Tabs when pushed into escutcheon.
6. Mount the CQD Circuit Breaker using (4) #6-32 tapped holes in bracket.

Qty.	Cat. No.	DC No.
1	CQDFMB1	78364327808

Siemens Energy & Automation, Inc.
Delafontaine, Ohio 43111 USA
Pc. No. 800496D00

800496D00

SIEMENS

Molded Case Circuit Breaker Assembly
Face Mounting Bracket - 2 Pole
Each kit contains one (1) Face Mounting Bracket Kit for use with CQD Circuit Breakers only.

NOTES:
1. Use the template provided on the reverse side to locate the mounting holes.

INSTALLATION INSTRUCTIONS:
1. Retract locking clip prior to installation.
2. Place bracket onto face of CQD Circuit Breaker.
3. Slide bracket toward Line End of breaker and engage bracket into slot in the end of the escutcheon.
4. Push Locking Clip into slot in the end of the escutcheon.
5. Clip will snap over Locking Tabs when pushed into escutcheon.
6. Mount the CQD Circuit Breaker using (4) #6-32 tapped holes in bracket.

Qty.	Cat. No.	DC No.
1	CQDFMB2	78364327894

Siemens Energy & Automation, Inc.
Delafontaine, Ohio 43111 USA
Pc. No. 800496E00

800496E00

SIEMENS

Molded Case Circuit Breaker Assembly
Face Mounting Bracket - 3 Pole
Each kit contains one (1) Face Mounting Bracket Kit for use with CQD Circuit Breakers only.


NOTES:
1. Use the template provided on the reverse side to locate the mounting holes.

INSTALLATION INSTRUCTIONS:
1. Retract locking clip prior to installation.
2. Place bracket onto face of CQD Circuit Breaker.
3. Slide bracket toward Line End of breaker and engage bracket into slot in the end of the escutcheon.
4. Push Locking Clip into slot in the end of the escutcheon.
5. Clip will snap over Locking Tabs when pushed into escutcheon.
6. Mount the CQD Circuit Breaker using (4) #6-32 tapped holes in bracket.


Qty.	Cat. No.	DC No.
1	CQDFMB3	78364327895

Siemens Energy & Automation, Inc.
Delafontaine, Ohio 43111 USA
Pc. No. 800496F00


800496F00

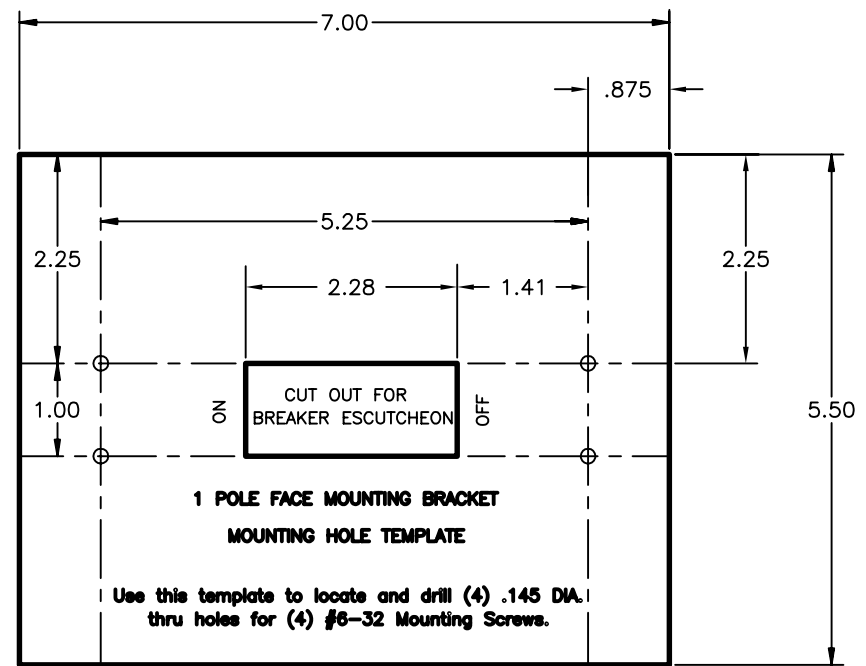

800496D00
REVERSE SIDE

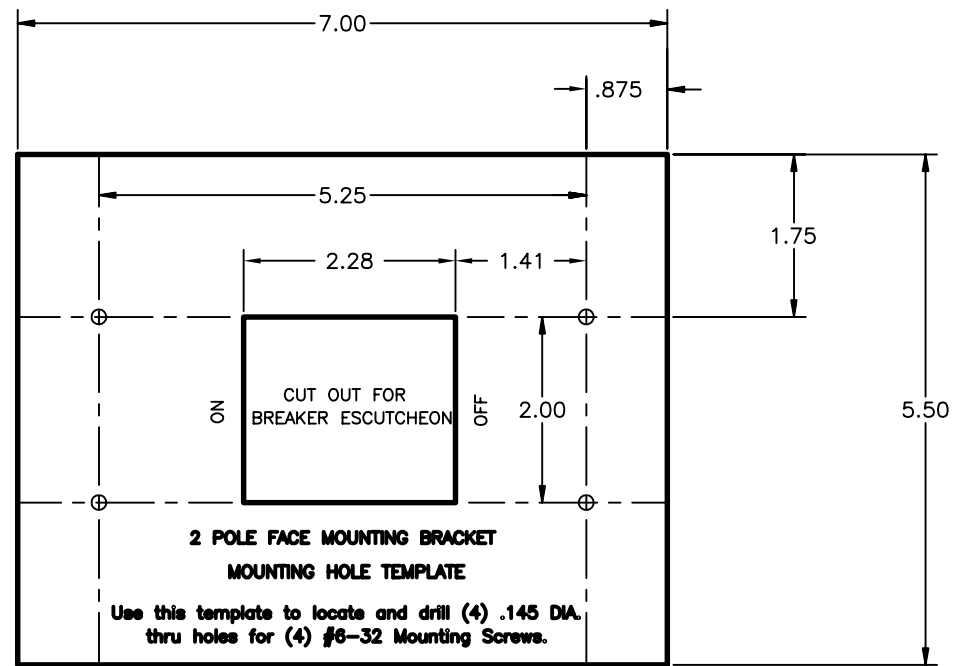

800496E00
REVERSE SIDE

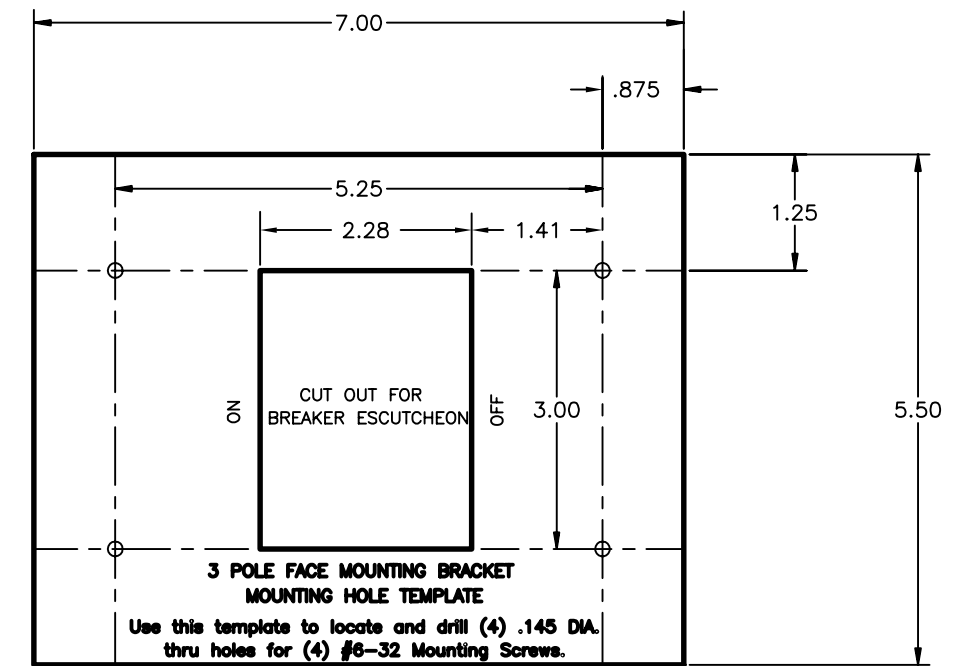

800496F00
REVERSE SIDE

CONFIDENTIAL - PROPERTY OF SIEMENS ENERGY & AUTOMATION, INC.

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES:
.xx ±.01
.xxx ±.005
ANGULAR ±1°
DO NOT SCALE DRAWING

Siemens Energy & Automation, Inc.
Circuit Protection & Controls Division

BQD/CQD EXTERNAL ACCESSORY INSTRUCTION SHEETS

DWN C KEMMER	DATE 9/29/92	SIZE FSCM NO.	DWG NO.	REV
CHK A HALL	DATE 9/29/92	D	800496	10P
APVD A HALL	DATE 9/29/92	SCALE 1/1	SHEET 2 OF 2	