


**RWD82 Universal Controller**  
**Application 71**  
**Remote set point**

Room temperature control  
 Chilled water control valve-3 pos  
 24Vac control system

- Control ( P or PI )
- Room temperature control
- Proportional control ( 3 position ) of the chilled water control valve
- Remote set point adjustment
- Optional day / night set point adjustment .

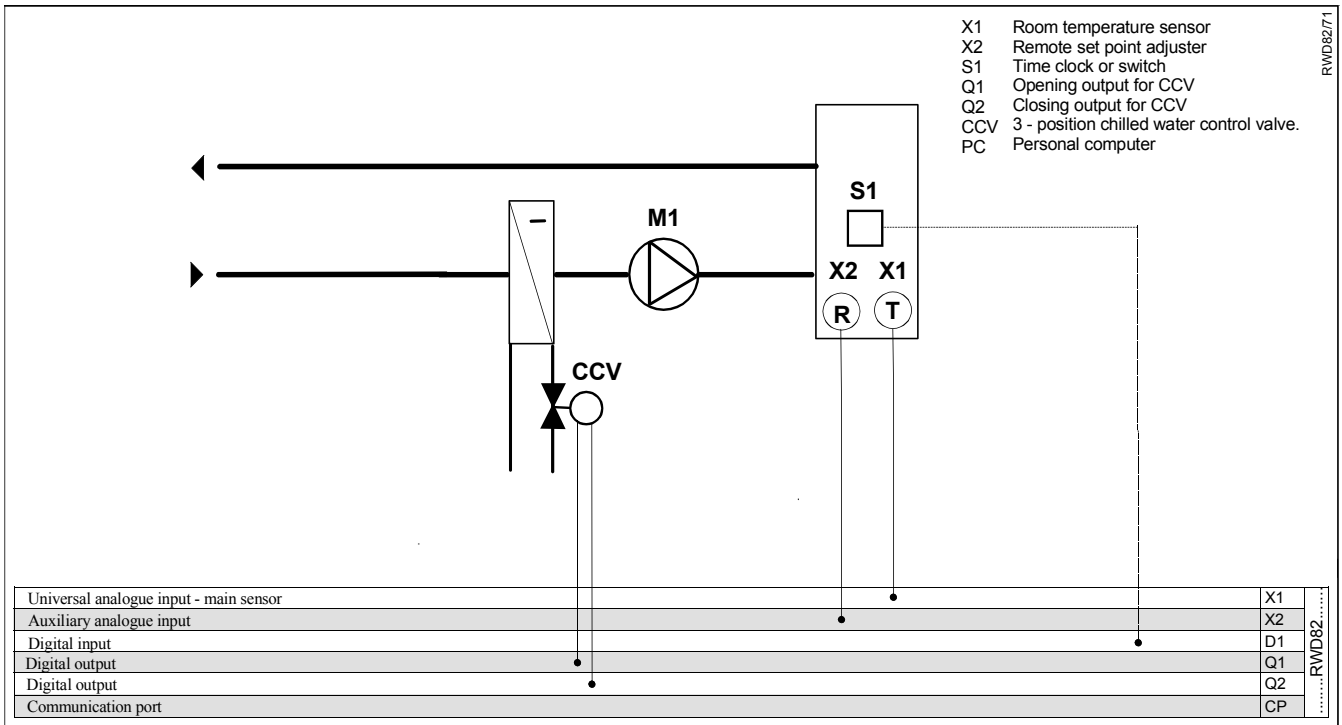

**Supplemental features**

**Control**

- Room temperature sensor can be selected as Ni1000, Pt1000, or active sensor.
- Adjustable proportional band of 3-position output Q1, Q2.
- Integral action function selection and adjustment.
- Timing of 3-position valve actuator
- 24Vac controller supply voltage
- 24Vac three position control valve
- Remote set point adjustment via auxiliary analogue input X2.

**Operating modes**

- Day / night set points can be selected via time clock or switch.

**Description of operation**

The temperature sensor senses the room conditions and on a rise in temperature the RWD82 via Q1, Q2 digital outputs modulates the three position cooling valve as determined by the cooling set point and proportional band settings.

The remote set point adjuster, passive or active, is connected to X2 and sets day set point only. The night set point is set on the controller.


Three position control has no feedback from the valve actuator to determine it's position, so the timing of the actuator must be known to the controller. During commissioning the actuator timing must be entered. A common actuator timing for small three position valve and damper actuators is 150 seconds from fully open to fully closed, so this means that the controller modulates the actuator over the Xp proportional band range for 150 seconds.

E.g. An Xp proportional band of 4° C and 150 second cycle time means that for a 4° C change the controller will drive the actuator for 150 seconds.


A synchronous check on the position of the actuator is carried out on a regular basis.

**Function diagram**

Cooling sequence

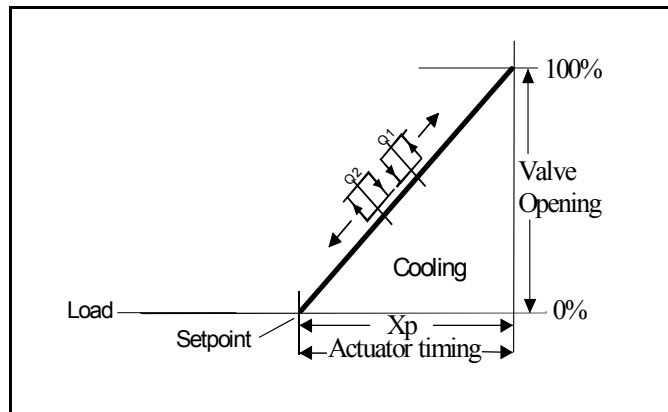

**Connection diagram**

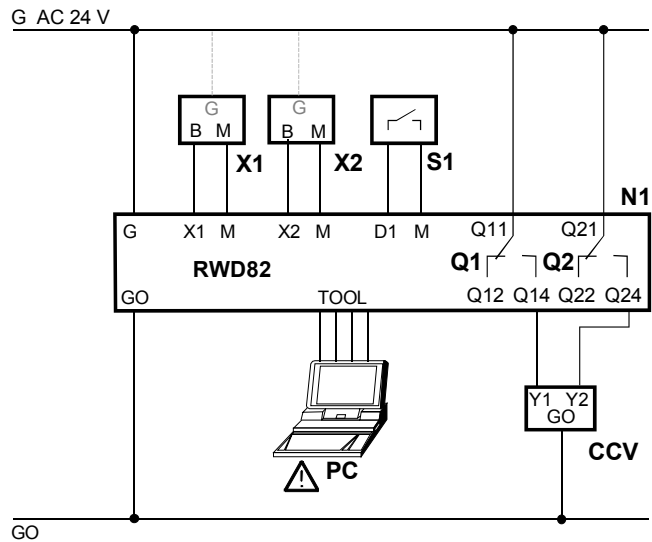

**RWD82**

- N1 RWD82 controller
- X1 Main temperature sensor
- X2 Remote set point adjuster
- S1 Time clock or switch
- Q1 Opening contact for 24Vac 3 - position control valve
- Q2 Closing contact for 24Vac 3 - position control valve
- HCV 3 – position 24Vac cooling control valve
- PC Personal computer

## Main Display

The main display shows ,

- Whether Q1 is On or Off ( ◻ = off, ◼ = on )
- Whether Q2 is On or Off ( ◻ = off, ◼ = on )
- Whether day or night set point is selected. ( ☐ = day, ◐ = night)
- X1 value ( room temperature) in ° C.
- Auxiliary application selected ( REM for remote set point adjustment )

Other displays are available by pressing the + button, and the various displays are listed below in sequence from the main display.

On entering any of the four set point displays, the setpoint on display can be adjusted by pushing the ● enter/save button, increase value by pressing the ▲+ button or decrease the value by pressing the ▼- button, and when the required value is reached, press the ●enter/save button to save the new value.

The alternative displays return to the main display after 20 seconds duration.

Press buttons	Action	Current display	Selected display	Selected display comments
▲	Push + button	REM Q1 Q2 ☐ X1	SP – c ◐ 16.0c	Cooling night set point.
▲	Push + button	SP – c ◐ 16.0c	X1 21.0c	X1 - main temperature sensor reading
▲	Push + button	X1 21.0c	X2SP 22.0C	X2 – actual remote set point setting
▲	Push + button	X2SP 22.0C	3P 50%	Percentage opening position of the heating control valve
▲	Push + button	3P 50%	Q1 OFF	Q1 – cooling valve opening digital output
▲		Q1 OFF	Q2 OFF	Q2 – cooling valve closing digital output
▲	Push + button	Q2 OFF	REM / 3P 71	Control sequence diagram and application number display.
▲	Push + button	REM / 3P 71	REM Q1 Q2 ☐ X1	Back to main display

Values shown are either default values or nominated for information only