

SIEMENS

SICAM RTUs • Ax 1703

SM-x551/SFBxA1

System Element Manual

Preface, Table of Contents

Introduction	1
Protocol Element SM-x551/SFBxA1	2
Order Information	3

**Note**

Please observe Notes and Warnings for your own safety in the Preface.

Disclaimer of Liability

Although we have carefully checked the contents of this publication for conformity with the hardware and software described, we cannot guarantee complete conformity since errors cannot be excluded.

The information provided in this manual is checked at regular intervals and any corrections that might become necessary are included in the next releases. Any suggestions for improvement are welcome.

Subject to change without prior notice.

Document Label	SIC1703_HBSMX551SFBXA1-V_2.01
Version.Revision	2.01
Release date	2013-05-16

Copyright

Copyright © Siemens AG 2013

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Preface

This document is applicable to the following product(s):

- SICAM AK
- SICAM TM
- SICAM BC
- AK 1703
- AMC 1703

Purpose of this manual

This manual describes the functioning of the system elements

- SM-2551/SFBMA1 (SAT Field Bus Master)
- SM-2551/SFBSA1 (SAT Field Bus Slave)
- SM-0551/SFBMA1 (SAT Field Bus Master)
- SM-0551/SFBSA1 (SAT Field Bus Slave)

and essentially contains

- Functional descriptions
- Technical specifications
- Descriptions of interfaces to the process and other system elements
- Possible configurations

Target Group

The document you are reading right now is addressed to users, who are in charge of the following engineering tasks:

- Conceptual activities, as for example design and configuration
- Creation of the assembly technical documentation using the designated engineering tools
- System parameterization and system diagnostic, using the designated engineering tools
- Technical system maintenance

Placement in the Information Landscape

Document	Item no.
SICAM RTUs • Ax 1703 Common Functions Protocol Elements	DC0-023-1
SICAM RTUs Common Functions System and Basic System Elements	DC0-015-1
SICAM RTUs Platforms Configuration Automation Units and Automation Networks	DC0-021-1
Ax 1703 Interoperability IEC 60870-5-101/104	DA0-046-1
SICAM RTUs Interoperability IEC 60870-5-101/104	DC0-013-1

Notes on Safety

This manual does not constitute a complete catalog of all safety measures required for operating the equipment (module, device) in question because special operating conditions might require additional measures. However, it does contain notes that must be adhered to for your own personal safety and to avoid damage to property. These notes are highlighted with a warning triangle and different keywords indicating different degrees of danger.



Danger

means that death, serious bodily injury or considerable property damage **will** occur, if the appropriate precautionary measures are not carried out.



Warning

means that death, serious bodily injury or considerable property damage **can** occur, if the appropriate precautionary measures are not carried out.

Caution

means that minor bodily injury or property damage could occur, if the appropriate precautionary measures are not carried out.



Note

is important information about the product, the handling of the product or the respective part of the documentation, to which special attention is to be given.



Qualified Personnel

Commissioning and operation of the equipment (module, device) described in this manual must be performed by qualified personnel only. As used in the safety notes contained in this manual, qualified personnel are those persons who are authorized to commission, release, ground, and tag devices, systems, and electrical circuits in accordance with safety standards.

Use as Prescribed

The equipment (device, module) must not be used for any other purposes than those described in the Catalog and the Technical Description. If it is used together with third-party devices and components, these must be recommended or approved by Siemens.

Correct and safe operation of the product requires adequate transportation, storage, installation, and mounting as well as appropriate use and maintenance.

During operation of electrical equipment, it is unavoidable that certain parts of this equipment will carry dangerous voltages. Severe injury or damage to property can occur if the appropriate measures are not taken:

- Before making any connections at all, ground the equipment at the PE terminal.
 - Hazardous voltages can be present on all switching components connected to the power supply.
 - Even after the supply voltage has been disconnected, hazardous voltages can still be present in the equipment (capacitor storage).
 - Equipment with current transformer circuits must not be operated while open.
 - The limit values indicated in the manual or the operating instructions must not be exceeded; that also applies to testing and commissioning.
-

Table of Contents

1	Introduction	7
1.1	Application	8
1.2	Overview	9
1.3	Mechanics	10
1.3.1	SM-2551	10
1.3.2	SM-0551	10
2	Protocol Element SM-x551/SFBxA1	11
2.1	Features and Functions	12
2.2	Modes of Operation	13
2.3	Configuration	14
2.3.1	Communication	14
2.3.2	Hardware	15
2.3.2.1	SM-2551	15
2.3.2.2	SM-0551	15
2.4	Engineering	16
2.5	Block Diagrams	17
2.5.1	SM-2551	17
2.5.2	SM-0551	18
2.6	Technical Specifications	19
2.6.1	SM-2551	19
2.6.2	SM-0551	20
2.7	Status and Function Display	21
2.8	Pin Assignment	23
3	Order Information	25
3.1	System Element SM-2551	26
3.2	System Element SM-0551	27
3.2.1	Required for Installation	27
3.3	Accessories	28

1 Introduction

Contents

1.1	Application	8
1.2	Overview.....	9
1.3	Mechanics	10

1.1 Application

The protocol elements SM-x551/SFBxA1 are used in automation units of the systems SICAM AK, SICAM TM, SICAM BC, AK 1703 and AMC 1703. It is deployed in the field of telecontrol and automation.

A protocol element is used for the exchange of data - and thereby for the transmission of messages - over a communication interface to other automation units or devices of third-party manufacturers, e.g. control systems.

The hardware of a protocol element is a communication interface which - dependent on system and interface - can be available in different ways:

- integrated on a basic system element
- on a serial interface module (SIM), which is installed - directly or cascaded (SIM on SIM) - on the basic system element

System element type	Protocol element
consists of	Module SM-2551 or SM-0551 with firmware SFBMA1 oder SFBSA1
can be used in	SICAM AK, SICAM TM, SICAM BC, AK 1703 and AMC 1703
Engineering	SICAM TOOLBOX II with OPM II

1.2 Overview

Protocol elements based on a Serial Interface Module (SIM) with serial interfaces

- SM-2551: two interfaces
- SM-0551: one interface

Protocol element (serial)

- Standard protocols according to IEC 60870-5-101/103 for
 - multi-point traffic
- with byte-asynchronous puls code modulation
- all interface signals (RS-232) and all interfaces are galvanically insulated from each other

SM-2551 can be attached to master control and communication elements of SICAM RTUs and Ax 1703 platforms.


SM-0551 can be attached to selected SIM's SM-25xx.

1.3 Mechanics

1.3.1 SM-2551

SIM SM-2551 can be attached to master control and communication elements of SICAM RTUs and Ax 1703 platforms.

View

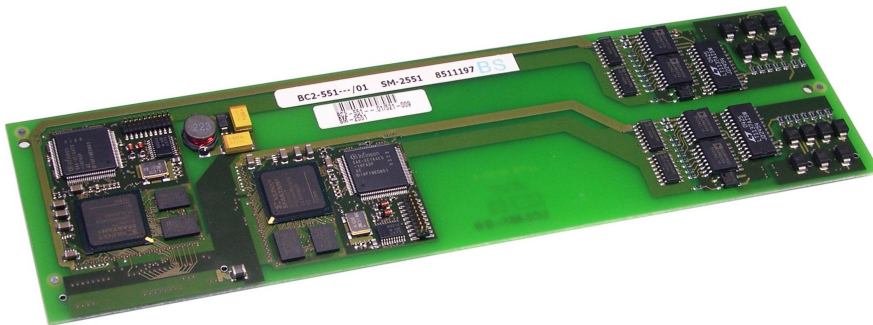

1.3.2 SM-0551

SM-0551 can be attached to SIM SM-2558 and SM-2546.

SIM SM-2558 can be attached to master control and communication elements of SICAM RTUs and Ax 1703 platforms.

SIM SM-2546 can only be attached to the SICAM BC master control element.

View



For further information see also chapter [2.3.2; Hardware](#).

2 Protocol Element SM-x551/SFBxA1

Contents

2.1	Features and Functions.....	12
2.2	Modes of Operation.....	13
2.3	Configuration.....	14
2.4	Engineering.....	16
2.5	Block Diagrams.....	17
2.6	Technical Specifications.....	19
2.7	Status and Function Display.....	21
2.8	Pin Assignment.....	23

2.1 Features and Functions

General Functions

Communication between one central station and up to 100 remote stations.

- Unbalanced multi-point (multi-point traffic)
SFBMxx is controlling station (primary station), SFBSxx is controlled station (secondary station).
 - Data acquisition by polling (station interrogation)
 - Acquisition of events (transmission of data ready to be sent)
 - General interrogation, outstation interrogation
 - Clock synchronization
 - Cyclic, every 5 seconds
 - Command transmission
 - Transmission of integrated totals
- Optimized parameters for selected transmission facilities
- Functions for supporting redundant communication routes



Note

The above mentioned functions are described in detail in the document *SICAM RTUs • Ax 1703 Common Functions Protocol Elements*, section “*SICAM RTUs Fieldbus (SFB)*”.

2.2 Modes of Operation

Operating mode	Patch Plug	Extras ¹⁾	Note
Optical interface (multimode fibre optic) Ring	CM-2860 ^{a)} CM-5860 ^{b)}	CM-0821	<ul style="list-style-type: none"> • 50...115200 bps • RJ45 connector to CM-0821 RXD, TXD, +5 V, GND, Status • 820 nm signals • 50/125 µ and 62.5/125 µ fibres • ST compatible connector on CM-0821
Optical interface (multimode fibre optic)	CM-2860	CM-0827	RJ45 connector to CM-0827 RXD, TXD, +5 V, GND, Status
Balanced interface RS-485 V.11 asynchronous	CM-2860 ^{a)} CM-5862 ^{b)}	CM-0829 CM-0819	<ul style="list-style-type: none"> • 50...115200 bps • Signals and levels according to V.11, RS-485 • RJ45 connector to CM-0819 or CM-0829 RXD, TXD, CTS, RTS, DCD, DTR, DSR/+5 V, GND • 5-pin terminals on CM-0819 and CM-0829 corresponds with SM-2541 operating mode 2a, V.11/RS-485 asynchronous
Unbalanced interchange circuit V.24/V.28 V.28 asynchronous	CM-2860 CM-5860 ^{B)}	-	<ul style="list-style-type: none"> • 50...115200 Bit/s • Signals and levels according to V.24, V.28, EIA-232 • RJ45 connector RXD, TXD, CTS, RTS, DCD, DTR, DSR/+5 V, GND • RJ45 pin assignment corresponds with SM-2541 operating mode 1a, V.28 asynchronous

1) extras is optional equipment

a) patch plug for SICAM AK, SICAM TM; AK 1703, AMC 1703, AM 1703, BC 1703

b) patch module for SICAM BC

2.3 Configuration

2.3.1 Communication

For the stations to communicate with each other, suitable transmission facilities and/or network components may be needed in addition.

Controlling station

System	System Element	Protocol Element	Note
SICAM AK	CP-2014/CPCX25 CP-2017/PCCX25	SM-2551/SFBMA1 SM-0551/SFBMA1	
SICAM BC	CP-5014/CPCX55	SM-2551/SFBMA1 SM-0551/SFBMA1	
SICAM TM	CP-6014/CPCX65	SM-2551/SFBMA1 SM-0551/SFBMA1	
Ax 1703	-	-	acc. to. SICAM RTUs Interoperability IEC 60870-5-101/104 or Ax 1703 Interoperability IEC 60870-5-101/104

Controlled Station

System	System Element	Protocol Element	Note
SICAM AK	CP-2014/CPCX25 CP-2017/PCCX25	SM-2551/SFBSA1 SM-0551/SFBSA1	
SICAM BC	CP-5014/CPCX55	SM-2551/SFBSA1 SM-0551/SFBSA1	
SICAM TM	CP-6014/CPCX65	SM-2551/SFBSA1 SM-0551/SFBSA1	
Ax 1703	-	-	acc. to. SICAM RTUs Interoperability IEC 60870-5-101/104 or Ax 1703 Interoperability IEC 60870-5-101/104

2.3.2 Hardware

2.3.2.1 SM-2551

The following table lists supported configurations. In addition to one (SI0/SI1 or SI2/SI3) or two (SI0/SI1 and SI2/SI3) SM-2551, all parts (carrier module, connection board, patch plug, etc.) listed for the chosen configuration are needed:

Configuration			Interfaces			
Carrier Module	Connection Board ¹⁾	Patch Plug ¹⁾	SI0	SI1	SI2	SI3
CP-2014	CM-2839	2)	✓	✓		
CP-2017	CM-2838	2)	✓	✓	✓	✓
CP-5014	one integrated patch module per SIx ³⁾		✓	✓		
CP-6014	-	2)	✓	✓	✓	✓

1) one connection board for each carrier module, one patch plug for each interface

2) see "Modes of Operation"

3) each variant of the SICAM BC which can be ordered comes with a determined patch module for each interface

2.3.2.2 SM-0551

The following table lists supported configurations. In addition SM-0551, all parts (SIM, carrier module, connection board, patch plug, etc.) listed for the chosen configuration are needed:

Configuration				Interfaces			
Carrier Module	SIM	Connection Board ¹⁾	Patch Plug ²⁾	SI0	SI1	SI2	SI3
CP-2014	4)	CM-2839	2)	✓	6)		
CP-2017	4)	CM-2838	2)	✓	6)	✓	6)
CP-5014	5)	one integrated patch module per SIx ³⁾		✓	6)		
CP-6014	4)	-	2)	✓	6)	✓	6)

1) one connection board for each carrier module, one patch plug for each interface

2) see "Modes of Operation"

3) each variant of the SICAM BC which can be ordered comes with a determined patch module for each interface

4) SM-2558 required, on which SM-0551 can be installed

5) SM-2546 or SM-2558 required, on which SM-0551 can be installed


6) interface is not operated by SM-0551 but directly by SM-2546 / SM-2558

2.4 Engineering



For diagnosis, testing, parameter setting or documentation, the system element is supported by the engineering tools of SICAM TOOLBOX II. OPM II is required.

2.5 Block Diagrams

2.5.1 SM-2551

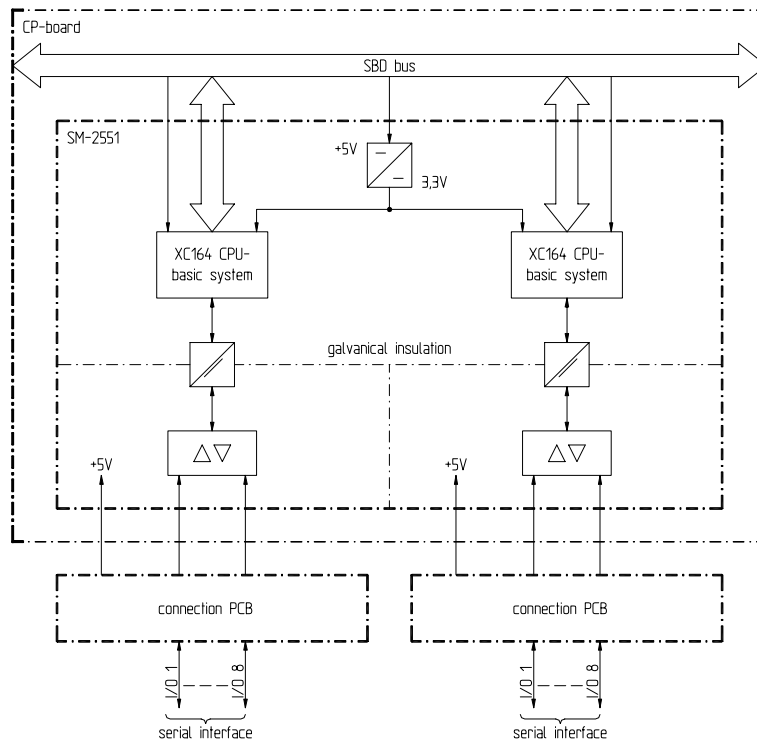

2.5.2 SM-0551

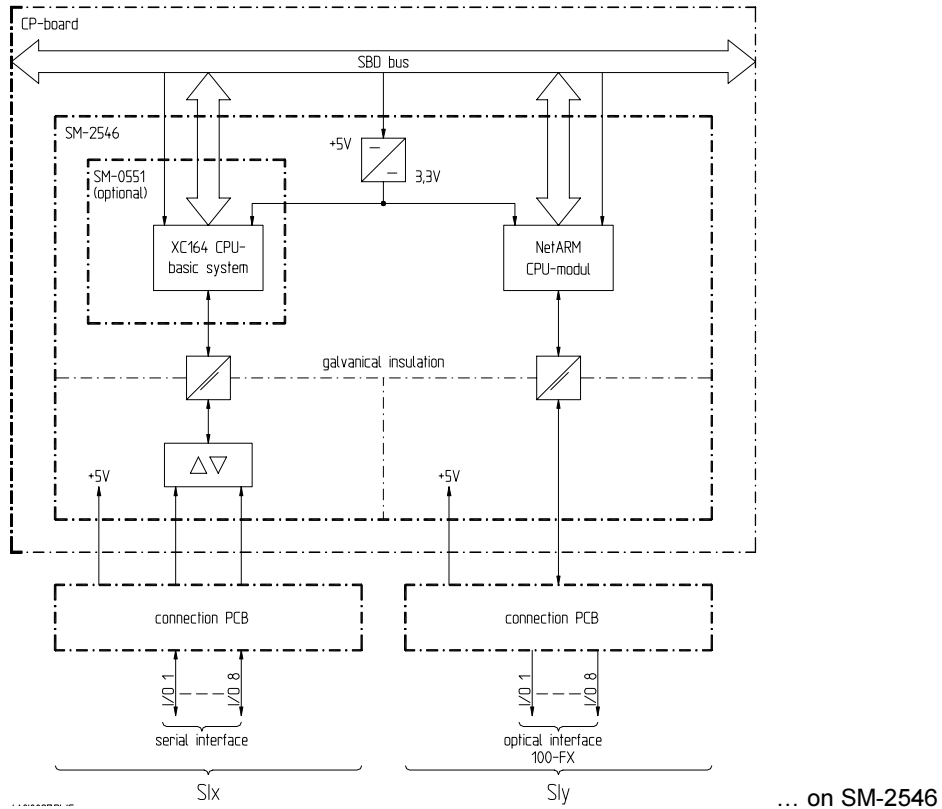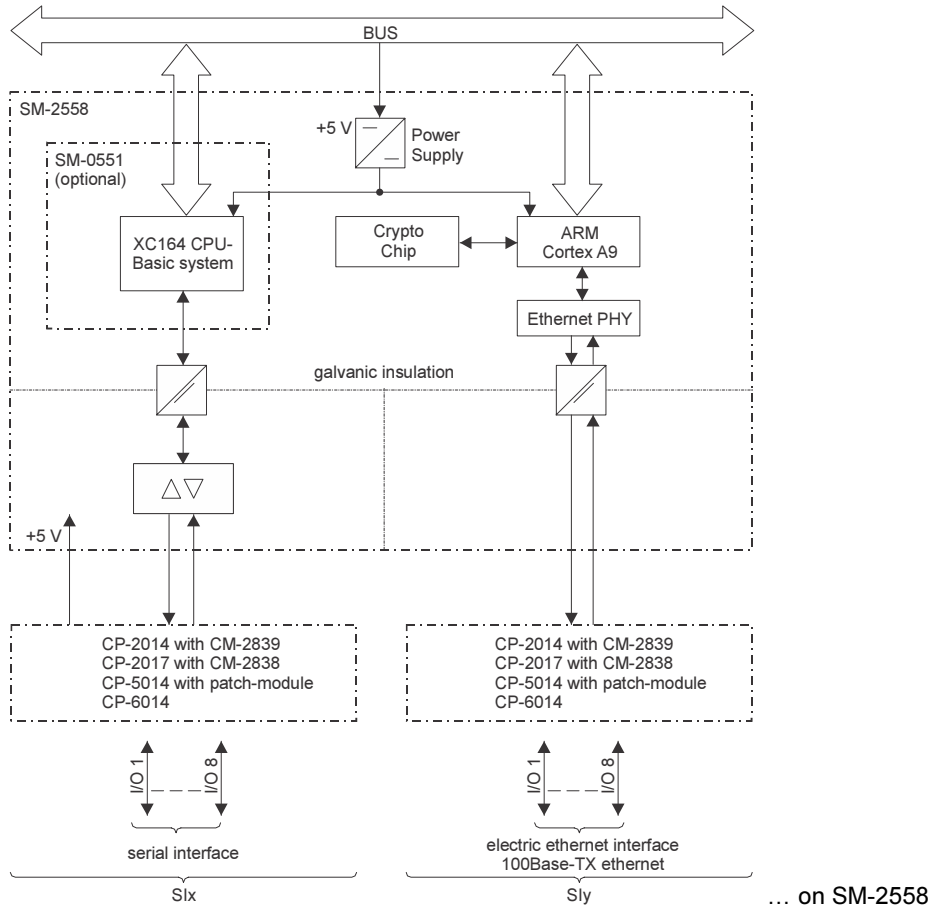

2.6 Technical Specifications

2.6.1 SM-2551

Communication Circuits	
2 serial interfaces	<ul style="list-style-type: none"> • Interface characteristics, interface signals, modes of operation, transmission rates <ul style="list-style-type: none"> – see description of the respective protocol, "Modes of operation" • Instead of the interface signal DSR the gate circuit voltage (+5 VDC) can be provided (settable) • Ability to be connected in parallel <ul style="list-style-type: none"> – outgoing interface signals in tristate technology – up to 2 interfaces can be connected in parallel – circuits for incoming interface signals always active • The signals are galvanically insulated from logic circuits • Line lengths V.28 <ul style="list-style-type: none"> – 50 bps up to 25 m – 115200 bps up to 5 m
Power supply	
Operating voltage	4.75...5.25 VDC, typ. 300 mA, max. 540 mA @5 V The voltage is supplied by the carrier module.
Gate circuit voltage +5 VDC instead of DSR	<ul style="list-style-type: none"> • Voltage 4.7...5.6 VDC • Max. output current 150 mA at U > 4.75 V • Max. output power 750 mW • Max. idle voltage ≤ 5.6V DC • Not short-circuit proof • Not overload proof • Galvanically insulated from logic voltage • The voltage (data circuit voltage) is supplied by the carrier module (galvanically insulated)
Mechanics	
Dimensions	227.3 x 63.5 mm
Weight	Approx. 200 g

2.6.2 SM-0551


Communication Circuits	
1 serial interface	<ul style="list-style-type: none"> • Interface characteristics, interface signals, modes of operation, transmission rates <ul style="list-style-type: none"> – see description of the respective protocol, "Modes of operation" • Instead of the interface signal DSR the gate circuit voltage (+5 VDC) can be provided (settable) • Ability to be connected in parallel <ul style="list-style-type: none"> – outgoing interface signals in tristate technology – up to 2 interfaces can be connected in parallel – circuits for incoming interface signals always active • The signals are galvanically insulated from logic circuits • Line lengths V.28 <ul style="list-style-type: none"> – 50 bps up to 25 m – 115200 bps up to 5 m
Power supply	
Operating voltage	4.75...5.25 VDC, typ. 25 mA, max. 50 mA @5 V 3.14...3.47 VDC, typ. 150 mA, max. 330 mA @3.3 V The voltage is supplied by the carrier module.
Gate circuit voltage +5 VDC instead of DSR	<ul style="list-style-type: none"> • Voltage 4.7...5.6 VDC • Max. output current 150 mA at U > 4.75 V • Max. output power 750 mW • Max. idle voltage ≤ 5.6 VDC • Not short-circuit proof • Not overload proof • Galvanically insulated from logic voltage • The voltage (data circuit voltage) is supplied by the carrier module (galvanically insulated)
Mechanics	
Dimensions	56 x 43 x 5,5 mm
Weight	Approx. 15 g

2.7 Status and Function Display


The protocol elements SM-x551/DIAxA0 itself have neither a front panel nor LED displays.

They use the LED displays on the master control- or communication elements, or, in case of SICAM BC, additional the displays on the operating panel. The meaning of these LED displays is described in the manual of the concerning system element.

Protocol elements – Mounting place and LED display SICAM AK/SICAM TM

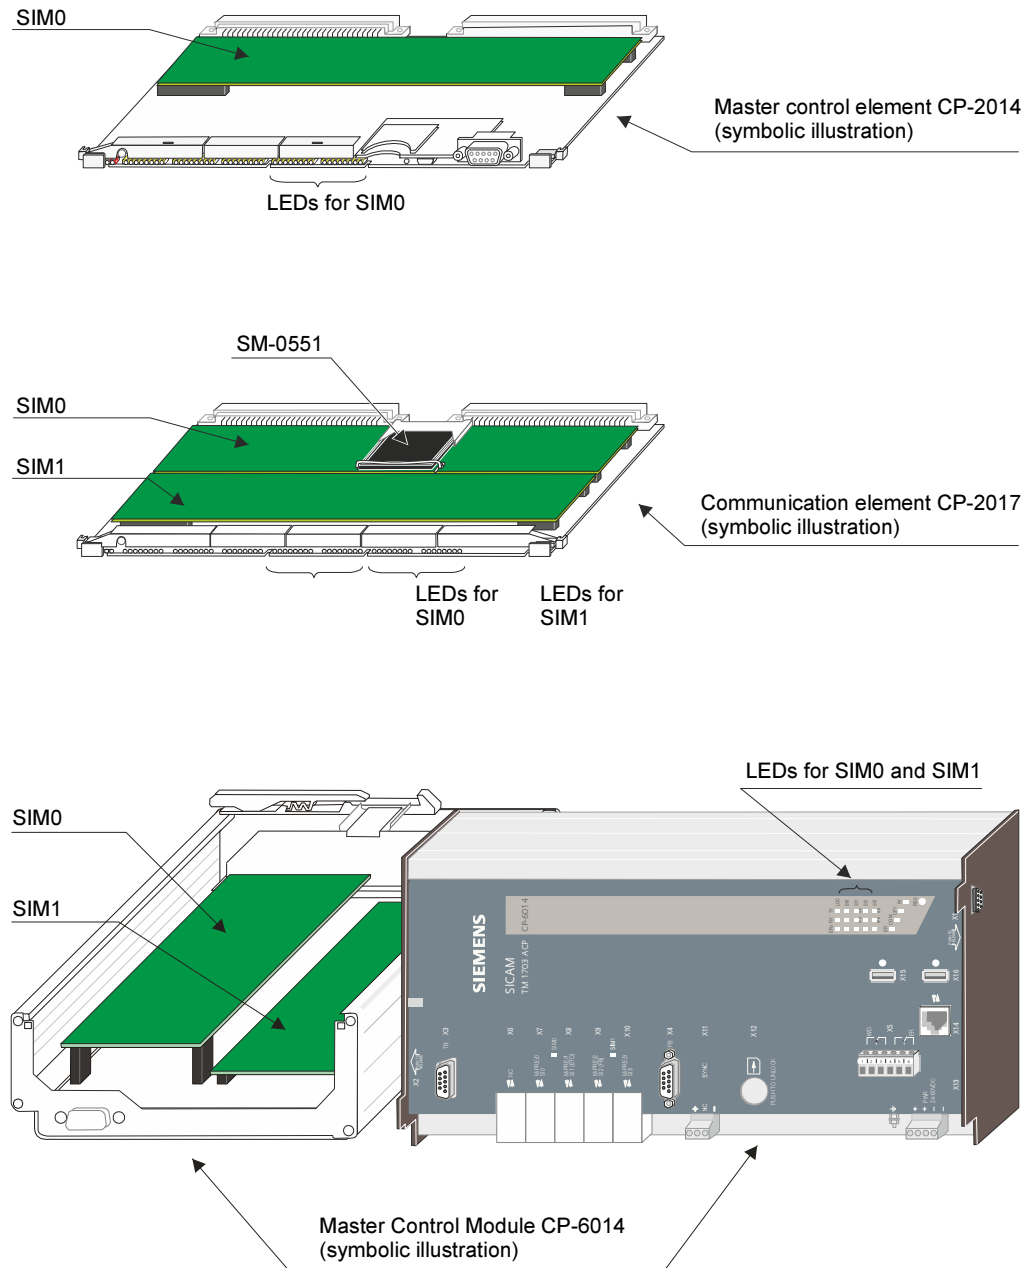

Protocol elements – Mounting place SICAM BC

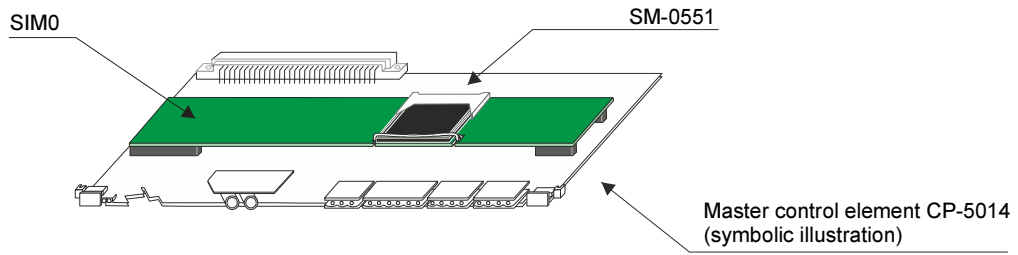

Note

SICAM BC has no LEDs for status and function display of protocol elements.

2.8 Pin Assignment

Operating mode		Pin Assignment (RJ45)		
Balanced interface RS-485 – V.11 asynchronous		pin	alias	signal
		1	I/O 1	
		2	I/O 2	RTS
		3	I/O 3	+5V
		4	I/O 4	TxD
		5	I/O 5	RxD
		6	I/O 6	GND
		7	I/O 7	
		8	I/O 8	
Optical interface (multimode fibre optic) – Ring		pin	alias	signal
		1	I/O 1	CTS
		2	I/O 2	TxD
		3	I/O 3	+5V
		4	I/O 4	TxD
		5	I/O 5	RxD
		6	I/O 6	GND
		7	I/O 7	RNGERR
		8	I/O 8	DTR

The abbreviations have the following meaning:


CTS serial interface (V.28) - clear to send
 RTS serial interface (V.28) - request to send
 DSR serial interface (V.28) - data set ready
 DCD serial interface (V.28) - data carrier detect
 DTR serial interface (V.28) - data terminal ready
 TxD serial interface (V.28) - transmit data
 RxD serial interface (V.28) - receive data
 GND serial interface (V.28) - signal ground
 +5V serial interface - +5V-supply
 TxC serial interface (V.28) - generated clock pulse
 RxC serial interface (V.28) - received clock pulse
 RNGERR . . signaling ring failure (in conjunction with CM-0821)
 MODE . . . operating mode V.28 on CM-0827

3 Order Information


Contents

3.1	System Element SM-2551.....	26
3.2	System Element SM-0551.....	27
3.3	Accessories	28

3.1 System Element SM-2551



	Designation	Item Number/MLFB
	SM-2551 Serial Interface Processor 2 serial interfaces	BC2-551 6MF10130CF510AA0

3.2 System Element SM-0551


	Designation SM-0551 Serial Interface Processor 1 serial interface	Item Number/MLFB BC0-551 6MF10130AF510AA0
---	--	--

3.2.1 Required for Installation

Prerequisite for the installation of SM-0551 is one of the following SIM:

	Designation SM-2558 Ethernet-Interface 1x100Base-TX +1 ser. interface (optional)	Item Number/MLFB BC2-558 6MF10130CF580AA0
	Designation SM-2546 Ethernet 100FX + 1 serial interface (optional)	Item Number/MLFB BC2-546 6MF10130CF460AA0

3.3 Accessories

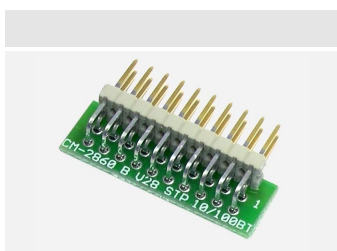

Designation	Item Number/MLFB
CM-2860 Patch Plug standard V28, ET, TR	CA2-860 6MF12110CJ600AA0