


RWD82 Universal Controller

Room temperature control
 Hot water control valve
 Chilled water control valve

**Application 41
 Remote set point**

- Control 2 stage on / off (2 position)
- Room temperature control
- 2 position control of the hot water control valve
- 2 position control of the chilled water control valve
- Remote set point adjustment
- Optional day / night set point adjustment .

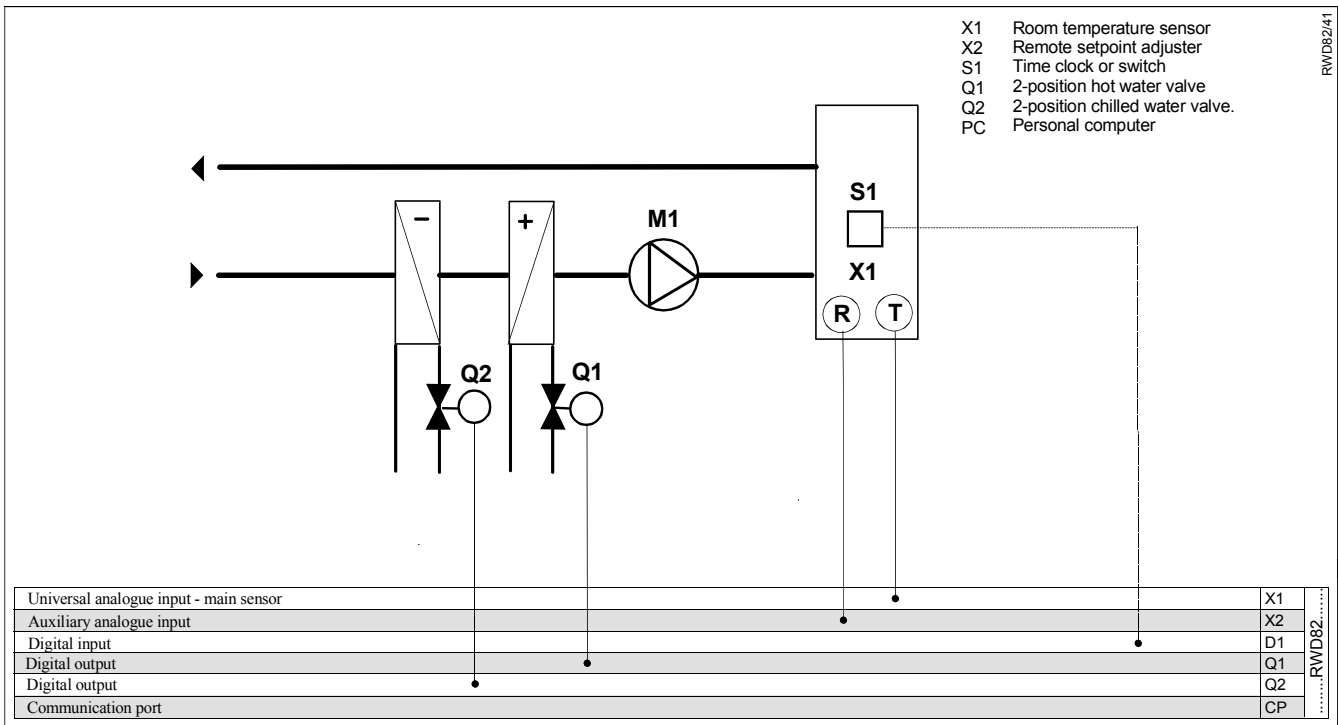

Supplemental features

Control

- Room temperature sensor can be selected as Ni1000, Pt1000, or active sensor.
- Adjustable dead zone with separate heating and cooling set points.
- Adjustable differential of digital output Q1.
- Adjustable differential of digital output Q2.
- 24Vac controller supply voltage
- 24Vac two position control valves
- Remote set point adjustment via auxiliary analogue input X2.

Operating modes

- Day / night set points can be selected via time clock or switch.

Description of operation


The temperature sensor senses the room conditions and on a fall in temperature the RWD82 via Q1 digital output opens and closes the two position heating valve as determined by the heating set point and differential settings.

The temperature sensor senses the room conditions and on a rise in temperature the RWD82 via Q2 digital output opens and closes the two position chilled water valve as determined by the cooling set point and differential settings.


The remote set point adjuster is connected X2 and adjusts the day set point for Q1 output. Q2 set point is adjusted by XDZ that sets the dead zone between Q1 and Q2 set points. The night set points are set on the controller.

Function diagram

Heating and cooling sequences

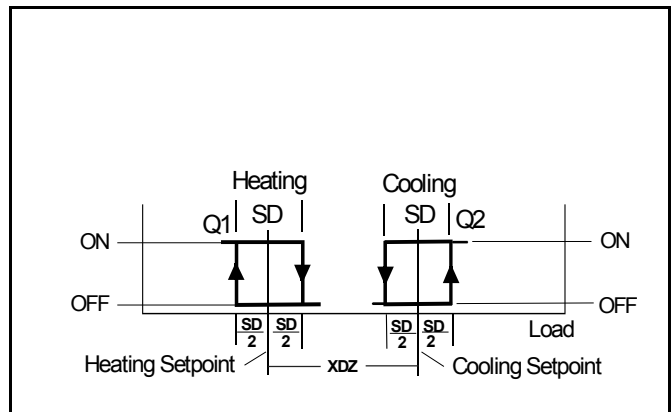

Connection diagram

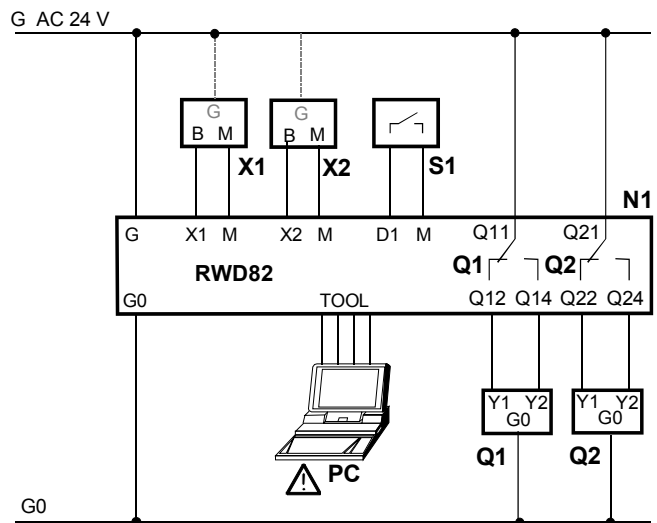

RWD82

- N1 RWD82 controller
- X1 Main temperature sensor
- X2 Remote set point adjuster
- S1 Time clock or switch
- Q1 24Vac two position control valve
- Q2 24Vac two position control valve
- PC Personal computer

Main Display

The main display shows ,

- a) Whether Q1 is On or Off (◻ = off, ◼ = on)
- b) Whether Q2 is On or Off (◻ = off, ◼ = on)
- c) Whether day or night set point is selected. (☒ = day, ☒ = night)
- d) X1 value (room temperature) in ° C.
- e) Auxiliary application selected (REM for remote set point adjustment)

Other displays are available by pressing the + button, and the various displays are listed below in sequence from the main display.

On entering any of the four set point displays, the setpoint on display can be adjusted by pushing the ● enter/save button, increase value by pressing the ▲ + button or decrease the value by pressing the ▼ – button, and when the required value is reached, press the ● enter/save button to save the new value.

The alternative displays return to the main display after 20 seconds duration.

Press buttons	Action	Current display	Selected display	Selected display comments
▲	Push + button	REM Q1 Q2 ☒ X1	Q1 SP – h ☒ 16.0c	Q1 heating night set point.
▲	Push + button	Q1 SP – h ☒ 16.0c	Q2 SP – c ☒ 32.0c	Q2 cooling night set point.
▲	Push + button	Q2 SP – c ☒ 32.0c	XDZ ☒ 3.0c	XDZ to set Q2 day set point
▲	Push + button	XDZ ☒ 3.0c	X1 18.0c	X1 - main temperature sensor reading
▲	Push + button	X1 18.0c	X2SP 21.0c	X2 - actual remote set point setting (Q1 day set point)
▲	Push + button	X2SP 21.0c	Q1 ON	Q1 – heating digital output, display on or off.
▲	Push + button	Q1 ON	Q2 OFF	Q2 – cooling digital output, display on or off.
▲	Push + button	Q2 OFF	REM ☐☐ 41	Control sequence diagram and application number display.
▲	Push + button	REM ☐☐ 41	REM Q1 Q2 ☒ X1	Back to main display

Values shown are either default values or nominated for information only

Alternatives

- 1) One stage electric heating and one stage of refrigerated cooling.
- 2) One stage of electric heating and two position control of chilled water valve.