



ACVATIX™

## Combi valves PN 25 with flanged connections VPF53..

Pressure Independent Combi Valves

- 
- With integrated pressure differential controller
  - Valve body made of nodular cast iron GJS-400-15
  - DN 50 - 150
  - Volumetric flow 15 to 195 m<sup>3</sup>/h nominal, with presetting
  - Equipped with pressure test points P/T
  - Can be equipped with SAX..P., SAV..P. or SQV..P. electromotoric actuators

### Use

---

- For use in heating, ventilating and air conditioning systems, district heating, as a control valve.
- For closed circuits.

## Type summary

	Product number	Stock number	DN	H <sub>100</sub> [mm]	$\dot{V}_{\min}^c$ [m <sup>3</sup> /h]	$\dot{V}_{100}^c$ [m <sup>3</sup> /h]	$\Delta p_{\min}$ [kPa]
Standard flow rate	VPF53.50F16	S55266-V112	50	20	2.3	15	See page 6 + 7
	VPF53.65F24	S55266-V114	65		4.4	25	
	VPF53.80F35	S55266-V116	80		5.3	34	
	VPF53. 100F70	S55266-V118	100	40	12.1	68	
	VPF53. 125F110	S55266-V120	125		18.5	110	
	VPF53. 150F160	S55266-V122	150		43	25.6	
High flow rate	VPF53.50F25	S55266-V113	50	20	4.3	25	See page 6 + 7
	VPF53.65F35	S55266-V115	65		6	35	
	VPF53.80F45	S55266-V117	80		7	43	
	VPF53. 100F90	S55266-V119	100	40	14.8	90	
	VPF53. 125F135	S55266-V121	125		23	135	
	VPF53. 150F200	S55266-V123	150		43	32	

DN = nominal size

H<sub>100</sub> = nominal stroke

$\dot{V}_{100}^c$  = volumetric flow through fully open valve (H<sub>100</sub>)

$\dot{V}_{\min}^c$  = smallest presettable volumetric flow through fully open valve (H<sub>100</sub>)

$\Delta p_{\min}$  = minimum differential pressure required across the valve's control path, so that the difference pressure regulator works reliably

## Ordering

Example:

Product number	Stock number	Designation
VPF53.65F24	S55266-V114	Combi valve PN 25 with flanged connections

Delivery

Combi valves, actuators and accessories are packed and supplied separately. The valves are supplied without counter-flanges and without flange gaskets.

Revision numbers

See page 13

## Equipment combinations

Valves				Actuators					
				SAX..P..		SQV..P..		SAV..P..	
		DN	H <sub>100</sub> [mm]	Δp <sub>max</sub> [kPa]	Δp <sub>s</sub> [kPa]	Δp <sub>max</sub> [kPa]	Δp <sub>s</sub> [kPa]	Δp <sub>max</sub> [kPa]	Δp <sub>s</sub> [kPa]
Standard flow rate	VPF53.50F16	50	20	600	600	600	600	-	-
	VPF53.65F24	65		600	600	600	600	-	-
	VPF53.80F35	80		600	600	600	600	-	-
	VPF53.100F70	100	40	-	-	600	600	600	600
	VPF53.125F110	125		-	-	600	600	600	600
	VPF53.150F160	150		43	-	-	600	600	600

High flow rate	VPF53.50F25	50	20	600	600	600	600	-	-
	VPF53.65F35	65		600	600	600	600	-	-
	VPF53.80F45	80		600	600	600	600	-	-
	VPF53.100F90	100	40	-	-	600	600	600	600
	VPF53.125F135	125		-	-	600	600	600	600
	VPF53.150F200	150		43	-	-	600	600	600

H<sub>100</sub> = nominal stroke

Δp<sub>max</sub> = maximum permissible differential pressure across the valve's control path, valid for the entire actuating range of the motorized valve

Δp<sub>s</sub> = maximum permissible differential pressure at which the motorized Combi valve will close securely against the pressure (close off pressure)

## Actuator overview

Type	Stock no.	Stroke	Pos. force	Operating voltage	Positioning signal	Spring return time	Spring return direction	Pos. time	LED	Manual adjuster	Extra functions
SAX31P03	S55150-A118	20 mm	500 N	AC 230 V	3-position	-	-	30 s	-	Push and fix	1)
SAX61P03	S55150-A114			AC/DC 24 V	DC 0...10 V DC 4...20 mA 0...1000 Ω				✓		2), 3)
SAX81P03	S55150-A116			3-position	3-position				-		1)

SQV91P30	S55150-A130	20 mm 40 mm	1100 N	AC/DC 24 V AC 230 V <sup>4)</sup>	3-position DC 0...10 V DC 4...20 mA	30 s	Pull to open or push to close <sup>5)</sup>	< 120 s <sup>5)</sup>	✓	Turn and fix	1), 6)
SQV91P40	S55150-A131										

SAV31P00	S55150-A121	40 mm	1100 N	AC 230 V	3-position	-	-	120 s	-	Push and fix	1)
SAV61P00	S55150-A119			AC/DC 24 V	DC 0...10 V DC 4...20 mA 0...1000 Ω				✓		2), 3)
SAV81P00	S55150-A120			3-position	3-position				-		1)

1) Optional accessories: Auxiliary switch, potentiometer


2) Position feedback, forced control, change of flow characteristic

3) Optional accessories: Auxiliary switch, sequence control, acting direction


4) Voltage adapter required, order separately

5) Selectable

6) Position feedback

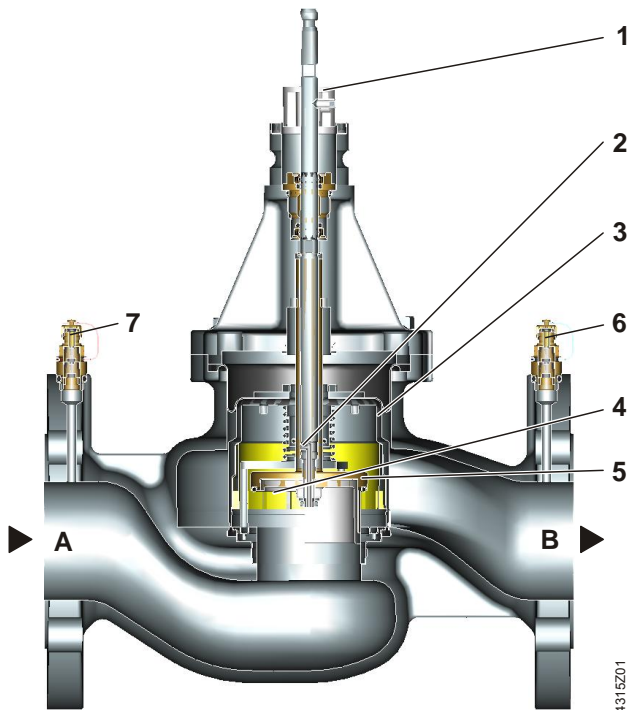

1 Ring with dial for presetting

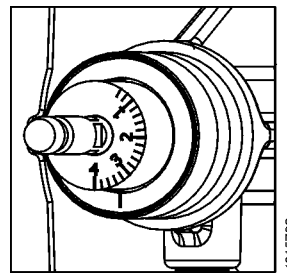


- 2 Aperture for the differential pressure controller is linked with outlet port B
  - 3 Differential pressure controller
  - 4 Plug with variable presetting opening
  - 5 Control valve
  - 6 Pressure test point (P/T) at outlet port B, blue ribbon, P-
  - 7 Pressure test point (P/T) at inlet port A, red ribbon, P+
- A Inlet port A  
B Outlet port B

**Functional principle**

The Combi valves VPF53.. combine three functions:

- a control valve (5) for controlling the volumetric flow,
- an adjusting mechanism (1, 4) with a dial for a presettable maximum volumetric flow,
- a differential pressure controller (3) for balancing pressure fluctuations in the hydraulic system respectively across the control valve.

The mechanical series-connected differential pressure controller keeps the differential pressure ( $p_1 - p_2$ ) constant across the control valve and thus the set volumetric flow too. The desired maximum volumetric flow can be preset with the adjusting mechanism. The controller (not shown) and the actuator regulate the volumetric flow and consequently the desired temperature in buildings, rooms or zones.

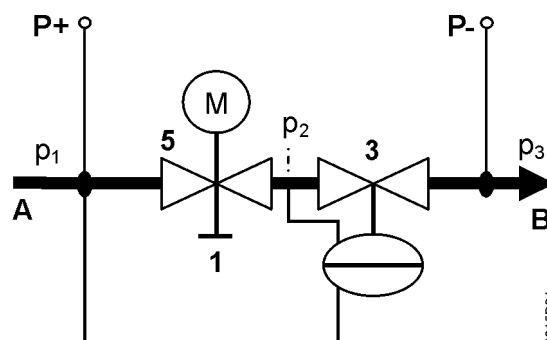

- A Inlet medium (inlet port A)
- B Outlet medium (outlet port B)
- 1 Ring with dial for presetting
- 3 Differential pressure controller
- 5 Control valve with mounted actuator

- P- = P/T port, pressure test point with blue ribbon (6)
- P+ = P/T port, pressure test point with red ribbon (7)
- $p_1$  = pressure at inlet port A of Combi valve
- $p_2$  = pressure at outlet port of control valve (5)
- $p_3$  = pressure at outlet port B of Combi valve

Medium flow The medium entering the Combi valve (inlet port A) first passes through the control valve (5) with a linear characteristic and a stroke of 20 mm (DN 50...80) respectively 40 mm (DN 100...150). The actuator (not shown here) opens and accurately positions the control valve. Then, the medium flows through the variable presetting opening (4) which is connected to the ring with dial (1) for presetting the desired maximum volumetric flow.

Before leaving the Combi valve (outlet port B), the medium passes through a built-in mechanical differential pressure controller (3). This differential pressure controller is the heart of the Combi valve and ensures that the selected volumetric flow is maintained across the whole working range and independent of the inlet pressure  $p_1$ .

Pressure test points The Combi valve VPF53.. is equipped with two pressure test points (P+, P-) for measuring and monitoring the differential pressure across the valve during commissioning. For that purpose, the electronic manometer ALE10 can be used.

Manual control Manual control is only possible with mounted actuator.







### Advantages

The advantages of Combi valves are that:

- once the flow limiter is set to design flow, the hydraulic circuit self balances, even when changes to the system are made, such as additions.
- for any heat demand the Combi valve with mounted actuator can be set to the desired volumetric flow and will be relatively constant regardless of pressure fluctuations in the system.

Constant flow regardless of pressure changes in the system reduces hydraulic interdependence and leads to a more stable control.

### Accessories

Product no.	Stock no.		Beschreibung
ALE10	ALE10		Electronic manometer <b>excluding</b> measuring lines and measuring tips. For measuring the differential pressure between P+ and P- of the Combi valves (refer to diagram under "Functional principle" on page 4). Measuring range 0 ... 700 kPa. A differential pressure of more than 1000 kPa will destroy the pressure sensor. Functions of the manometer: <ul style="list-style-type: none"> <li>• Start/stop</li> <li>• Automatic zero position</li> <li>• Backlit display</li> <li>• Display: Out → outside the measuring range</li> <li>• Holding function</li> </ul>
ALE11	ALE11		Measuring lines and straight measuring tips for use with Siemens Combi valves. Equipped with G 1/8" connection with 2 x 40 mm needles.
ALP46	S55264-V115		Blanking plugs for P/T ports Connection to valve body: G 1/4" to ISO 228, inclusive O-ring
ALP47	S55264-V116		Drain ball valve inclusive O-ring Port: External threads G 1/2" to ISO 228 Connection to valve body: G 1/4" to ISO 228, inclusive O-ring
ALP48	S55264-V117		Combined P/T port and drain ball valve with blue ribbon Port: External threads G 1/6" to ISO 228 Connection to valve body: G 1/4" to ISO 228, inclusive O-ring
LP49	S55264-V118		Long P/T ports (set of 2 pieces) Set contains 1 piece each with a red and blue ribbon. Port: External threads G 1/6" to ISO 228 Connection to valve body: G 1/4" to ISO 228, inclusive O-ring

**Engineering example**

**Basis of design**

1. Determine heat demand Q [kW]
2. Determine temperature spread ΔT [K]
3. Calculate volumetric flow
 
$$\dot{V} = \frac{Q[\text{kW}] \cdot 1000}{1.163 \cdot \Delta T [\text{K}]} \left[ \frac{\text{l}}{\text{h}} \right]$$
4. Select suitable Combi valve VPF53..
5. Determine dial setting using volumetric flow/dial presetting tables, see below.

**Example**

1. Heat demand Q = 150 kW
2. Temperature spread ΔT = 6 K
3. Volumetric flow
 
$$\dot{V} = \frac{150 \text{ kW} \cdot 1000}{1.163 \cdot 6 \text{ K}} = 21654 \text{ l/h} = 21.6 \text{ m}^3/\text{h}$$

Hint: You can also determine the volumetric flow using the valve slide rule.

4. Select Combi valve VPF53..  
Ideally, Combi valves should be selected such that they operate at about 80% of their maximum flow, enabling them to deliver spare capacity, if required.  
Selection: VPF53.65F24 Δp<sub>min</sub> = 35 kPa  
VPF53.65F35 Δp<sub>min</sub> = 70 kPa
5. Determine dial setting using volumetric flow/dial presetting tables:
 

VPF53.65F24	Volumetric flow	21.6 m <sup>3</sup> /h
	Dial setting	3.6
VPF53.65F35	Volumetric flow	21.6 m <sup>3</sup> /h
	Dial setting	2.7

**Volumetric flow/dial presetting**

Tables to determine the dial setting for a desired volumetric flow.  
Dp min [kPa] based on volumetric flow; interpolate missing values.

	Presetting range linear to VDI/VDE 2173
	Presetting range linear
	Presetting range not permitted
	Nominal flow

**Standard flow rate**

**VPF53.50F16**

**16 m<sup>3</sup>/h nominal**

ṽ [m <sup>3</sup> /h]				2.5	3.2	3.8	4.5	5.3	6	6.8	7.5	8.3	9	9.8	10.5	11.3	12	12.8	13.5	14.3	<b>15</b>
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>
Δpmin [kPa]				6.5	6.5	6.5	6.8	7.1	7.4	7.7	8.0	8.8	9.6	10.4	11.2	12.0	13.5	15.2	16.8	18.5	<b>20</b>

**VPF53.65F24**

**24 m<sup>3</sup>/h nominal**

ṽ [m <sup>3</sup> /h]				4.4	5.6	6.6	7.7	8.6	9.6	10.5	11.5	12.5	13.5	14.7	15.8	17.1	18.5	19.9	21.5	23.2	<b>25</b>
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>
Δpmin [kPa]				15.0	15.0	15	15.7	16.2	16.8	17.4	18.0	18.4	18.7	19.1	19.5	20.0	20.9	21.8	22.8	23.9	<b>25</b>

**VPF53.80F35**

**35 m<sup>3</sup>/h nominal**

ṽ [m <sup>3</sup> /h]				5.3	6.9	8.3	9.6	10.9	12.2	13.5	14.8	16.2	17.6	19.1	20.7	22.4	24.3	26.4	28.7	31.2	<b>34</b>
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>
Δpmin [kPa]				16.0	16.0	16	16.4	16.8	17.2	17.6	18.0	18.4	18.7	19.1	19.6	20.0	20.8	21.7	22.7	23.8	<b>25</b>

**VPF53.100F70**

**70 m<sup>3</sup>/h nominal**

ṽ [m <sup>3</sup> /h]				12.1	15	18	21	23	25	28	30	32	35	38	40	43	47	51	56	62	<b>68</b>
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>
Δpmin [kPa]				19.0	19.0	20.0	20.5	20.8	21.2	21.7	22.0	22.5	23.2	23.8	24.3	25.0	26.6	28.2	30.2	32.6	<b>35</b>

<b>VPF53.125F110</b>																			<b>110 m<sup>3</sup>/h nominal</b>			
$\dot{V}$ [m <sup>3</sup> /h]				18.5	23	28	33	37	42	46	51	55	60	65	69	74	80	85	92	99	<b>110</b>	
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>	
$\Delta p_{min}$ [kPa]				16.0	16.0	16.0	16.4	16.8	17.2	17.6	18.0	18.5	19.2	19.8	20.3	21.0	23.3	25.3	28.0	30.7	<b>35</b>	

<b>VPF53.150F160</b>																			<b>160 m<sup>3</sup>/h nominal</b>			
$\dot{V}$ [m <sup>3</sup> /h]				25.6	31	38	44	51	57	63	72	76	82	89	96	104	111	120	128	137	<b>148</b>	
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>	
$\Delta p_{min}$ [kPa]				21.0	21.0	21.0	21.2	21.4	21.6	21.7	22.0	23.0	24.5	26.3	28.0	30.0	30.8	31.8	32.7	33.8	<b>35</b>	

### High flow rate

<b>VPF53.50F25</b>																			<b>25 m<sup>3</sup>/h nominal</b>			
$\dot{V}$ [m <sup>3</sup> /h]				4.3	5.2	6.2	7.2	8.1	9	10	11	12.1	13.2	14.3	15.4	16.5	18.2	19.9	21.6	23.3	<b>25</b>	
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>	
$\Delta p_{min}$ [kPa]				19.0	19.0	19	19.4	19.8	20.2	20.6	21.0	22.8	24.6	26.4	28.2	30.0	34.0	38.0	42.0	46.0	<b>50</b>	

<b>VPF53.65F35</b>																			<b>35 m<sup>3</sup>/h nominal</b>			
$\dot{V}$ [m <sup>3</sup> /h]				6.0	7.6	9.1	10.5	11.9	13.3	14.7	16.0	17.5	19.0	20.6	22.3	24.1	26.0	28.0	30.2	32.5	<b>35</b>	
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>	
$\Delta p_{min}$ [kPa]				30.0	30.0	30	30.4	30.8	31.2	31.6	32.0	32.6	33.1	33.7	34.3	35.0	38.5	42.2	46.2	50.4	<b>55</b>	


<b>VPF53.80F45</b>																			<b>45 m<sup>3</sup>/h nominal</b>			
$\dot{V}$ [m <sup>3</sup> /h]				7	9	11	12.8	14.5	16.2	18	19.6	21.4	23.2	25.1	27.1	29.3	31.6	34.1	36.8	39.8	<b>43</b>	
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>	
$\Delta p_{min}$ [kPa]				23.0	23.0	23	23.4	23.8	24.2	24.6	25.0	25.9	26.9	27.8	28.9	30.0	33.4	37.0	40.9	45.3	<b>50</b>	

<b>VPF53.100F90</b>																			<b>90 m<sup>3</sup>/h nominal</b>			
$\dot{V}$ [m <sup>3</sup> /h]				14.8	19	22	26	29	32	35	38	42	44	48	52	56	61	66	73	81	<b>90</b>	
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>	
$\Delta p_{min}$ [kPa]				29.0	29.0	30.0	31.3	32.2	33.1	34.1	35.0	37.2	38.3	40.6	42.8	45.0	49.4	53.8	60.0	67.1	<b>75</b>	

<b>VPF53.125F135</b>																			<b>135 m<sup>3</sup>/h nominal</b>			
$\dot{V}$ [m <sup>3</sup> /h]				23	29	36	42	48	53	59	64	70	76	81	87	93	100	107	114	122	<b>135</b>	
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>	
$\Delta p_{min}$ [kPa]				27.0	27.0	27.0	27.4	27.9	28.2	28.6	29.0	29.8	30.7	31.3	32.2	33.0	36.3	39.7	43.0	46.8	<b>53</b>	

<b>VPF53.150F200</b>																			<b>200 m<sup>3</sup>/h nominal</b>			
$\dot{V}$ [m <sup>3</sup> /h]				32	40	48	57	64	72	80	88	96	104	112	121	131	141	152	165	178	<b>195</b>	
Dial	Min.	0.2	0.4	0.6	0.8	1	1.2	1.4	1.6	1.8	2	2.2	2.4	2.6	2.8	3	3.2	3.4	3.6	3.8	<b>4</b>	
$\Delta p_{min}$ [kPa]				33.0	33.0	33.0	33.2	33.4	33.6	33.8	34.0	36.2	38.5	40.7	43.2	46.0	49.0	52.2	56.1	60.0	<b>65</b>	

## Engineering notes


Valve	Symbols / Direction of flow VPF53..	Flow in control mode	Valve stem	
			retracts	extends
Combi valve		variable	closes	opens



**The direction of flow indicated (arrow on the valve body) is mandatory!**

The valves should preferably be mounted in the return pipe where temperatures are lower and where the sealing gland is less affected by strain.

Symbol

Symbol used in catalogs and application descriptions	Symbol used in diagrams
	There are no standard symbols for Combi valves in diagrams.

Recommendation

A strainer or dirt trap should be fitted upstream of the valve to enhance reliability and service life.


Remove dirt, welding beads etc. from valves and pipes.

Do not insulate the actuator bracket, as air circulation must be ensured.

## Mounting notes

Combi valve and actuator can be easily assembled on site. Neither special tools nor adjustments, besides the presetting, are required. Prior to mounting the actuator, the required volumetric flow must be set. The valve is supplied with Mounting Instructions 74 319 0711 0.

Mounting positions

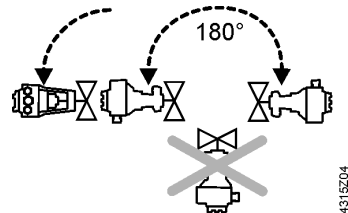




## Installation notes

### Presetting

It is recommended to mount the actuator before the presetting is made.


1. Mount actuator and fix valve neck coupling
2. Mount valve stem coupling and tighten slightly
3. Make presetting according to table under "Volumetric flow/dial presetting" on page 6. Do NOT adjust presetting to a dial reading lower than "0.6".
4. Tighten stem coupling

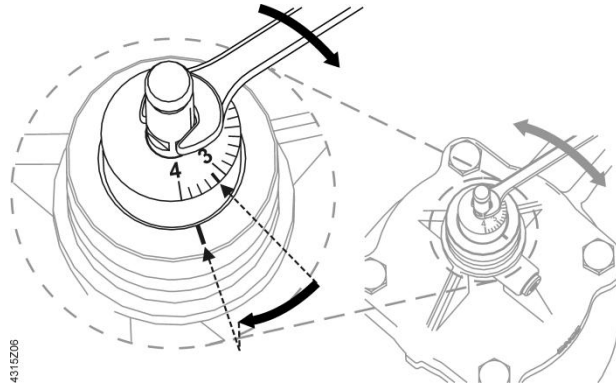

8 mm


Using an open-end wrench and turn the stem with dial to the desired presetting position.

### Valve characteristic

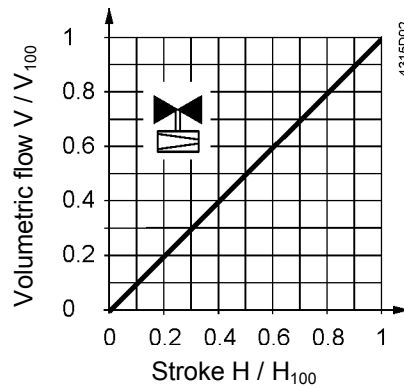

### Working pressure and medium temperature

Fluids

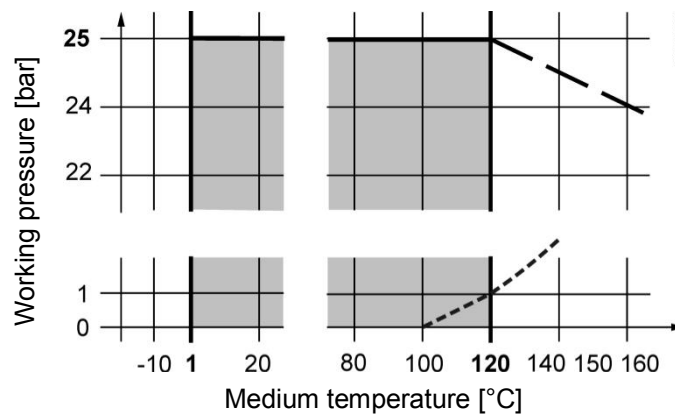

--- Curve for saturated steam; steam forms below this line

Note: for DN 150: max. medium temperature is 110°C.




### Working pressure and medium temperature staged as per ISO 7005



Current local legislation must be observed.

## Commissioning notes

---


-  **The valves must be commissioned with the actuator correctly fitted. Strong pressure impacts can damage closed Combi valves.**
-  **The Combi valves have to be open when flushing or pressure testing the system. Strong pressure impacts can damage closed Combi valves.**
-  **Differential pressure  $\Delta p_{\max}$  across the valve's control path is not allowed to exceed 600 kPa.**

**Manual control** Only possible with mounted actuator.

## Maintenance notes

---

The VPF53.. Combi valves are maintenance-free.

-  When performing service work on the valve or actuator:
  - Switch off the pump and disconnect power supply.
  - Close the shut-off valves in the piping network.
  - Fully reduce pressure in the piping network and allow the pipes to cool down completely.

Remove the electrical connections only if necessary.

**Sealing gland** The stem sealing gland cannot be exchanged. In case of leakage the whole valve must be replaced.

**Disposal** Do not dispose of the device as household waste.

- Special handling of individual components may be mandated by law or make ecological sense.
- Observe all local and currently applicable laws and regulations.

## Warranty

---

Application-related technical data are guaranteed only when the valves are used in connection with the Siemens actuators listed under "Equipment combinations" on page 3.

Siemens warranty is void, if used with non-Siemens actuators.

## Technical data

Functional data	PN class	PN 25 as per EN 1333
	Permissible operating pressure	2500 kPa (25 bar) as per ISO 7628 / EN 1333
	Volumetric flow deviation	< ±10% within differential pressure range
	Valve characteristic	Linear as per VDI/VDE 2173
	Leakage rate	Class IV (0...0.01% of volumetric flow $v_{100}$ ) to EN 1349
	Operating direction	Normally open (push to close)
	Permissible media	Low temperature hot water, medium temperature hot water, chilled water, water with antifreeze Recommendation: Water treatment to VDI 2035
	Medium temperature	1...120 °C (DN150; 110 °C)
	Rangeability	1:100
	Nominal stroke	DN 50, 65, 80 20 mm DN 100, 125 40 mm DN 150 43 mm
Standards, directives and approvals	EU Conformity (CE)	CE1T4315xx <sup>1)</sup>
	EAC conformity	Eurasia conformity
	Pressure Equipment Directive	PED 2014/68/EU
	Pressure Accessories	Scope: Article 1, section 1 Definitions: Article 2, section 5
	Fluid group 2	DN 50 Without CE-marking as per article 4, section 3 (sound engineering practice) <sup>2)</sup> DN 65...150 Category I, module A, with CE-marking as per article 14, section 2
	Environmental compatibility	The product environmental declaration CE1E4315en <sup>1)</sup> contains data on environmentally compatible product design and assessments (RoHS compliance, materials composition, packaging, environmental benefit, disposal).

<sup>1)</sup> The documents can be downloaded from <http://siemens.com/bt/download>.

<sup>2)</sup> Valves where PS x DN < 1000, do not require special testing and cannot carry the CE label.


Materials	Valve body	Nodular cast iron GJS-400		
	Stem, spring	Stainless steel		
	Trim	Brass (DZR)		
	Regulator	Stainless steel		
	Seals	EPDM		
Dimensions / weight	Dimensions	Refer to "Dimensions" on page 13		
	Flange connections	To ISO 7005-2		
	Pressure test points (P/T-ports)	G ¼ inch (connection)		
		2 mm x 40 mm (measuring tips)		
	Weight	Refer to "Dimensions" on page 13		
General ambient conditions		<b>Operation</b> EN 60721-3-3	<b>Transport</b> EN 60721-3-2	<b>Storage</b> EN 60721-3-1
	Environmental conditions	Class 3K5	Class 2K3	Class 1K3
	Temperature	0...55 °C	-30...65 °C	-15...50 °C
	Humidity	5...95 % r.h.	< 95 % r.h.	5...95 % r.h.

### Application examples

It is recommended to use Combi valves in plants with variable speed pumps. When sizing the pump, it must be made certain that the most critical branch or consumer in the system – usually the remotest from the pump – gets enough pressure (pump head).

## Dimensions

Dimensions in mm, weight in kg

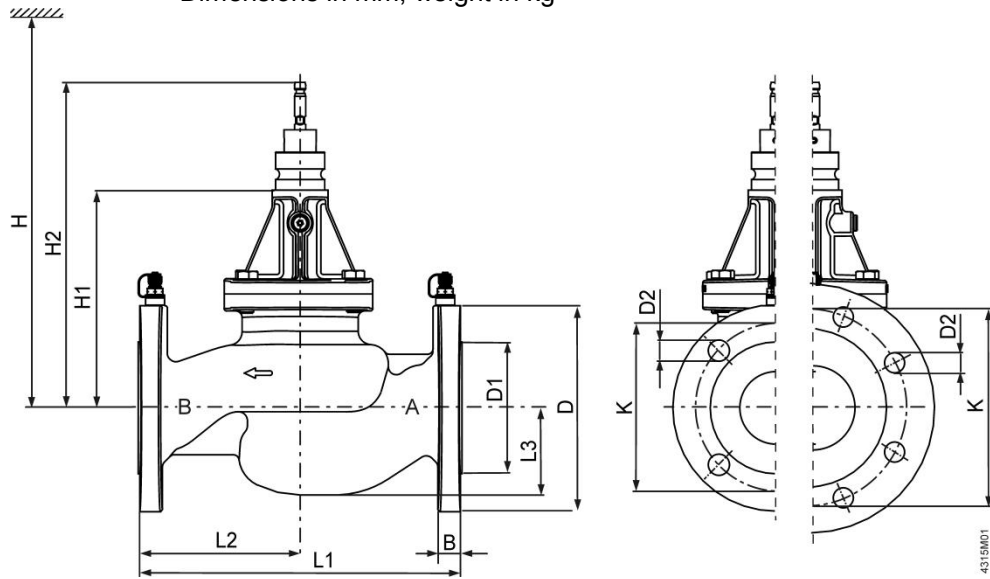

Product number	DN	B	Ø D	Ø D1	Ø D2	L1	L2	L3	Ø K	H1	H2	H		kg
												SAX..P <sup>1)</sup> SAV..P <sup>1)</sup>	SQV..P	
VPF53..	50	16	165	99	19 (4x)	230	115	65	125	187.5	284	630	577	14
	65	17	185	118	19 (8x)	290	145	80	145	195	271,5	637	584	19
	80	17	200	132	19 (8x)	310	155	93	160	216.5	313	659	606	27
	100	20	235	156	23 (8x)	350	162	111	190	332	449	800	720	50
	125	25	270	186	27 (8x)	400	192	134	220	357	474	820	750	77
	150	26	285	211	27 (8x)	480	230	156	250	401	521	870	790	111

DN = Nominal size

H = Total actuator height plus minimum distance to the wall or the ceiling for mounting, connection, operation, maintenance etc.

H1 = Dimension from the pipe center to install the actuator (upper edge)

H2 = Valve in the « OPEN » position means that the valve stem is fully extended.

1) SAX..P for DN50- 80; SAV..P for DN100- 150

## Revision Numbers

Product number	Valid from rev. no.	Product number	Valid from rev. no.
VPF53.50F16	..A	VPF53.50F25	..A
VPF53.65F24	..A	VPF53.65F35	..A
VPF53.80F35	..A	VPF53.80F45	..A
VPF53.100F70	..A	VPF53.100F90	..A
VPF53.125F110	..A	VPF53.125F135	..A
VPF53.150F160	..A	VPF53.150F200	..A

