

CATALOG NUMBER

ECLX069M

electricCenter

ACCESSORIES

Ground Bar Kit

7 Position

Same As:

- LX069M
- LX069MU



GROUND BAR INSTALLATION INSTRUCTIONS

⚠ DANGER

Hazardous Voltage.
Will cause death, serious injury or substantial property damage.

Turn off power supplying this equipment before working inside.

SAFETY INSTRUCTIONS

APPROXIMATE LOCATION* OF EQPT. GROUND BAR MTG. HOLES (2" CENTERS) WITHIN ENCLOSURE.



*NOTE: MAY VARY FROM ONE TO TWO PER DEVICE. "A" OR "D" MOST LIKELY OCCUR IN SMALL ENCLOSURES. "B" AND "C" COMBINATION ARE MORE TYPICAL.

REMOVE SCREWS, POSITION HOLES IN BRACKET OVER MTG. HOLES IN PANEL BACKWALL AND FASTEN DOWN.

IN SOME COMBINATION DEVICES, SCREWS ARE PROVIDED WITH DEVICE. IN THESE CASES, DISCARD SCREWS SUPPLIED WITH GROUNDING BAR, AND USE #8 SCREWS PROVIDED WITH DEVICE.

SEE WIRING DIAGRAM FOR WIRE RANGE SIZE AND TIGHTENING TORQUE REQUIREMENTS.

Note: This instruction outlines the recommended installation procedure.

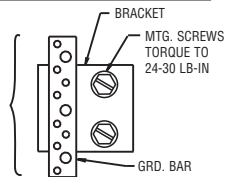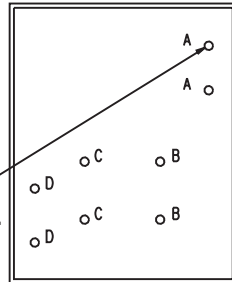

© 2010 Copyright Siemens Industry, Inc.

4810412 Rev.B

Siemens Industry, Inc.

Norcross, Georgia U.S.A.

Assembled in Mexico

De Barra De Tierra

7 Posición

electricCenter

ACCESSORIES

Lo Mismo:

- LX069M
- LX069MU

Instrucciones de Instalación



⚠ PELIGRO

Voltaje peligroso. Causará la muerte, lesiones graves o daño substancial a la propiedad.

Desconecte el suministro de energía a este equipo antes de trabajar en su interior.

Nota: Estas instrucciones describen el procedimiento de instalación recomendado.

⚠ INSTRUCCIONES DE SEGURIDAD



POSICION APROXIMADA* DE LOS AGUJEROS DE MONTAJE PARA LA BARRA DE CONEXION A TIERRA (2 PULGADAS ENTRE CENTROS) DENTRO DEL CAJETIN O TABLERO.

*NOTA: PUEDE VARIAR DE UNO A DOS POR APARATO. "A" O "D" OCURREN MAS FRECUENTEMENTE EN CAJETINES PEQUEÑOS. COMBINACIONES "B" Y "C" SON MAS TÍPICAS.

REMUEVA LOS TORNILLOS, COLOQUE LOS AGUJEROS DEL SOPORTE SOBRE LOS AGUJEROS DE MONTAJE EN LA PARED POSTERIOR DEL TABLERO Y COLOQUE LOS TORNILLOS.

EN ALGUNAS COMBINACIONES DE APARATOS, LOS TORNILLOS SON SUMINISTRADOS CON EL MISMO. EN ESTOS CASOS, NO UTILICE LOS TORNILLOS SUMINISTRADOS CON LA BARRA DE CONEXION A TIERRA. UTILICE LOS TORNILLOS #8 SUMINISTRADOS CON EL APARATO.

LAS TORSIONES Y LOS CALIBRES DE CABLES ESTÁN INDICADOS EN EL DIAGRAMA DE CABLEADO DEL DISPOSITIVO.

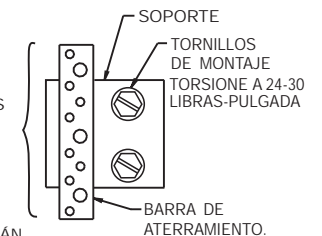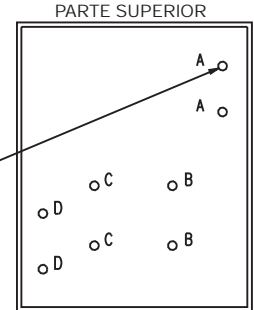

Siemens Industry, Inc.

Norcross, Georgia U.S.A.

Assembled in Mexico