


# SIEMENS

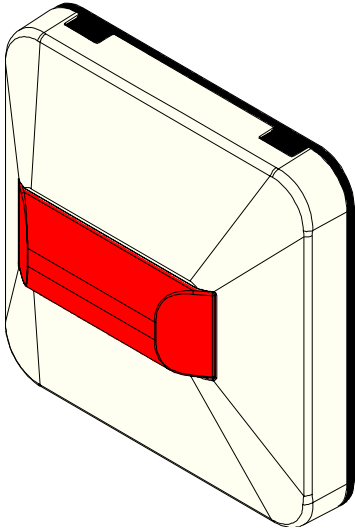

## FDCAI221

### Addressable alarm indicator

### Technical Manual

## Legal notice

Technical specifications and availability subject to change without notice.

Transmittal, reproduction, dissemination and/or editing of this document as well as utilization of its contents and communication thereof to others without express authorization are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.

Issued by:  
Siemens Switzerland Ltd.  
Building Technologies Division  
International Headquarters  
Theilerstrasse 1a  
CH-6300 Zug  
Tel. +41 58 724-2424  
[www.siemens.com/buildingtechnologies](http://www.siemens.com/buildingtechnologies)

Edition: 2017-10-31  
Document ID: A6V10258110\_c\_en\_--

© Siemens Switzerland Ltd, 2009

# Table of contents

<b>1</b>	<b>About this document</b> .....	<b>5</b>
1.1	Applicable documents.....	7
1.2	Download center.....	7
1.3	Technical terms.....	7
1.4	Revision history.....	8
<b>2</b>	<b>Safety</b> .....	<b>9</b>
2.1	Safety instructions.....	9
2.2	Safety regulations for the method of operation.....	11
2.3	Standards and directives complied with.....	13
2.4	Release Notes.....	13
<b>3</b>	<b>Structure and function</b> .....	<b>14</b>
3.1	Overview.....	14
3.1.1	Details for ordering.....	14
3.1.2	Product version ES.....	15
3.2	Setup.....	16
3.2.1	Printed circuit board view.....	17
3.3	Function.....	18
3.3.1	Block diagram.....	18
3.3.2	Diagnosis levels.....	18
3.3.3	Line separator.....	18
3.4	Accessories.....	19
3.4.1	Additional frame AI330.....	19
3.4.2	Micro terminal DBZ1190-AA.....	19
3.4.3	Connection terminal DBZ1190-AB.....	19
<b>4</b>	<b>Planning</b> .....	<b>20</b>
4.1	Compatibility.....	20
4.2	Environmental influences.....	20
<b>5</b>	<b>Mounting / Installation</b> .....	<b>21</b>
5.1	Assembly.....	21
5.2	Additional frame AI330.....	23
5.3	Electrical connection.....	24
<b>6</b>	<b>Commissioning</b> .....	<b>26</b>
<b>7</b>	<b>Maintenance / troubleshooting</b> .....	<b>27</b>
7.1	Performance check.....	27
7.2	Localization mode.....	27
<b>8</b>	<b>Specifications</b> .....	<b>28</b>
8.1	Technical data.....	28
8.2	Dimensions.....	30
8.3	Environmental compatibility and disposal.....	31
	<b>Index</b> .....	<b>32</b>



# 1 About this document

## Goal and purpose

This document contains all necessary information on the FDCAI221 addressable alarm indicator. Following the instructions consistently will ensure that the product can be used safely and without any problems.

## Intended use

The addressable alarm indicator FDCAI221 can only be used in a fire detection system FS20 or FS720.

## Target groups

The information in this document is intended for the following target groups:

Target group	Activity	Qualification
Product Manager	<ul style="list-style-type: none"> <li>Is responsible for information passing between the manufacturer and regional company.</li> <li>Coordinates the flow of information between the individual groups of people involved in a project.</li> </ul>	<ul style="list-style-type: none"> <li>Has obtained suitable specialist training for the function and for the products.</li> <li>Has attended the training courses for Product Managers.</li> </ul>
Project Manager	<ul style="list-style-type: none"> <li>Coordinates the deployment of all persons and resources involved in the project according to schedule.</li> <li>Provides the information required to run the project.</li> </ul>	<ul style="list-style-type: none"> <li>Has obtained suitable specialist training for the function and for the products.</li> <li>Has attended the training courses for Project Managers.</li> </ul>
Project engineer	<ul style="list-style-type: none"> <li>Sets parameters for product depending on specific national and/or customer requirements.</li> <li>Checks operability and approves the product for commissioning at the place of installation.</li> <li>Is responsible for troubleshooting.</li> </ul>	<ul style="list-style-type: none"> <li>Has obtained suitable specialist training for the function and for the products.</li> <li>Has attended the training courses for Product Engineer.</li> </ul>
Installation personnel	<ul style="list-style-type: none"> <li>Assembles and installs the product components at the place of installation.</li> <li>Carries out a performance check following installation.</li> </ul>	<ul style="list-style-type: none"> <li>Has received specialist training in the area of building installation technology or electrical installations.</li> </ul>
Maintenance personnel	<ul style="list-style-type: none"> <li>Carries out all maintenance work.</li> <li>Checks that the products are in perfect working order.</li> <li>Searches for and corrects malfunctions.</li> </ul>	<ul style="list-style-type: none"> <li>Has obtained suitable specialist training for the function and for the products.</li> </ul>

## Document identification

The document ID is structured as follows:

ID code	Examples
ID_ModificationIndex_Language_COUNTRY -- = multilingual or international	A6V10215123_a_de_DE A6V10215123_a_en_-- A6V10315123_a_--_--

## Date format

The date format in the document corresponds to the recommendation of international standard ISO 8601 (format YYYY-MM-DD).

## Conventions for text marking

### Markups

Special markups are shown in this document as follows:

>	Requirement for a behavior instruction
1. 2.	Behavior instruction with at least two operation sequences
–	Version, option, or detailed information for a behavior instruction
⇒	Intermediate result of a behavior instruction
⇒	End result of a behavior instruction
•	Numbered lists and behavior instructions with an operation sequence
[→ X]	Reference to a page number
'Text'	Quotation, reproduced identically
<Key>	Identification of keys
>	Relation sign and for identification between steps in a sequence, e.g., 'Menu bar' > 'Help' > 'Help topics'
↑ Text	Identification of a glossary entry

### Supplementary information and tips



The 'i' symbol identifies supplementary information and tips for an easier way of working.

## 1.1 Applicable documents

Document ID	Title
008331	List of compatibility (for 'Sinteso™' product line)
A6V10229261	List of compatibility (for 'Cerberus™ PRO' product line)
A6V10244934	Data Sheet Addressable alarm indicator FDCAI221
A6V10258105	Installation Adressable alarm indicator FDCAI221, Additional frame AI330

Please also observe the documentation for your fire detection system.

## 1.2 Download center

You can download various types of documents, such as data sheets, installation instructions, and license texts via the following Internet address:

<http://siemens.com/bt/download>

- Enter the document ID in the search field.



You will also find information about search variants and links to mobile applications (apps) for various systems on the home page.

## 1.3 Technical terms

Term	Explanation
ABS	Acrylonitrile-butadiene-styrene (plastic)
FDnet/C-NET	Addressed detector line
LED	Light-emitting diode

## 1.4 Revision history

The reference document's version applies to all languages into which the reference document is translated.



The first edition of a language version or a country variant may, for example, be version 'd' instead of 'a' if the reference document is already this version.

The table below shows this document's revision history:

Modification index	Edition date	Brief description
c	2017-10-31	DBZ1190-AB: Conductor cross-section adapted (0.5...2.5 mm <sup>2</sup> )
b	2016-03-17	<ul style="list-style-type: none"> <li>• Data sheet updated in 'Applicable documents' chapter</li> <li>• Reference to data sheet added in 'Technical data' chapter</li> <li>• Changes in the 'Technical data' chapter</li> <li>• 'Download center' chapter updated</li> <li>• Full editorial revision of document</li> <li>• Change to date format in line with ISO 8601 specifications (yyyy-mm-dd format)</li> </ul>
a	02.2010	First edition



## 2 Safety

### 2.1 Safety instructions

The safety notices must be observed in order to protect people and property.

The safety notices in this document contain the following elements:

- Symbol for danger
- Signal word
- Nature and origin of the danger
- Consequences if the danger occurs
- Measures or prohibitions for danger avoidance

#### Symbol for danger



This is the symbol for danger. It warns of **risks of injury**.  
Follow all measures identified by this symbol to avoid injury or death.

#### Additional danger symbols

These symbols indicate general dangers, the type of danger or possible consequences, measures and prohibitions, examples of which are shown in the following table:



General danger



Explosive atmosphere



Voltage/electric shock



Laser light



Battery



Heat


#### Signal word

The signal word classifies the danger as defined in the following table:

Signal word	Danger level
<b>DANGER</b>	<b>DANGER</b> identifies a dangerous situation, which <b>will result directly in death or serious injury</b> if you do not avoid this situation.
<b>WARNING</b>	<b>WARNING</b> identifies a dangerous situation, which <b>may result in death or serious injury</b> if you do not avoid this situation.
<b>CAUTION</b>	<b>CAUTION</b> identifies a dangerous situation, which could result in <b>slight to moderately serious injury</b> if you do not avoid this situation.
<i>NOTICE</i>	<i>NOTICE</i> identifies possible damage to property that may result from non-observance.


### How risk of injury is presented

Information about the risk of injury is shown as follows:

	<p><b>⚠ WARNING</b></p>
	<p><b>Nature and origin of the danger</b> Consequences if the danger occurs</p> <ul style="list-style-type: none"> <li>• Measures / prohibitions for danger avoidance</li> </ul>

### How possible damage to property is presented

Information about possible damage to property is shown as follows:




	<p><b><i>NOTICE</i></b></p>
	<p><b>Nature and origin of the danger</b> Consequences if the danger occurs</p> <ul style="list-style-type: none"> <li>• Measures / prohibitions for danger avoidance</li> </ul>

## 2.2 Safety regulations for the method of operation

### National standards, regulations and legislation

Siemens products are developed and produced in compliance with the relevant European and international safety standards. Should additional national or local safety standards or legislation concerning the planning, mounting, installation, operation or disposal of the product apply at the place of operation, then these must also be taken into account together with the safety regulations in the product documentation.

### Electrical installations

	<p><b>⚠ WARNING</b></p>
	<p><b>Electrical voltage</b> Electric shock</p> <ul style="list-style-type: none"> <li>• Work on electrical installations may only be carried out by qualified electricians or by instructed persons working under the guidance and supervision of a qualified electrician, in accordance with the electrotechnical regulations.</li> </ul>
<ul style="list-style-type: none"> <li>• Wherever possible disconnect products from the power supply when carrying out commissioning, maintenance or repair work on them.</li> <li>• Lock volt-free areas to prevent them being switched back on again by mistake.</li> <li>• Label the connection terminals with external voltage using a 'DANGER External voltage' sign.</li> <li>• Route mains connections to products separately and fuse them with their own, clearly marked fuse.</li> <li>• Fit an easily accessible disconnecting device in accordance with IEC 60950-1 outside the installation.</li> <li>• Produce earthing as stated in local safety regulations.</li> </ul>	
	<p><b>⚠ CAUTION</b></p>
	<p><b>Noncompliance with the following safety regulations</b> Risk of injury to persons and damage to property</p> <ul style="list-style-type: none"> <li>• Compliance with the following regulations is required.</li> </ul>
	<ul style="list-style-type: none"> <li>• Specialist electrical engineering knowledge is required for installation.</li> <li>• Only an expert is permitted to carry out installation work.</li> </ul> <p>Incorrect installation can take safety devices out of operation unbeknown to a layperson.</p>

### **Mounting, installation, commissioning and maintenance**

- If you require tools such as a ladder, these must be safe and must be intended for the work in hand.
- When starting the fire control panel ensure that unstable conditions cannot arise.
- Ensure that all points listed in the 'Testing the product operability' section below are observed.
- You may only set controls to normal function when the product operability has been completely tested and the system has been handed over to the customer.

### **Testing the product operability**

- Prevent the remote transmission from triggering erroneously.
- If testing building installations or activating devices from third-party companies, you must collaborate with the people appointed.
- The activation of fire control installations for test purposes must not cause injury to anyone or damage to the building installations. The following instructions must be observed:
  - Use the correct potential for activation; this is generally the potential of the building installation.
  - Only check controls up to the interface (relay with blocking option).
  - Make sure that only the controls to be tested are activated.
- Inform people before testing the alarm devices and allow for possible panic responses.
- Inform people about any noise or mist which may be produced.
- Before testing the remote transmission, inform the corresponding alarm and fault signal receiving stations.

### **Modifications to the system design and the products**

Modifications to the system and to individual products may lead to faults, malfunctioning and safety risks. Written confirmation must be obtained from Siemens and the corresponding safety bodies for modifications or additions.

### **Modules and spare parts**

- Components and spare parts must comply with the technical specifications defined by Siemens. Only use products specified or recommended by Siemens.
- Only use fuses with the specified fuse characteristics.
- Wrong battery types and improper battery changing lead to a risk of explosion. Only use the same battery type or an equivalent battery type recommended by Siemens.
- Batteries must be disposed of in an environmentally friendly manner. Observe national guidelines and regulations.

### Disregard of the safety regulations

Before they are delivered, Siemens products are tested to ensure they function correctly when used properly. Siemens disclaims all liability for damage or injuries caused by the incorrect application of the instructions or the disregard of danger warnings contained in the documentation. This applies in particular to the following damage:


- Personal injuries or damage to property caused by improper use and incorrect application
- Personal injuries or damage to property caused by disregarding safety instructions in the documentation or on the product
- Personal injury or damage to property caused by poor maintenance or lack of maintenance


## 2.3 Standards and directives complied with

A list of the standards and directives complied with is available from your Siemens contact.

## 2.4 Release Notes

Limitations to the configuration or use of devices in a fire detection installation with a particular firmware version are possible.

	<b>⚠ WARNING</b>
	<p><b>Limited or non-existent fire detection</b></p> <p>Personal injury and damage to property in the event of a fire.</p> <ul style="list-style-type: none"> <li>• Read the 'Release Notes' before you plan and/or configure a fire detection installation.</li> <li>• Read the 'Release Notes' before you carry out a firmware update to a fire detection installation.</li> </ul>

	<b>NOTICE</b>
	<p><b>Incorrect planning and/or configuration</b></p> <p>Important standards and specifications are not satisfied. Fire detection installation is not accepted for commissioning. Additional expense resulting from necessary new planning and/or configuration.</p> <ul style="list-style-type: none"> <li>• Read the 'Release Notes' before you plan and/or configure a fire detection installation.</li> <li>• Read the 'Release Notes' before you carry out a firmware update to a fire detection installation.</li> </ul>

## 3 Structure and function

### 3.1 Overview

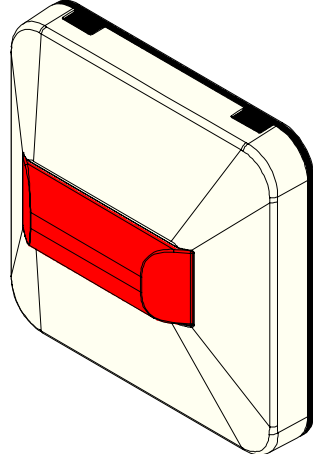


Figure 1: Addressable alarm indicator FDCAI221

#### Addressable alarm indicator FDCAI221

When a fire control panel is appropriately configured, the addressable alarm indicator FDCAI221 provides repeat signals for automatic fire detectors.

When activated the addressable alarm indicator FDCAI221 flashes once per second.



The addressable alarm indicator FDCAI221 must not be used as a substitute for a beacon, sounder base, alarm sounder or other alarm device!

#### Properties

The addressable alarm indicator has the following features:

- Communication and supply via detector line
- Built-in line separator
- Different mounting options

You will find more detailed information in the fire detection system documentation.

#### 3.1.1 Details for ordering

Type	Order number	Designation
FDCAI221	S54370-F10-A1	Addressable alarm indicator

### 3.1.2 Product version ES

The product version ES provides the technical status of a device in terms of software and hardware. The product version is provided as a two-digit number.

You will find the details of your device's product version:

- On the packaging label
- On the product label or the type plate

#### Product version on the packaging label

Details of the product version can be found directly on the packaging label in the barcode:

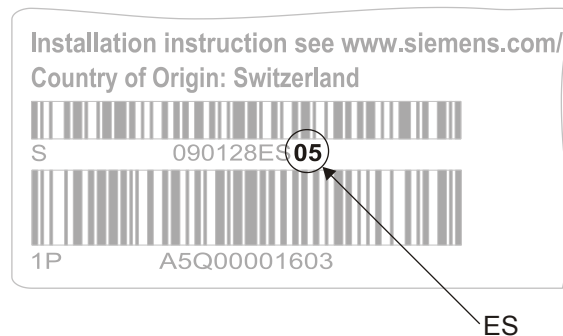


Figure 2: Example of a packaging label with details of the product version

#### Product version on the product label and the type plate

Details of the product version can be found after the device order number:

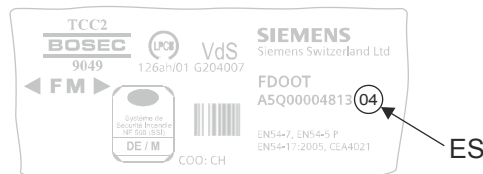


Figure 3: Example of a product label with details of the product version



Depending on the product and various approvals, the product labels may differ in terms of the information type and layout.

Look for your device's order number on the product label.

You will find the product version after the order number.

## 3.2 Setup

The addressable alarm indicator FDCAI221 consists of a base plate, printed circuit board, optical fiber, and cover cap.

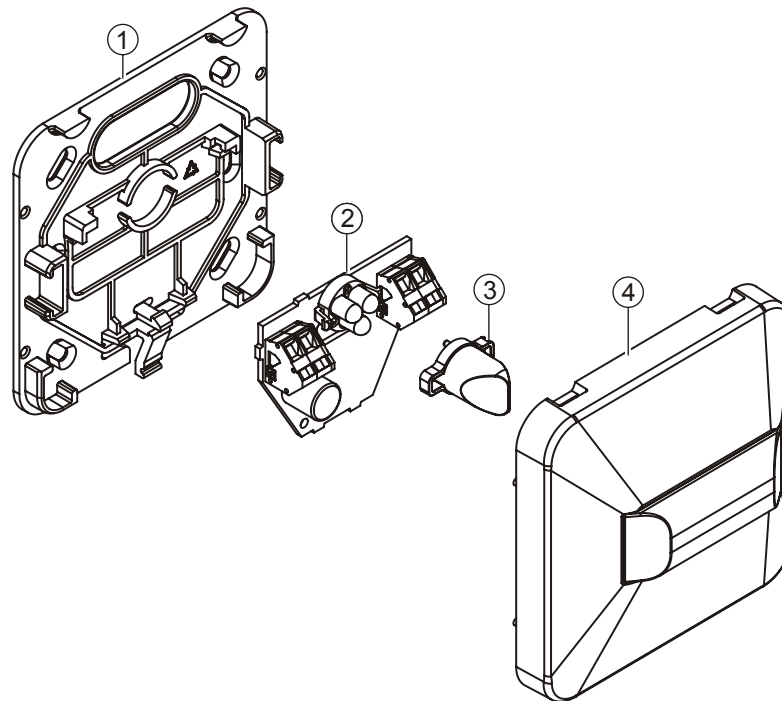


Figure 4: Components of the FDCAI221

1 Base plate  
2 PCB

3 Optical fiber  
4 Cover cap

The addressable alarm indicator FDCAI221 is designed for recess-mounted cable entry as standard.

For surface-mounted cable entry the additional frame AI330 (accessory) must also be mounted.

### See also

📄 Additional frame AI330 [→ 23]



### 3.2.1 Printed circuit board view

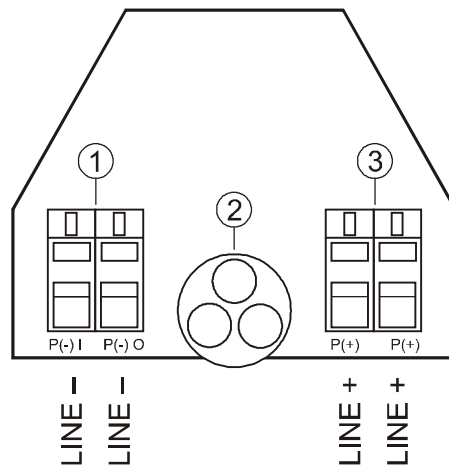


Figure 5: PCB view of addressable alarm indicator FDCAI221

1 Terminal block (LINE -)

3 Terminal block (LINE +)

2 LED

## 3.3 Function

### 3.3.1 Block diagram

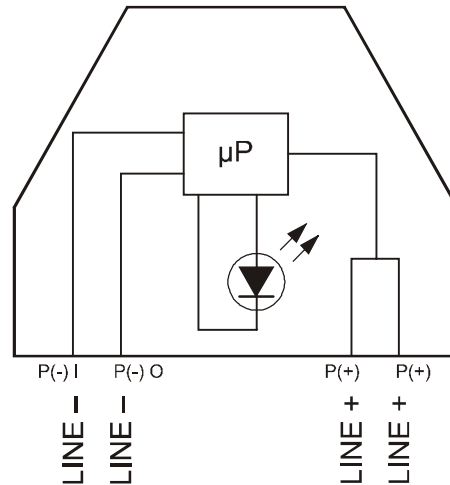


Figure 6: Block diagram of addressable alarm indicator FDCAI221

LINE      Detector line                      μP      Microprocessor

### 3.3.2 Diagnosis levels

The addressable alarm indicator FDCAI221 largely monitors its functions by itself. The following diagnosis levels are taken from the different control measuring processes:

- Normal
- Fault

When a fatal error occurs, which impairs the function of the alarm indicator, a fault message is reported to the control panel.

You will find more detailed information in the fire detection system documentation.


### 3.3.3 Line separator

All FDnet/C-NET devices are equipped with a line separator.

The FDnet/C-NET device is equipped with electronic switches which isolate the defective part in case of a short-circuit on the FDnet/C-NET detector line. The rest of the detector line remains serviceable. On a loop line, all FDnet/C-NET devices remain fully functional after a single short-circuit.

## 3.4 Accessories

### 3.4.1 Additional frame AI330

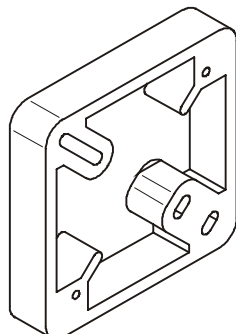


- For wall mounting of external alarm indicators
- For surface-mounted cable entry with cable diameters of max. 10 mm
- Compatible with:
  - External alarm indicators AI322, AI340
  - External alarm indicators DJ1192
  - External alarm indicators FDAI92
  - External alarm indicators AI92C
  - External alarm indicators FDAI92-Ex
  - Addressable alarm indicators FDCAI221
- Order number: BPZ:3169430001

#### See also


📄 Additional frame AI330 [→ 23]

### 3.4.2 Micro terminal DBZ1190-AA

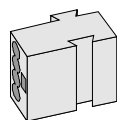

- Auxiliary terminal for connecting cables
- For T-branches of additional cabling e.g. for detector heating units, sounder base, external alarm indicators etc.
- For conductor cross-sections of 0.28...0.5 mm<sup>2</sup>
- 4-pin
- Order number: BPZ:4677080001

### 3.4.3 Connection terminal DBZ1190-AB

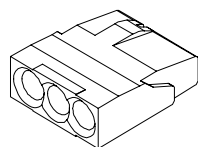

- Auxiliary terminal for connecting cables
- For T-branches of additional cabling, e.g., for cable shielding, detector heating units, sounder base, external alarm indicators, etc.
- For conductor cross-sections of 0.5...2.5 mm<sup>2</sup>
- 3 poles
- Order number: BPZ:4942340001

## 4 Planning

When planning a project, proceed as follows:

1. Take into account the compatibility
2. Define the place of installation

### 4.1 Compatibility

Compatible with control panels that support the FDnet/C-NET detector line.

Detector line	Control panel			
	FC20xx	FC72x	SIGMASYS	AlgoRex
FDnet	X	-	X <sup>(1)</sup>	X <sup>(1)</sup>


X = compatible

- = not compatible

<sup>(1)</sup> = with suitable line card

You will find detailed information in the 'List of compatibility'.

#### See also

 [Applicable documents \[→ 7\]](#)

### 4.2 Environmental influences


If the devices are used in industrial applications, consultation with the project manager is required, since plastics do not withstand certain environmental conditions.

The following factors must be taken into consideration:

- Chemicals
- Temperature
- Moisture

## 5 Mounting / Installation

### 5.1 Assembly

	<p><b>⚠ CAUTION</b></p>
	<p><b>Electrical voltage on lines</b> Risk of injury due to electric shock</p> <ul style="list-style-type: none"> <li>• During mounting and installation work, electrical voltage must not be applied to the lines.</li> </ul>

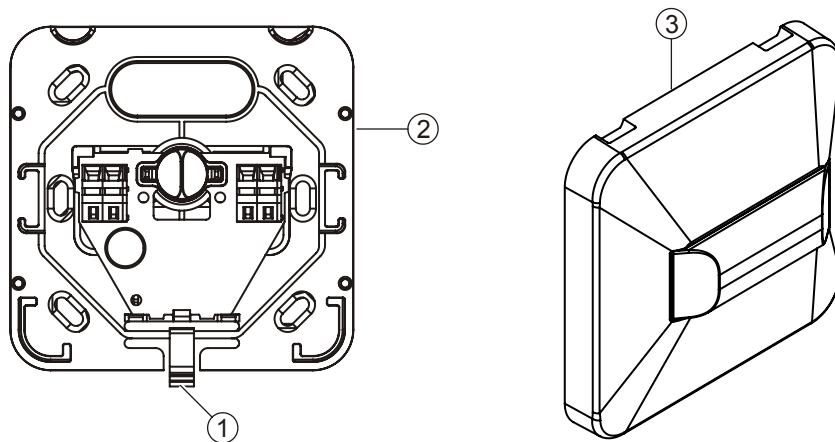


Figure 7: FDCAI221 with cover cap removed

1 Cam

2 Base plate

3 Cover cap

▷ The following description applies to recess-mounted cable entry. For surface-mounted cable entry the alarm indicator must also be mounted on an additional frame AI330 (accessory).

1. Press the black cam (1) on the base plate (2).
2. Remove the cover cap (3).
3. Mount the base plate (2) on a wall or recessed box with 2 ... 4 screws. Screw diameter: max. 3 mm
4. Connect the alarm indicator to the detector line (see section 'Electrical connection').
5. Fit the cover cap (3) on the base plate (2).
6. Snap the cover cap (3) onto the base plate (2).

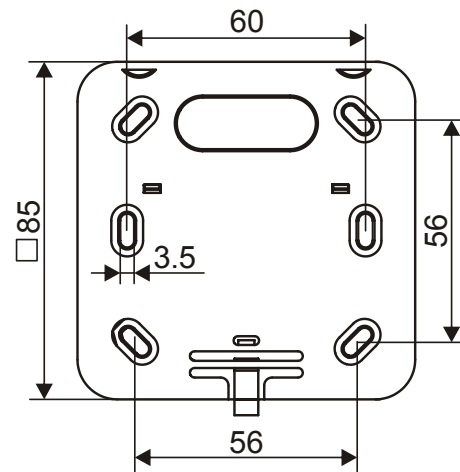


Figure 8: Dimensions of the base plate for the FDCAI221

#### See also

- Additional frame AI330 [→ 23]
- Electrical connection [→ 24]

## 5.2 Additional frame AI330

When installing external alarm indicators, for surface-mounted cable entry an additional frame AI330 must first be mounted on a wall or other flat surface.

Cables with a maximum diameter of 10 mm may be used.

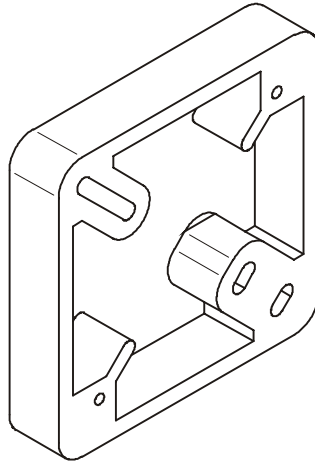


Figure 9: Additional frame AI330

1. Mount the additional frame on the wall with two screws.  
Diameter of the screws: max. 4 mm.
2. Attach the alarm indicator to additional frame AI330 with two wood or sheet-metal screws.  
Screw diameter: max. 3 mm.  
Screw length: max. 16 mm.

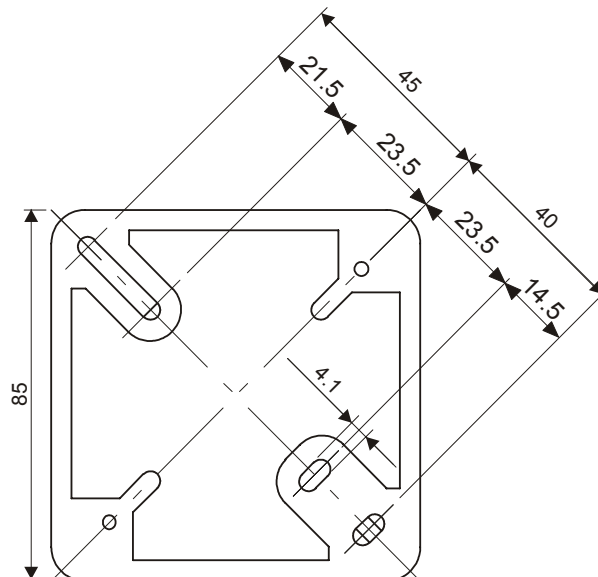


Figure 10: Dimensions of additional frame AI330

### See also

Additional frame AI330 [→ 19]

## 5.3 Electrical connection



- Specialist electrical engineering knowledge is required for installation.
  - Only an expert is permitted to carry out installation work.
- Incorrect installation can take safety devices out of operation unbeknown to a layperson.



Note the positive and negative poles.

Only connect one wire per terminal. This is the only way to ensure the connection is failure-free for the entire service life of the device.

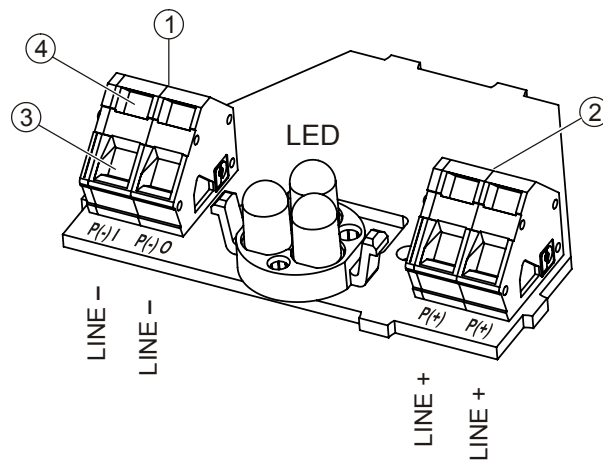


Figure 11: Terminal blocks of the FDCAI221

- |                      |                           |
|----------------------|---------------------------|
| 1 Terminal block (-) | 3 Socket strip            |
| 2 Terminal block (+) | 4 Relief for socket strip |

▷ The following description assumes that the alarm indicator's base plate is already installed.

1. Strip approx. 7...8 mm of insulation from the connection wires.
2. Slide the wires into the socket strip (3) as shown in the connection diagram.
3. To release wires stuck in the spring clips, use a screwdriver or other suitable tool to press down the relief (4) of the socket strip.

If you are using shielded cable, the shielding must be connected with micro terminals DBZ1190-AA or connection terminals DBZ1190-AB (accessories).



### Connection diagram

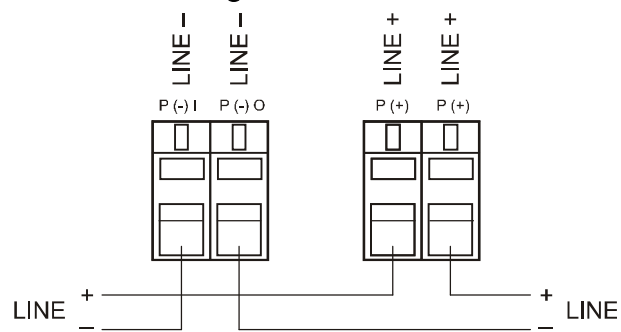


Figure 12: Connection diagram for the FDCAI221

## 6 Commissioning

The devices are commissioned via the control panel. The exact procedure is described in the control panel documentation.

Conduct a performance check once commissioning is complete.

## 7 Maintenance / troubleshooting

### 7.1 Performance check

The devices are automatically subjected to a performance check during the self-test. Nevertheless, it is necessary to check the devices on site at regular intervals.

**Recommendation:**

- Check the devices every year.
- Replace heavily soiled or damaged devices.
- Check cables connected to the terminals and correct connections.

No other special maintenance work is necessary.

### 7.2 Localization mode

For service purposes, the alarm indicators can be switched to localization mode. In this mode the alarm indicator flashes continuously once per second.

## 8 Specifications

### 8.1 Technical data

You will find information on approvals, CE marking, and the relevant EU directives for this device (these devices) in the following document(s); see 'Applicable documents' chapter:

- Document A6V10244934



<b>Detector line</b>	Operating voltage	DC 12...33 V
	Operating current:	
	• Standby	Typ. 250 $\mu$ A
	Connection factor	1
	Address connection factor	1
	Separator connector factor	1
	Protocol	FDnet/C-NET
	System compatibility	See 'List of compatibility'
<b>Line separator</b>	Line voltage:	
	• Nominal	DC 32 V (= $V_{nom}$ )
	• Minimum	DC 12 V (= $V_{min}$ )
	• Maximum	DC 33 V (= $V_{max}$ )
	• Voltage at which the line separator opens:	
	• Minimum	DC 7.5 V (= $V_{SO min}$ )
	• Maximum	DC 10.5 V (= $V_{SO max}$ )
	Permanent current when switches are closed	Max. 1.5 A (= $I_{C max}$ )
	Switching current (e.g., in the event of a short-circuit)	Max. 2 A (= $I_S max$ )
	Leakage current when switches are open	Max. 1 mA (= $I_L max$ )
Serial impedance when switches are closed	Max. 0.4 $\Omega$ (= $Z_C max$ )	

The line separator is closed via an actuation signal from the control panel. Required line voltage: DC 12...33 V (normal range)


<b>Connections</b>	Detector line:	
	• Design	Socket strip

<b>Ambient conditions</b>	Operating temperature:	-10...+55 °C	
	Storage temperature	-30...+70 °C	
	Air humidity	≤95 % rel.	
	Protection category (IEC 60529):		
	• Alarm indicator FDCAI221, wall mounting, recess-mounted cable entry	IP40	
	• Alarm indicator FDCAI221 on additional frame AI330, wall mounting, surface-mounted cable entry	IP40	
	Electromagnetic compatibility at		
	• 1 MHz...2 GHz	50 V/m	
	<b>Mechanical data</b>	Dimensions (W x H x D)	85 x 85 x 32 mm
		Weight	0.049 kg
	Material	ABS	
	Colors:		
	Cover cap	~RAL 9010, pure white	
	Base plate	~RAL 9021 tar black	
<b>Standards</b>	European standards	<ul style="list-style-type: none"> <li>• EN 54-17</li> <li>• EN 54-18</li> </ul>	

## 8.2 Dimensions

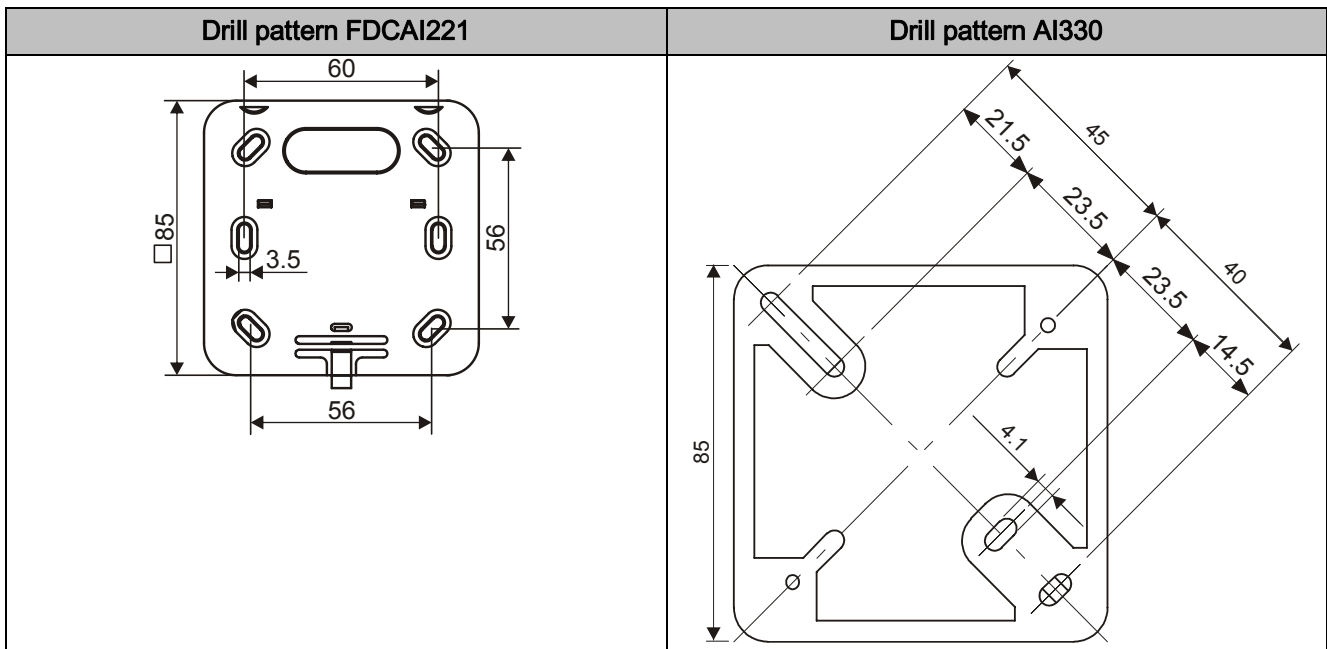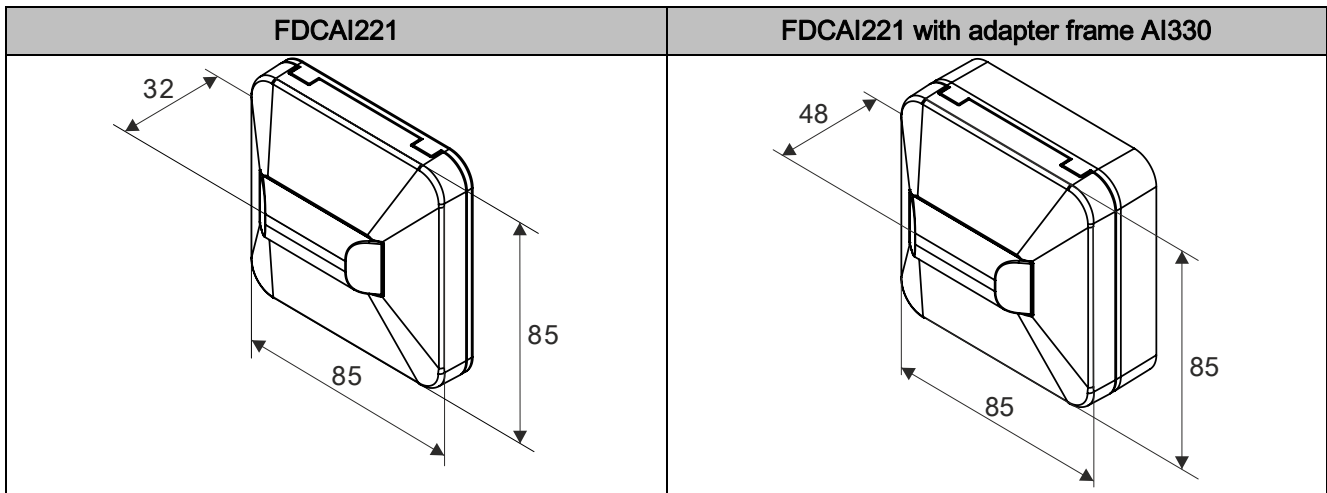

## 8.3 Environmental compatibility and disposal

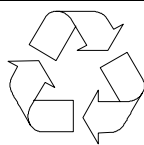

This equipment is manufactured using materials and procedures which comply with current environmental protection standards as best as possible. More specifically, the following measures have been undertaken:

- Use of reusable materials
- Use of halogen-free plastics
- Electronic parts and synthetic materials can be separated

Larger plastic parts are labeled according to ISO 11469 and ISO 1043. The plastics can be separated and recycled on this basis.



The device is considered an electronic device for disposal in accordance with the European Guidelines and may not be disposed of as domestic garbage.

- Dispose of the device through channels provided for this purpose.
- Comply with all local and currently applicable laws and regulations.

# Index

<b>A</b>	
Application area	
Ambient conditions .....	20
Approvals.....	28
<b>C</b>	
CE marking .....	28
Compatibility.....	20
Compatibility with control panels .....	20
Control panel.....	26
<b>D</b>	
Dimensions .....	30
AI330.....	30
FDCAI221.....	30
Disposal.....	31
Documentation for fire detection system .....	7
Download center	
URL.....	7
Drill pattern	
AI330.....	30
FDCAI221.....	30
<b>E</b>	
Environmental compatibility .....	31
Environmental influences .....	20
<b>ES</b>	
Product version.....	15
EU directives .....	28
<b>I</b>	
Impact	
Chemicals .....	20
Moisture .....	20
Temperature.....	20
Intended use .....	5
<b>L</b>	
Line separator	
Function .....	18
List of compatibility.....	7, 20
<b>M</b>	
Maintenance intervals.....	27
<b>P</b>	
Packaging label	
Product version.....	15
Product label	
Product version.....	15
<b>R</b>	
Recycling.....	31
<b>S</b>	
Short-circuit	
Line separator .....	18
Standards .....	29
<b>T</b>	
Type plate	
Product version.....	15





Issued by  
Siemens Switzerland Ltd  
Building Technologies Division  
International Headquarters  
Theilerstrasse 1a  
CH-6300 Zug  
+41 58 724 2424  
[www.siemens.com/buildingtechnologies](http://www.siemens.com/buildingtechnologies)

© Siemens Switzerland Ltd, 2009  
Technical specifications and availability subject to change without notice.