


**RWD82 Universal Controller**

Room temperature control  
Two stage electric heating

**Application 21  
Remote set point**

- Control 2 stage digital
- Room temperature control
- Two stage ON / OFF electrical heating
- Remote set point adjustment
- Optional day / night set point adjustment .

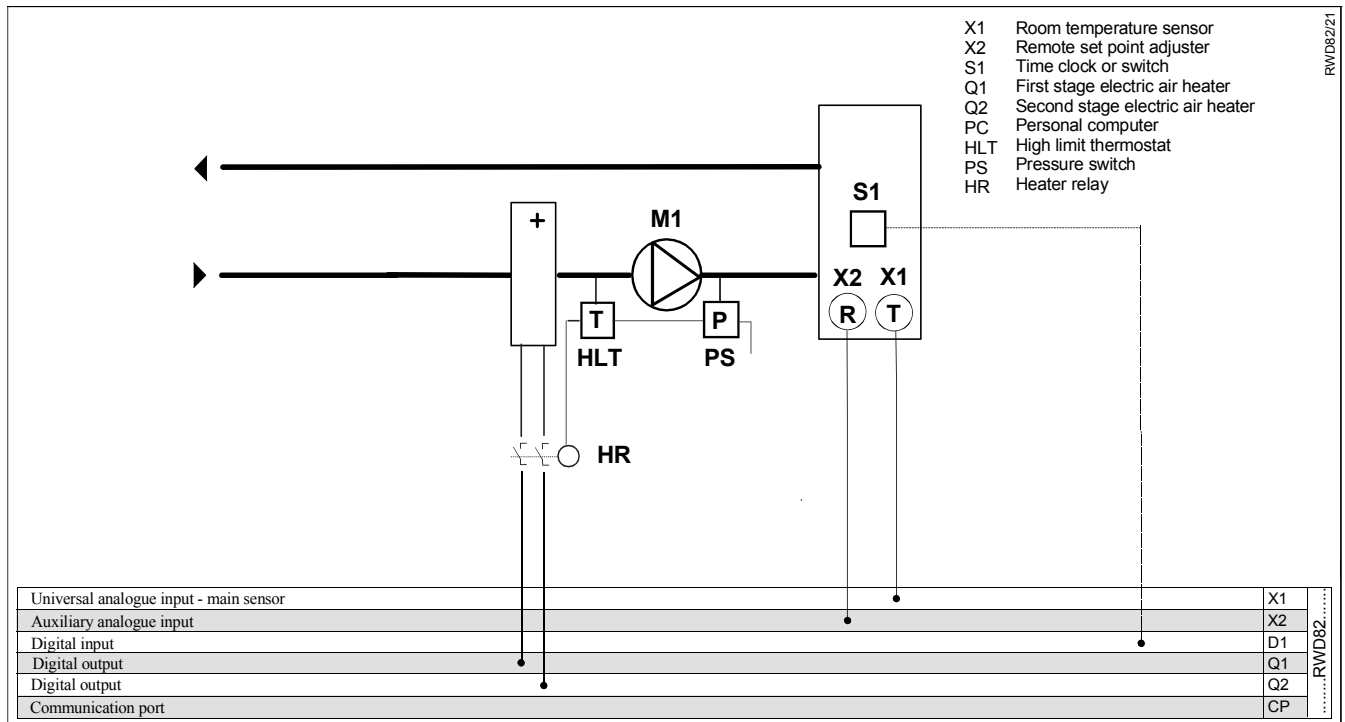

**Supplemental features**

**Control**

- Room temperature sensor can be selected as Ni1000, Pt1000, or active sensor.
- Adjustable differential of digital output Q1.
- Adjustable set point of Q1.
- Adjustable differential of digital output Q2.
- Adjustable set point of Q2.
- 24Vac controller supply voltage
- Remote set point adjustment via auxiliary analogue input X2.

**Operating modes**

- Day / night set points can be selected via time clock or switch.
- Independent mode for the two heating outputs.

**Safety functions**


- A high limit manual reset thermostat is mounted downstream of the air electric heater, and de-energises the heater on excessive duct temperatures. This thermostat has to be manually reset following detection of overheating. It is often supplied by the supplier of the electric heater.
- A pressure switch is also specified to detect loss of static pressure in the duct, indicating loss of fan. This also de-energises the electric heater but it is auto reset and allows electric heater function following the detection of fan operation. These safety units can be connected directly in series with small electric heaters, but for larger electric heaters they are connected to a heater contactor switching the electric heater.

**Description of operation**


The temperature sensor senses the room conditions and on a fall in temperature the RWD82 via Q1 digital output energises stage 1 of the electric heater. On a further fall in temperature, Q2 digital output energises stage 2 of the electric heater. The remote set point adjuster is connected to X2 and adjusts the day set point for Q1 output. Q2 set point is adjusted by XDZ that sets the dead zone between Q1 and Q2 set points. The night set points are set on the controller.

**Function diagram**

Heating sequences

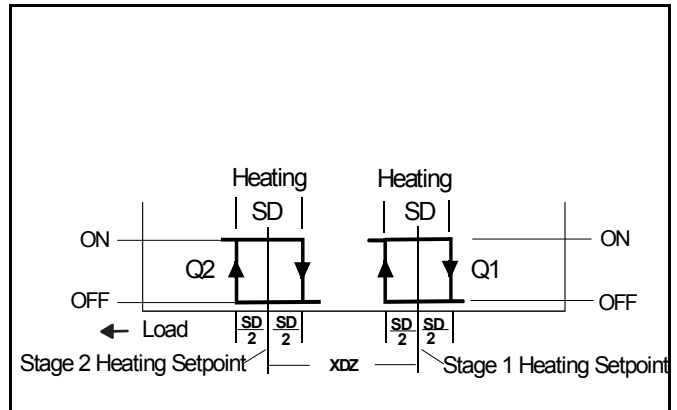

**Connection diagram**

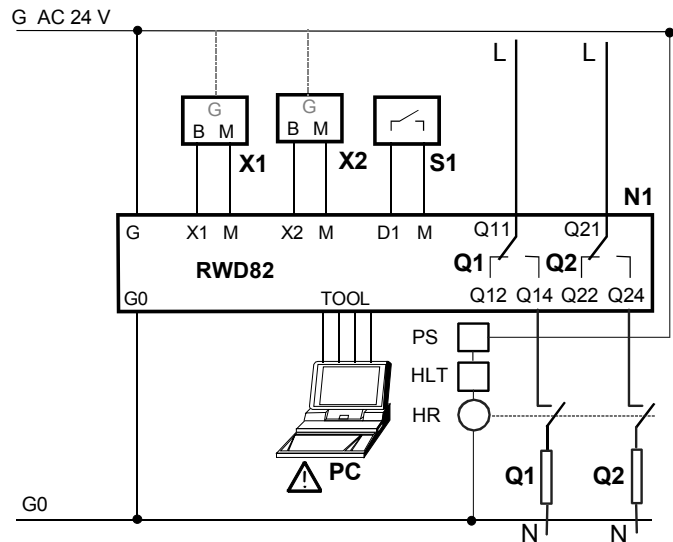

**RWD82**

- N1 RWD82 controllers
- X1 Main temperature sensor
- X2 Remote set point adjuster
- S1 Time clock or switch
- Q1 Stage 1 electric heater
- Q2 Stage 2 electric heater
- PS Pressure switch
- HLT High limit thermostat
- HR Heater relay
- PC Personal computer

**Main Display**

The main display shows ,

- a) Whether Q1 is On or Off (  = off,  = on )
- b) Whether Q2 is On or Off (  = off,  = on )
- c) Whether day or night set point is selected. (☐ = day, ☐ = night)
- d) X1 value ( room temperature) in ° C.
- e) Auxiliary application selected ( REM for remote set point adjustment )

Other displays are available by pressing the + button, and the various displays are listed below in sequence from the main display.

On entering any of the four set point displays, the setpoint on display can be adjusted by pushing the ● enter/save button, increase value by pressing the ▲+ button or decrease the value by pressing the ▼- button, and when the required value is reached, press the ●enter/save button to save the new value.

The alternative displays return to the main display after 20 seconds duration.

Press buttons	Action	Current display	Selected display	Selected display comments
▲	Push + button	REM Q1 Q2 ☐ X1	Q1 SP – h ☐ 16.0c	Q1 - heating night set point.
▲	Push + button	Q1 SP – h ☐ 16.0c	Q2 SP – h ☐ 16.0c	Q2 - heating night set point.
▲	Push + button	Q2 SP – h ☐ 16.0c	REM Q2 XDZ ☐ -3c	XDZ to set Q2 day set point
▲	Push + button	REM Q2 XDZ ☐ -3c	X1 18.0c	X1 - main temperature sensor reading
▲	Push + button	X1 18.0c	X2SP 21.0c	X2 - actual remote set point setting (Q1 day set point)
▲	Push + button	X2SP 21.0c	Q1 ON	Q1 – heating digital output, display on or off.
▲	Push + button	Q1 ON	Q2 ON	Q2 – heating digital output, display on or off.
▲	Push + button	Q2 ON	REM ☐ ☐ 21	Control sequence diagram and application number display.
▲	Push + button	REM ☐ ☐ 21	REM Q1 Q2 ☐ X1	Back to main display

Values shown are either default values or nominated for information only